



IP Office™ Platform 9.1

IP Office DECT R4 Installation

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

For full support, please see the complete document, Avaya Support Notices for Hardware Documentation, document number 03–600759.

For full support, please see the complete document, Avaya Support Notices for Software Documentation, document number 03–600758.

To locate this document on our website, simply go to <http://www.avaya.com/support> and search for the document number in the search box.

Documentation disclaimer

“Documentation” means information published by Avaya in varying mediums which may include product information, operating instructions and performance specifications that Avaya generally makes available to users of its products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of documentation unless such modifications, additions, or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on its hardware and Software (“Product(s)”). Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this Product while under warranty is available to Avaya customers and other parties through the Avaya Support website: <http://support.avaya.com>. Please note that if you acquired the Product(s) from an authorized Avaya Channel Partner outside of the United States and Canada, the warranty is provided to you by said Avaya Channel Partner and not by Avaya. “Software” means computer programs in object code, provided by Avaya or an Avaya Channel Partner, whether as stand-alone products or pre-installed on hardware products, and any upgrades, updates, bug fixes, or modified versions.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO](http://SUPPORT.AVAYA.COM/LICENSEINFO) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED AVAYA CHANNEL PARTNER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS “YOU” AND “END USER”), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE (“AVAYA”).

Avaya grants you a license within the scope of the license types described below, with the exception of Heritage Nortel Software, for which the scope of the license is detailed below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to you. “Designated Processor” means a single stand-alone computing device. “Server” means a Designated Processor that hosts a software application to be accessed by multiple users.

License type(s)

Designated System(s) License (DS). End User may install and use each copy of the Software only on a number of Designated Processors up to the number indicated in the order. Avaya may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Concurrent User License (CU). End User may install and use the Software on multiple Designated Processors or one or more Servers, so long as only the licensed number of Units are accessing and using the Software at any given time. A “Unit” means the unit on which Avaya, at its sole discretion, bases the pricing of its licenses and can be, without limitation, an agent, port or user, an e-mail or voice mail account in the name of a person or corporate function (e.g., webmaster or helpdesk), or a directory entry in the administrative database utilized by the Software that permits one user to interface with the Software. Units may be linked to a specific, identified Server.

Database License (DL). End User may install and use each copy of the Software on one Server or on multiple Servers provided that each of the Servers on which the Software is installed communicates with no more than a single instance of the same database.

CPU License (CP). End User may install and use each copy of the Software on a number of Servers up to the number indicated in the order provided that the performance capacity of the Server(s) does not exceed the performance capacity specified for the Software. End User may not reinstall or operate the Software on Server(s) with a larger performance capacity without Avaya's prior consent and payment of an upgrade fee.

Named User License (NU). You may: (i) install and use the Software on a single Designated Processor or Server per authorized Named User (defined below); or (ii) install and use the Software on a Server so long as only authorized Named Users access and use the Software. "Named User", means a user or device that has been expressly authorized by Avaya to access and use the Software. At Avaya's sole discretion, a "Named User" may be, without limitation, designated by name, corporate function (e.g., webmaster or helpdesk), an e-mail or voice mail account in the name of a person or corporate function, or a directory entry in the administrative database utilized by the Software that permits one user to interface with the Software.

Shrinkwrap License (SR). You may install and use the Software in accordance with the terms and conditions of the applicable license agreements, such as "shrinkwrap" or "clickthrough" license accompanying or applicable to the Software ("Shrinkwrap License").

Heritage Nortel Software

"Heritage Nortel Software" means the software that was acquired by Avaya as part of its purchase of the Nortel Enterprise Solutions Business in December 2009. The Heritage Nortel Software currently available for license from Avaya is the software contained within the list of Heritage Nortel Products located at <http://support.avaya.com/LicenseInfo> under the link "Heritage Nortel Products". For Heritage Nortel Software, Avaya grants Customer a license to use Heritage Nortel Software provided hereunder solely to the extent of the authorized activation or authorized usage level, solely for the purpose specified in the Documentation, and solely as embedded in, for execution on, or (in the event the applicable Documentation permits installation on non-Avaya equipment) for communication with Avaya equipment. Charges for Heritage Nortel Software may be based on extent of activation or use authorized as specified in an order or invoice.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, or hardware provided by Avaya. All content on this site, the documentation and the Product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

Each vAppliance will have its own ordering code. Note that each instance of a vAppliance must be separately ordered. If the end user customer or Avaya channel partner would like to install two of the same type of vAppliances, then two vAppliances of that type must be ordered.

Each Product has its own ordering code. Note that each instance of a Product must be separately licensed and ordered. "Instance" means one unique copy of the Software. For example, if the end user customer or Avaya channel partner would like to install two instances of the same type of Products, then two Products of that type must be ordered.

Third Party Components

"Third Party Components" mean certain software programs or portions thereof included in the Software that may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the Documentation or on Avaya's website at: <http://support.avaya.com/Copyright>. You agree to the Third Party Terms for any such Third Party Components.

Note to Service Provider

The Product may use Third Party Components that have Third Party Terms that do not allow hosting and may need to be independently licensed for such purpose.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If you suspect that you are being victimized by Toll Fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support website: <http://support.avaya.com>. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation and Product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation and Product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: <http://support.avaya.com>.

Contact Avaya Support

See the Avaya Support website: <http://support.avaya.com> for product notices and articles, or to report a problem with your Avaya product. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: <http://support.avaya.com>, scroll to the bottom of the page, and select Contact Avaya Support.

Contents

1. DECT R4

1.1 Changes in IP Office Release 9.1.....	11
1.2 Base Stations.....	12
1.2.1 Base Station Status Lamps.....	15
1.2.2 Reset /Restart Switch.....	17
1.3 Aerials	18
1.4 IP DECT Gateway.....	19
1.4.1 IP DECT Gateway Status Lamps.....	20
1.5 Phones	21
1.5.1 3720.....	21
1.5.2 3725.....	22
1.5.3 3740.....	23
1.5.4 3749.....	24
1.6 Chargers	25
1.7 AIWS	26
1.7.1 AIWS2.....	27
1.7.2 AIWS1.....	30

2. Site Survey and Planning

2.1 Factors to Consider.....	33
2.2 Handover	34
2.3 Base Station Synchronization.....	35
2.4 Performing a Survey.....	36

3. Provisioned Installation

3.1 DECT Software.....	42
3.2 IP Office Configuration.....	43
3.2.1 Security Settings.....	44
3.2.2 IP DECT Line Setup.....	46
3.2.3 Adding Licenses.....	48
3.2.4 Manually Creating Extensions.....	50
3.2.5 Controlling the DECT Frequency.....	51
3.3 Master Base Station Setup.....	52
3.3.1 Defaulting the Base Station.....	53
3.3.2 Determining the Base Station IP Address.....	53
3.3.3 Access the Base Station Configuration.....	54
3.3.4 Set the Base Station IP Address.....	55
3.3.5 Configuring VLAN Settings.....	56
3.3.6 Update the Base Station Software.....	58
3.3.7 Show/Hide Advanced Options.....	60
3.3.8 Select Master Mode.....	61
3.3.9 Set the DECT Password.....	62
3.3.10 Select IP Office Mode.....	63
3.3.11 Set the Time Zone.....	64
3.3.12 Enable Provisioning.....	65
3.3.13 Enabling HTTPS and Security Certificates in the Web Interface.....	66
3.3.14 Enabling HTTPS and Security Certificates in IP Office Manager.....	67
3.3.15 Registering the Radio Settings.....	69
3.3.16 Phonebook Integration.....	70
3.3.17 Advanced Options.....	71
3.4 IP Slave Base Station Setup.....	73
3.4.1 Defaulting the Base Station.....	74
3.4.2 Determining the Base Station IP Address.....	74
3.4.3 Access the Base Station Configuration.....	75

3.4.4 Set the Base Station IP Address.....	76
3.4.5 Update the Base Station Software.....	77
3.4.6 Register the Slave Base Station.....	79
3.5 Base Station Mounting.....	80
3.6 Phone Subscription.....	82
3.6.1 Enabling IP Office Subscription.....	83
3.6.2 Manually Creating Extensions.....	84
3.6.3 Enabling DECT Subscription.....	85
3.6.4 Subscribing a Phone.....	86
3.6.5 Upgrading Phones.....	89
3.6.6 Disabling IP Office Subscription.....	95
3.6.7 Displaying Subscribed Users.....	96
3.6.8 Unsubscribing Phones.....	97

4. DECT Resilience

4.1 Configuring Base Station Mirroring.....	101
4.1.1 Configuring the IP Office.....	101
4.1.2 Configuring the Mirrored Base Stations.....	102
4.1.3 Activating the Master Base Station.....	103
4.2 Configuring Switch Resilience	104
4.2.1 Provisioned Base Station Configuration.....	105
4.2.2 Non-Provisioned Base Station Configuration...	106
4.2.3 IP Office Configuration for Switch Resilience...	107
4.3 Viewing and Controlling Resilience.....	109

5. IP DECT Gateway Installation

5.1 Digital Base Station Power Consumption.....	113
5.2 Installing the Digital Base Stations	114

6. IP Office User Features

6.1 Status Indicators.....	118
6.2 Call Services.....	119
6.3 In Call Options.....	121
6.4 Call Waiting Options.....	122

7. Device Management

7.1 Starting AIWS Device Manager.....	125
7.2 Load Parameter Definition Files.....	126
7.3 Loading Phone Templates into Device Manager.....	128
7.4 Applying Templates to Phones.....	130
7.5 Editing Templates.....	132
7.6 Uploading a Language File.....	134
7.7 Upgrading Phone Software.....	135
7.7.1 Installing Windows Device Manager.....	137
7.7.2 Starting Windows Device Manager.....	139

8. AIWS Installation

8.1 AIWS2 Installation.....	142
8.1.1 Browse to the AIWS2.....	142
8.1.2 Run the Setup Wizard.....	143
8.1.3 Enable Base Station/AIWS Connection.....	148
8.1.4 Upgrade the AIWS Firmware.....	149
8.1.5 AIWS2 Status Lamps.....	154
8.2 AIWS1 Installation.....	154
8.2.1 Removing the AIWS Cover.....	156
8.2.2 Connect the RTC Battery.....	157
8.2.3 Cable Connections.....	157
8.2.4 Browse the AIWS.....	158
8.2.5 Run the Setup Wizard.....	159

8.2.6 Enable Base Station/AIWS Connection.....	164
8.2.7 Upgrade the AIWS Firmware.....	165
8.2.8 Switching Off the AIWS.....	170
8.2.9 Wall Mount the AIWS.....	170
8.2.10 Replace the AIWS Cover.....	171
8.2.11 AIWS Status Lamp.....	171
8.2.12 Image Installation Mode.....	171

9. Miscellaneous

9.1 Reset /Restart Switch.....	174
9.2 Base Station Status Lamps.....	175
9.3 IP DECT Gateway Status Lamps.....	177
9.4 AIWS2 Status Lamps.....	178
9.5 AIWS1 Status Lamp.....	179

10. Non-Provisioned Installation

10.1 DECT Software.....	184
10.2 Security Settings.....	185
10.3 Adding Licenses.....	186
10.3.1 Checking the Licensing Number.....	186
10.3.2 Adding Licenses.....	186
10.3.3 Reserving Licenses.....	187
10.4 IP DECT Line Setup.....	188
10.5 Master Base Station Configuration.....	190
10.5.1 Default the Base Station.....	192
10.5.2 Access the Base Station's Configuration.....	193
10.5.3 Update the Base Station Firmware.....	194
10.5.4 Set the Base Station IP Address.....	196
10.5.5 Configuring VLAN Settings.....	197
10.5.6 Set the Time Source.....	198
10.5.7 QoS/ToS Settings.....	199
10.5.8 Set the Base Station as the Master.....	199
10.5.9 Enable Supplementary Services.....	201
10.5.10 Set the PBX Switch Mode.....	201
10.5.11 IP Trunk Configuration.....	202
10.5.12 Enter the Radio Settings.....	203
10.5.13 Enter the PARI.....	204
10.5.14 Enter the SARI/PARK.....	204
10.5.15 Configuring Air Sync.....	205
10.5.16 IP Office Directory Integration.....	206
10.5.17 Reset the Base Station.....	207
10.5.18 Check the Base Station.....	207
10.6 IP Slave Base Station Configuration.....	209
10.6.1 Default the Base Station.....	211
10.6.2 Access the Base Station's Configuration.....	212
10.6.3 Update the Base Station Firmware.....	213
10.6.4 Set the Base Station IP Address.....	215
10.6.5 Set the Base Station to Slave Mode.....	216
10.6.6 Reset the Base Station.....	217
10.6.7 Check the Base Stations.....	218
10.7 Base Station Mounting.....	219
10.8 Phone Subscription.....	221
10.8.1 Allow Subscription.....	222
10.8.2 Create User Entries.....	224
10.8.3 Enabling DECT Subscription.....	226
10.8.4 Phone Subscription.....	227
10.8.5 Completing Anonymous Login.....	229
10.8.6 Disable Subscription.....	230

11. Glossary

12. Document History

Index	237
-------------	-----


Chapter 1.

DECT R4

1. DECT R4

Avaya DECT R4 is a DECT system where multiple base stations are connected using an IP LAN. For IP Office, DECT R4 is supported with IP Office Release 5 and higher on non-IP Office Basic Edition systems. This installation manual covers the installation of DECT R4 systems using the firmware supported by IP Office Release 9.1.

This manual is just a basic manual covering the most common install scenarios for DECT R4 with an IP Office system. For more advanced options and complex install scenarios, refer to the full set of Avaya DECT R4 manual.

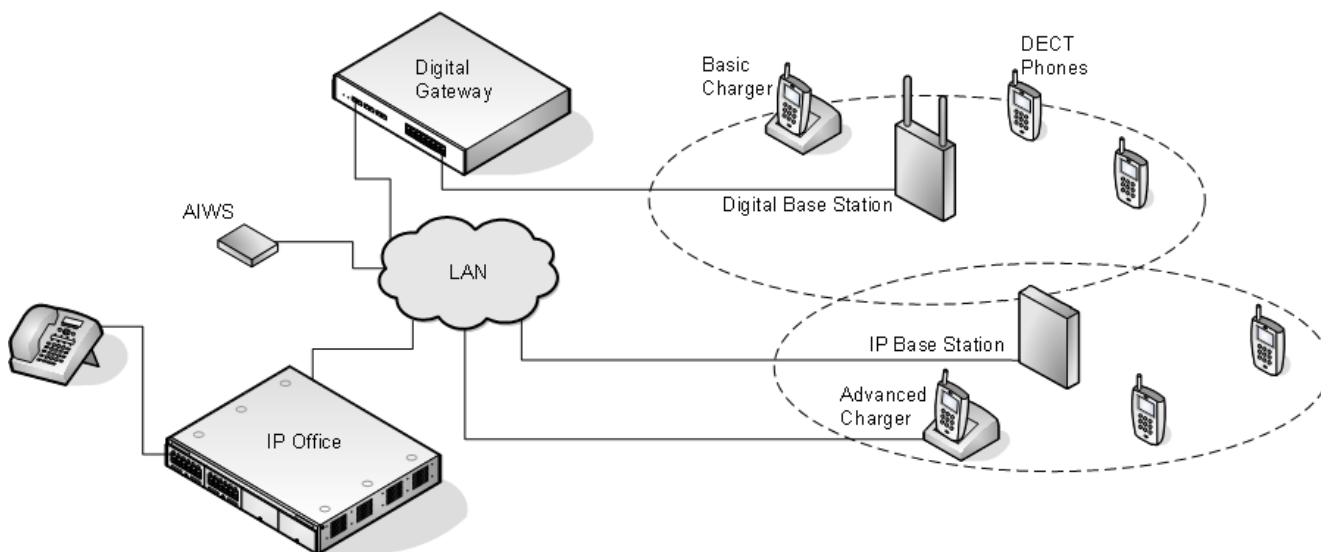

- **IP DECT Base Station (IPBS)** ¹²

Up to 128 base stations (1 master + 127 slaves) are supported. During installation one is configured as the master base station, to which the other base stations synchronize as slave base stations.

 - **IP Base Stations**

These base stations connect to the IP Office system over the IP LAN. Each IP base station can host up to 8 simultaneous phone conversations in its coverage area.
 - **Compact IP Base Stations**

Compact Base Stations can be used in place of standard IP base stations. This type of base station only supports 4 simultaneous calls. Up to 5 Compact Base Station units can be included in a system. If used as the master base station, the whole system is limited to 5 base stations.
 - **Digital Base Stations**

These base stations are similar to IP Base Stations but use traditional 4-wire telephone cabling to connect to a IP DECT Gateway unit which connects to the IP Office using the IP LAN. Each digital IP base station can host up to 8 simultaneous phone conversations in its coverage area. There is not digital equivalent of a compact base station.
- **IP DECT Gateway (IPBL)** ¹⁹

This type of unit act as the interface between the IP Office system and any digital base stations. When using IP DECT Gateway units, it is recommended that one of those units is set as the master base station. Each IP DECT Gateway, up to 8, supports up to 16 digital base stations.
- **Phones** ²¹

Up to 384 DECT phones are supported with an IP500 V2 server, 400 on a Linux based IP Office server. The Avaya 3700 Series phones supported are the **3720, 3725, 3740** and **3749**. Other DECT phones, including the 3701 and 3711, are supported but only for basic telephony and only using the DECT GAP and DECT CAP standards.
- **Chargers** ²⁵

A number of different types of charger exist for 3700 Series phones. Note that chargers for 3720/3725 phones are not necessarily useable with 3740/3749 phones. Some are advanced chargers which allow the docked phone to be configured or upgraded using the Device Manager application.
- **IP Office**

DECT R4 is supported on IP Office systems running IP Office 5.0+ software. This manual is for systems running IP Office Release 9.1 in IP Office modes other than IP Office Basic Edition.

 - **Licenses**

Each DECT phone subscribed via the DECT R4 systems requires an Avaya IP Endpoint license in the IP Office configuration.
 - **Configuration Tools**

The tools and applications for DECT R4 are included as part of the IP Office Manager application installation. This includes the appropriate firmware for operation with the IP Office system.

- [Avaya In-Building Wireless Server \(AIWS\)](#) ²⁶

This unit allows SMS messaging between handsets. It also allows wireless software upgrades and configuration of the handsets (without an AIWS, handsets can only be upgraded and configured when in an advanced charger). For IP Office Release 5, this unit provides directory integration between the IP Office and the DECT R4 system. For IP Office Release 6, directory integration can be done by the master base station but without SMS support. If both SMS and directory integration are required then an AIWS unit must be used.

1.1 Changes in IP Office Release 9.1

The following major changes have been made in the IP Office Release 9.1 support for DECT R4:

- **Security Changes**

For new systems and systems with defaulted security settings, the security service user used for the provisioning connection between the IP Office and the DECT master base station is disabled by default. The service user must be enabled and their password changed. The same user name and password must be matched in the DECT system's provisioning configuration.

- **Master Base Station Mirroring:** 

It is now possible to configure two base stations to act as 'mirrored' master base stations. One becomes the active master base station whilst the other becomes a standby master base station. If for any reason the active master base station becomes unavailable, the IP Office switches to using the standby master base station to continue DECT operation. Mirroring is not supported between compact and non-compact base stations. However, it is supported between a IP DECT Gateway and non-compact base station.

- **IP Office Switch Resilience:** 

The IP Office controlling the DECT system can be configured to allow that control to be automatically passed to another IP Office system when it is not available. The SCN line between the two systems can be configured to allow DECT backup for resiliency scenarios in the same was as existing resiliency for H.323 IP telephones. If for any reason the primary IP Office system becomes unavailable, DECT control and users are switched to the backup IP Office system.

- Currently this feature is only supported on IP Office lines with the **Transport** option set to **Proprietary**.

- **Display of Calling Party Name in the Call Log:**

Previously, whilst name and number were shown for alerting and connected calls, only the number appeared in the call log display. Now for 3720, 3725, 3740 and 3749 phones, the call log shows the calling parties name.

- **CTI Auto-Answer with IP Office Applications:**

Previously, when using an application such as one-X Portal for IP Office to make and answer calls, the user also had to answer and drop connections using the phone. Now for 3720, 3725, 3740 and 3749 phones, the CTI application can automatically connect and end the call. For example:

- When making an outgoing call using the portal, the DECT phone is immediately connected to the call and hears the call progress. Previously the user had to answer a call from the system before it then made the outgoing call.
- When answering a call using the portal, the DECT phone is connected without needing any user action.
- Parking or holding a call using the portal now immediately disconnects the call from the phone, returning it to idle. Similarly retrieving the parked or held call connects it immediately.

- Known limitations:

- Only applies to call handling through the CTI application. For example the phones still cannot be paged.
- When the phone is placed in a desktop charger it is recommended to manually set answering mode to Loudspeaking as this cannot be controlled by IP Office.
- Audio is not automatically redirected to paired Bluetooth headset, it needs to be triggered from the headset itself; this is also dependent on the Bluetooth headset model

- **IP DECT Line Addition No Longer Requires a Reboot**

Adding or deleting the DECT line in the IP Office configuration no longer requires an IP Office system reboot. Note however that changes to an existing DECT line may require a reboot.

1.2 Base Stations

DECT R4 supports several base station variants. They differ in aerial connection, the number of simultaneous calls supported and how they connect to the DECT system. Normally, during installation, one of the base stations is configured as the master base station for the whole DECT R4 system. Any other base stations are then configured as slave base stations.

The availability of particular base stations variants depends on the country of operation.

Base Station Types

The following types of base station are available for use in a DECT R4 system. They are available as IP and or digital versions. Each base station includes a detachable bracket for wall mounting or column mounting of the base station. The bracket allows the base station to be removed for maintenance. The same brackets are used for all types of base station, therefore also allowing for quick interchange of base stations.


- **Internal Aerial Base Stations**

These base stations have two integral internal aerials which cannot be adjusted. The aerials produce a directional pattern of radio coverage. The base station supports up to eight simultaneous calls. This type of base station is available in both IP (IPBS1 and IPBS2) base station and digital base station versions.



IPBS1

IPBS2

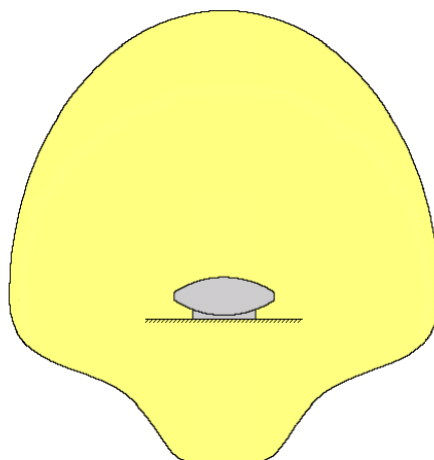

- **Compact Base Station**


This type of base station is physically similar to other base stations with internal aerials above, but only supports four simultaneous calls. Up to 5 Compact Base Station units can be included in a system. If used as the master base station, the whole system is limited to five base stations. Compact Base Station are only supported if all the other base stations are running firmware version 3.3.11 or later.

- **External Aerial Base Stations**

These base stations have two external aerials. These aerials produce an even pattern of radio coverage. The base station supports up to eight simultaneous calls. The aerials can be disconnected and replaced by a various other [types of aerials](#)¹⁸ if different radio coverage patterns and range is required. This type of base station is not supported in North America. This type of base station is available in both IP (IPBS1 and IPBS2) base station and digital base station versions. Note that the placement of the aerial connectors differs between IPBS1 and IPBS2 versions.




IPBS1

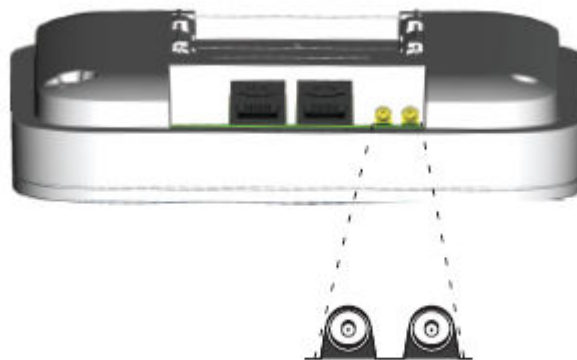

MCX connectors

IPBS2

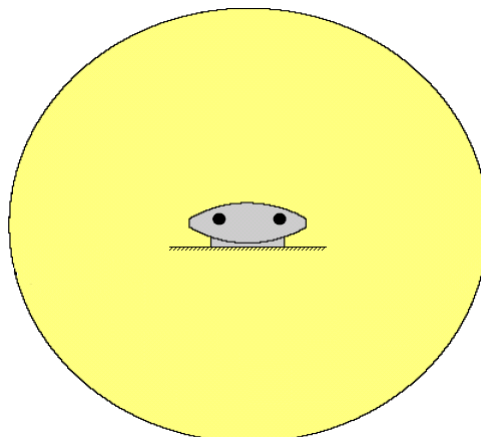

IP Base Stations

IP base stations are supplied with a mounting bracket and a 1.2 metre (4 foot) LAN cable. The base station can be powered using IEEE 802.3af Power over Ethernet (PoE 7W Class 2). Alternatively, the base station can use an external power supply unit and a mains power supply outlet socket located within 8 metres (26 feet) cable distance .

The original IPBS1 versions of base stations have been replaced by IPBS2 versions. The two types are functionally the same and can be mixed in the same installation.

Digital Base Stations

Using an [IP DECT Gateway](#)^[19], digital base stations can be connected to the DECT system. These base stations are physically similar to the IP base stations, using the same casings and mounting brackets, but connect to the IP DECT Gateway using traditional 4-wire telephone cabling.

Digital base stations are available in variants with internal and external aerials. There is no digital variant of the Compact Base Station base station.

- Digital Base Station with internal antennas for European Union, Switzerland, Iceland, Liechtenstein, Norway and Russia.
- Digital Base Station with external antennas for European Union, Switzerland, Iceland, Norway and Russia.
- Digital Base Station with internal antennas for US and Canada.

Digital base stations can be powered either direct from the IP DECT Gateway or using separate power adapters for each base station. The number of base stations that the IP DECT Gateway can power depends on the cable distance to each base station and the type of cable used. See [Digital Base Station Power Consumption](#)^[113]. The maximum cable length between the IP DECT Gateway and each digital base station should not exceed 1500 meters.

Base Station Details

Feature	Details	
DECT Frequencies	Brazil	1910-1920 MHz frequencies.
	Latin America	1910-1930 MHz frequencies.
	North America	1920-1930 MHz frequencies.
	Rest of World	1880-1900 MHz frequencies.
Physical	Dimensions (Height x Width x Depth)	165 x 200 x 56 mm (including mounting bracket). Add 95mm height for external aerials.
	Weight	450g
	Material	ABS moulded plastic
	Colour	Beige
	External connectors	2 x RJ45, 1 x RJ12
Power <i>(IP Base Stations)</i>	Input	Power over Ethernet IEEE 802.3af or local power supply
	Operating voltage	21 to 56 V dc.
	Power consumption	Typical 4W, maximum 5W.
	Power over Ethernet	PoE Class 2 (7W).
Network <i>(IP Base Stations)</i>	Ethernet:	10/100baseT
	Voice over IP	H.323 XMobile incl. QSig/DSS1.
	Voice Encoding	G.711 A-law / Mu-law (64kbps) G.723.1 (5.3 kbps) <i>(Note: Do not use G.723.1 in installations containing both IPBS1 and IPBS2 base stations)</i> G.729A and AB (16 kbps)
Radio	RF output power EU	Between 23 dBm and 28 dBm (with internal antenna) Between 20 dBm and 25 dBm (with external antenna)
	RF output power US	Between 17 dBm and 21,6 dBm (with internal antenna)
Environmental	Operating temperature	-10°C to +55°C
	Storage temperature	-40°C to +70°C
	Relative operating humidity	15 to 90%, non condensing
	Relative storage humidity	5 to 95%, non condensing
	Immunity to electromagnetic fields	3V/m (EN61000-4-3)
	Immunity to ESD	4 kV contact discharge and 8 kV air discharge (EN61000-4-2)

1.2.1 Base Station Status Lamps

IPBS2 Base Stations

IPBS2 base stations have one LED to indicate status.

LED	Description
Blue On	Idle, no calls in progress.
Blue Fast Flash	Starting up or searching for air synchronization.
Blue On - Regular Blink	Calls in progress.
Blue On - Red Blink	Maximum calls in progress.
Blue Slow Flash	Firmware download in progress.
Yellow Fast Flash	IPBS2 is in mini firmware mode.
Yellow On	TFTP Mode (<i>not used</i>).
Red Fast Flash	No Ethernet connection.
Red On	Hardware error.
Blue On - Yellow Blink	The IPBS2 is in deployment mode and has air synchronization.
Red On - Yellow Blink	The IPBS2 is in deployment mode and has no air synchronization.
Blue Slow Flash/Yellow Flash	The IPBS2 is in deployment mode and does not have adequate air synchronization.
Green	Reset button depressed.

IPBS1 Base Stations

Each IPBS1 base station has two LED lamps.

LED	Color	Description
LED 2 - Activity	Off	Idle, no calls in progress.
	Green	Calls in progress.
	Green Flashing	Maximum calls in progress.
	Amber*	Air synchronization insufficient and calls in progress.
	Amber Flashing*	Air synchronization insufficient and no calls in progress.
	Amber Slow Flashing*	Air synchronization insufficient and maximum calls in progress.
	Red Flashing	No air synchronization. Searching for synchronization signal.
	Red Fast Flashing	Download of RFP software in progress.
LED 1 - Status This is the lower LED on the bottom edge of the base station.	Green	Operational
	Amber	TFTP Mode (<i>not used</i>).
	Amber Fast Flashing	Firmware download in progress.
	Alternating Red/Green	No Ethernet connection.

Digital Base Station

Digital base stations have two LED lamps.

LED	Color	Description
LED 2 - Activity	Off	Idle, no calls in progress.
	Green	Calls in progress.
	Green Flashing	Maximum calls in progress.
	Amber	Base station OK but not operational (self-test, no communication with IP DECT Gateway).
	Amber Flashing	Software download in progress.
LED 1 - Status This is the lower LED on the bottom edge of the base station.	Green	Operational
	–	–
	–	–

1.2.2 Reset /Restart Switch

The base stations (all types), IP DECT Gateway and AIWS2 all include a reset switch. To press it requires a fine point. How long the switch is depressed affects the type of reset.


Action	Duration	Effect
Short press	Less than 1 second	Restart
Medium press	Approximately 3 seconds	Restart in TFTP mode. This mode is intended for development only.
Long press	Approximately 10 seconds	Factory reset. All configuration parameters will be set to default values.

1.3 Aerials

The following different aerials can be used to replace the supplied aerials on a base stations with external aerials. These aerials have aerial leads to allow for optimal positioning. Note that these optional aerials are not supported in North America.


- **Omni-Directional Single Aerial**

A pair of these aerials can be used to approximately double the base station radio coverage, ie. up to 600 metres (2000 feet) omni-directional coverage.

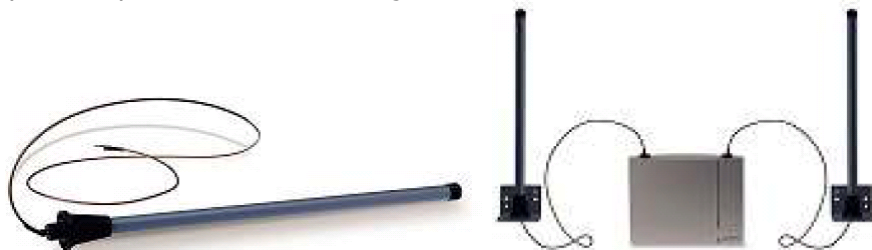

- **Directional Dual Aerial**

This aerial gives directional coverage up to 750 metres (2500 feet). Only one aerial unit is required for connection to the base station.

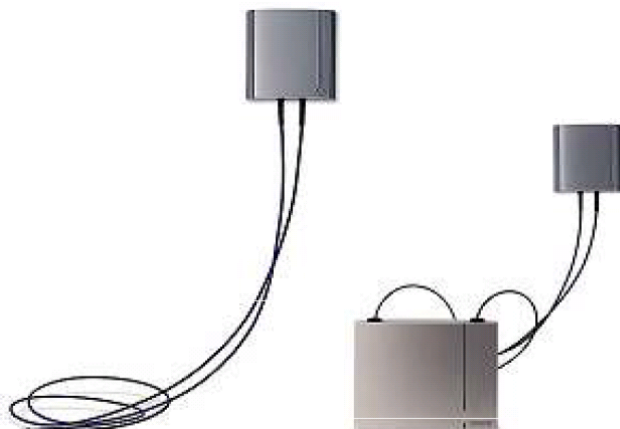

- **Directional Single Antenna**

A pair of these aerials can be used to give directional coverage up to 1000 metres (3300 feet). They must be mounted facing the same direction and approximately 1 metre (3 feet) apart. To achieve maximum coverage, the aerial should be mounted between 4 to 8 metres (13 to 26 feet) above area being covered.



1.4 IP DECT Gateway

The IP DECT Gateway allows [digital base stations](#)^[14] to be connected to the DECT system. These are digital base stations, not IP. Up to 16 such base stations can be connected to a gateway, using traditional 4-wire telephony cabling. The gateway itself connects to the IP Office and other IP based elements of the system via the IP LAN.

Though the gateway does not support telephone calls itself, it can be configured to act as the master base station for the whole DECT system. It is possible for it to act as a master even in a system that has a mix IP and digital base stations.




- Up to 16 digital base stations can be connected to an single IP DECT Gateway.
- Up to 8 IP DECT Gateway units are supported per IP Office.
- Synchronization of attached digital base stations via UPN cables (including automatic cable delay measurement).
- Over-the air synchronization master for IP base stations. Master sync or backup sync functionality can reside in the gateway appliance. It cannot be slave sync.
- Seamless roaming and handover, also with IP base station on same site.
- The IP DECT Gateway can act as the master base station for the DECT system. This does not affect the count of actual base stations (IP and or digital) allowed.
- Remote configuration and software upgrade of IP DECT Gateway appliance (web-based).
- Remote automatic update of digital base stations connected to the IP DECT Gateway.
- Configuration option for reuse of Avaya UPN-repeaters. This means a configuration option for each base station port to disable the automatic cable delay measurement and allow to manually set a cable delay value for that specific port.
- Remote power feeding of digital base stations via UPN-ports. The maximum cable length between the IP DECT Gateway and each digital base station should not exceed 1500 meters. The length and type of cable used affects the [power consumption](#)^[113]. If the total power capacity of the IP DECT Gateway is exceeded, additional digital base stations will require their own power support connection.
- Note: The IP DECT Gateway does not support call handover when the digital base station a call is using is reset or unplugged.

1.4.1 IP DECT Gateway Status Lamps

IP DECT Gateway Status Lamp

This LED is located at the left-hand end of the front panel of the IP DECT Gateway.

LED	Description
Off	No power.
Green slow flash	Reset switch  pressed.
Green fast flash	Firmware update in progress or config cleared after reset.
Green on	OK.
Red on	Error.
Amber on	TFTP mode.

Base Station Port Lamps

Each base station port has a left-hand and right-hand LED. These are used as follows:

Left-hand LED		Right-hand LED	
LED	Description	LED	Description
Off	No link to base station.	Off	No calls in progress.
On	Linked and base station operational.	On	Calls in progress.
Flashing	Linked but base station not operational.	Flashing	Maximum calls in progress.

LAN Port Lamps

Each LAN port has a left-hand and right-hand LED. These are used as follows:


Left-hand LED		Right-hand LED	
LED	Description	LED	Description
Off	No link or Ethernet connection.	Off	No connection or 10Mbps connection.
On	No network activity.	On	100Mbps connection
Flashing	Network activity.	–	–

1.5 Phones

The following Avaya 3700 Series phones are supported by DECT R4:


- [3720](#)^[21], [3725](#)^[22], [3740](#)^[23], [3749](#)^[24]

1.5.1 3720

Avaya 3720	Description						
	Features	<ul style="list-style-type: none"> • High quality voice DECT phone, GAP/CAP compliant. • Easy access to PBX services. • Voicemail including message icon. • Manual and automatic keypad lock. • Local directory: 250 entries. • Central directory from the IP Office. • Call list with the 25 last calls. • Vibrator. • Loudspeaker/hands free. • Central Management and software download. • Headset socket (2.5mm). • 5 languages* English, German, Spanish, French. One additional language can be uploaded. • Monochrome display (112 x 115 pixels). • GAP compatible. 					
		Physical	<table border="1"> <tr> <td data-bbox="678 1043 868 1077">Dimension</td> <td data-bbox="868 1043 1441 1077">133 x 53 x 24mm</td> </tr> <tr> <td data-bbox="678 1077 868 1111">Weight</td> <td data-bbox="868 1077 1441 1111">115g</td> </tr> </table>	Dimension	133 x 53 x 24mm	Weight	115g
		Dimension	133 x 53 x 24mm				
		Weight	115g				
		Battery	<table border="1"> <tr> <td data-bbox="678 1111 868 1144">Type</td> <td data-bbox="868 1111 1441 1144">600 mAh, Lithium 3.7V. Charge time 4 hours.</td> </tr> <tr> <td data-bbox="678 1144 868 1178">Speech Time</td> <td data-bbox="868 1144 1441 1178">> 16 hours.</td> </tr> <tr> <td data-bbox="678 1178 868 1211">Standby Time</td> <td data-bbox="868 1178 1441 1211">> 160 hours.</td> </tr> </table>	Type	600 mAh, Lithium 3.7V. Charge time 4 hours.	Speech Time	> 16 hours.
Type	600 mAh, Lithium 3.7V. Charge time 4 hours.						
Speech Time	> 16 hours.						
Standby Time	> 160 hours.						


- *For systems installed using IP Office provisioning, the language used is set by the IP Office system or user language setting.
- An additional language file can be [uploaded](#)^[134] to a phone.

1.5.2 3725

Avaya 3725		Description	
	Features	<ul style="list-style-type: none"> • As per 3725 plus: • Site Survey tool. • Cleanable, IP 44. • Option: Bluetooth. • 19 Languages Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese (Brazilian), Portuguese, Russian, Slovakian, Spanish, Swedish and Turkish. • Colour display (128 x 160 pixels). • SMS Message length up to 160 characters. 30 received/sent messages. Requires AIWS^[154]. • GAP compatible. 	
	Physical	Dimension	134 x 53 x 26mm
		Weight	130g
	Battery	Type	930 mAh, Li-Pol 3.7V. Charge time 4 hours.
		Speech Time	> 20 hours (13h with Bluetooth option)
	Standby Time	> 120 hours.	


- *For systems installed using IP Office provisioning, the language used is set by the IP Office system or user language setting.
- An additional language file can be [uploaded](#)^[134] to a phone.

1.5.3 3740

Avaya 3740		Description	
	Features		
	<ul style="list-style-type: none"> • High quality voice DECT phone, GAP/CAP compliant • Easy access to PBX services • Voicemail including message icon. • Manual and automatic keypad lock • Local directory: 250 entries. • Central directory from the IP Office. • Call list with the 25 last calls • Vibrator • Loudspeaker/hands free • Central Management and software download • Headset socket (IP65 plug). • 19 Languages Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese (Brazilian), Portuguese, Russian, Slovakian, Spanish, Swedish and Turkish. • Ruggedized. • IP65 Classified. • Wide temperature range: -10C to 55C. • Monochrome display (128 x 160 pixels). • SMS Message length up to 160 characters. 30 received/sent messages. Requires AIWS^[154]. • GAP compatible. 		
	Physical	Dimension	143 x 59 x 29mm
		Weight	180g
	Battery	Type	920 mAh, Li-Ion 3.7V. Charge time 4 hours.
	Speech Time	> 18 hours.	
	Standby Time	> 150 hours.	

- *For systems installed using IP Office provisioning, the language used is set by the IP Office system or user language setting.
- An additional language file can be [uploaded](#)^[134] to a phone.

1.5.4 3749

Avaya 3749		Description	
	Features		
	<ul style="list-style-type: none"> • High quality voice DECT phone, GAP/CAP compliant • Easy access to PBX services • Voicemail including message icon. • Manual and automatic keypad lock • Local directory: 250 entries. • Central directory from the IP Office. • Call list with the 25 last calls • Vibrator • Option: Bluetooth. • Loudspeaker/hands free • Central Management and software download • Headset socket (IP65 plug). • 19 Languages Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese (Brazilian), Portuguese, Russian, Slovakian, Spanish, Swedish and Turkish. • Ruggedized. • IP65 Classified. • Intrinsically Safe. Conforms to ATEX/IECEx • Wide temperature range: -10C to 55C. • Colour display (128 x 160 pixels). • SMS Message length up to 160 characters. 30 received/sent messages. Requires AIWS^[154]. • GAP compatible. 		
	Physical	Dimension	143 x 59 x 29mm
		Weight	180g
	Battery	Type	920 mAh, Li-Ion 3.7V. Charge time 4 hours.
	Speech Time	> 10 hours.	
	Standby Time	> 80 hours.	

- Due to the power restrictions for intrinsically safe handset operation, the display brightness is lower, the loudspeaker and ringer volumes are lower and the audible ringer and vibrating alert cannot be activated simultaneously.
- *For systems installed using IP Office provisioning, the language used is set by the IP Office system or user language setting.
- An additional language file can be [uploaded](#)^[134] to a phone.


1.6 Chargers

A number of different types of charger exist for 3700 Series phones. Note that chargers for 3720/3725 phones are not useable with 3740/3749 phones and vice versa.



- **Basic Chargers**

These are simple single-phone charger for charging only. The basic charger for 3720/3725 phones is not usable with 3740/3749 phones and vice versa.

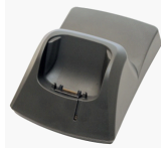

- **Advanced Chargers**

These are single-phone chargers with USB and LAN sockets. These allow the phone docked with the charger to be accessed using the Device Manager application (browser access via the AIWS unit and charger LAN port or WinPDM PC application access via the USB port). The advanced charger for 3720/3725 phones is not usable with 3740/3749 phones and vice versa.



- **Rack Chargers**

These are 6 phone advanced chargers. Older designs of the rack charger for 3720/3725 phones are not usable with 3740/3749 phones and vice versa. However, the latest design of rack charger is usable with all 3720, 3725, 3740 and 3749 phones.



- **Battery Chargers**

These chargers allows the charging of up to 6 batteries separate from the phones. The battery charger for 3720/3725 phones is not usable with 3740/3749 phones and vice versa. There is no battery charger for 3749 phones.

1.7 AIWS

The AIWS (*Avaya In-Building Wireless Server*) unit allows SMS messaging between handsets. It also allows wireless software upgrades and configuration of the handsets. Without an AIWS, handsets can only be upgraded and configured when in an advanced charger or a rack charger.

For IP Office Release 5 this unit also provides directory integration between the IP Office and the DECT R4 system.

For IP Office Releases 6 and higher, directory integration is done by the master base station without requiring an AIWS. However, if SMS is needed, an AIWS is still required and in that case still performs both functions.

The unit is managed via web browser and requires a fixed IP address. For IP Office Release 8.0, the AIWS2 is supported and replaces the AIWS1.

1.7.1 AIWS2

For IP Office 8.0, the AIWS2 is supported. The AIWS2 is an application server for the DECT R4 system. It can run applications for DECT phone users such as SMS messaging, centralized phonebook and corporate directory access. For maintainers it supports centralized device management including firmware and configuration upgrades over the air.

The AIWS2 has replaced the AIWS1.



- Wall mounting brackets are included with the unit. Various other mounting kits are available.
- Built-in power supply. The AIWS is supplied with a number of power leads suitable for most locales.
- For installation and maintenance, this server is managed by a PC using Windows Internet Explorer (7.0 or above) and Sun's Java Runtime Environment.

Several variants of the server are available. There is no upgrade available between variants.

Feature \ AIWS2 Variant	Basic	Basic+	Standard	OAP
NTP Server	Yes	Yes	Yes	Yes
Central Phonebook	Yes	Yes	Yes	Yes
Corporate Directory Access (TFTP from IP Office)	Yes	Yes	Yes	–
SMS Support	Yes	Yes	Yes	Yes
Basic Web Messaging	Yes	Yes	Yes	Yes
Netpage Web Messaging	–	Yes ^[1]	Yes	–
Over-the-Air Handset Software Upload	–	Yes ^[1]	Yes ^[2]	–
Over-the-Air Handset Configuration Upload	–	Yes ^[1]	Yes ^[2]	–
Handset Software Upload via Advanced/Rack Charger	–	Yes ^[1]	Yes ^[2]	–
Handset Configuration Upload via Advanced/Rack Charger	–	Yes ^[1]	Yes ^[2]	–
Virtual SIM Card	–	Yes ^[1]	Yes ^[2]	–
AIWS as Protocol Converter	–	–	–	Yes

1. Up to 32.

2. Up to 120 handsets using the Standard AIWS license. An Enterprise license is required to support more handsets.

1.7.1.1 AIWS2

Front Panel



1. Power LED

Indicates the status of the power supply to the unit. See [AIWS2 Status Lamps](#) ^[154].

2. Status LED

Indicates the status of the unit.

3. Mode Switch and LED

Pressing this switch twice will put the unit into mass storage mode. The unit will automatically return to normal operation after 10 minutes. While in mass storage mode, the LED in the switch flashes. Mass storage mode is used to allow a Windows PC to download the suitable drivers for USB cable connection to the Management port.

4. Restart Switch

5. SD Card Slot

Not used for IP Office operation.

6. USB Ports

Not used for IP Office operation.

7. Management Port

This port can be used for a USB connection to a PC in order to do unit configuration. Installation of the drivers for this requires the unit to be put into mass storage mode using the Mode Switch (see above). The address used for this port is 192.5.36.229.

Rear Panel



1. LAN 1

This is the LAN port which should be used for connection to the same LAN as the DECT system and IP Office.

2. LAN 2

Not used.

3. Power Connectors

The unit supports a number of different methods for power connection. If using the C10 port, a number of power cables are supplied with the unit.

1.7.1.2 AIWS2 Status Lamps

Status LED

Colour	State	Description
Blue	On	OK. AIWS operational.
	Fast Flash	Starting up or shutting down.
Red	Fast flash	Error or fault.
	Slow flash	Warning
Yellow	Double blink	Waiting for automatic startup.

Power LED

Colour	State	Description
Blue	On	Power OK.
Red	Fast flash	Shutting down due to low voltage.
	Slow flash	Low voltage.

Mode LED

This LED is incorporated into the Mode button on the front of the unit.

Colour	State	Description
Blue	Slow flash	Mass storage mode.

1.7.2 AIWS1

This design of AIWS has now been replaced by the AIWS2.



- Wall mountable.
- Dimensions: 275 x 130 x 60 mm, 550g.
- Supplied with power supply unit and power cords.

Several variants of the server are available. There is no upgrade available between variants.

Feature\AIWS1 Variant	Basic	Standard	Enterprise	OAP
Central Phonebook	Yes		Yes	Yes
Corporate Directory Access	Yes (TFTP only)	Yes (TFTP and LDAP)	-	-
SMS Support	Yes	Yes	Yes	Yes
Basic Web Messaging	Yes	Yes	Yes	Yes
Netpage Web Messaging	-	Yes	-	-
Over-the-Air Handset Software Upload	-	Yes ^[1]	Yes	-
Over-the-Air Handset Configuration Upload	Yes	Yes ^[1]	Yes	-
Handset Software Upload via Advanced/Rack Charger	-	Yes ^[1]	Yes	-
Handset Configuration Upload via Advanced/Rack Charger	-	Yes ^[1]	Yes	-
Virtual SIM Card	-	Yes ^[1]	Yes	-
AIWS as Protocol Converter	-	-	-	Yes

1. Up to 120 handsets using the Standard AIWS license. An Enterprise license is required to support more handsets.

1.7.2.1 AIWS1 Status Lamp

Colour	State	Description
Green	On	Running.
Orange	On	Failsafe or Network setup mode.
	Flashing (1 second on/off)	Image installation mode.
	Fast flash (100ms on/off)	Starting.
	Intermittent flash (100ms on/1 second off)	Restart.
	Slow flash (2 seconds on/3 seconds off)	Halted (auto restart after 10 minutes).
	Wink (5 seconds on/100ms off)	Unlicensed.
Red	On	Low voltage.
	Intermittent flash (100ms on/1 second off)	License error.
	Flashing (1 second on/off)	Watch dog reset.
	Slow flash (2 seconds on/3 seconds off)	Shutdown.
	Very slow flash (3 seconds on/3 seconds off)	Memory error.
	Wink (5 seconds on/100ms off)	Network error/Module key error.

Chapter 2.

Site Survey and Planning


2. Site Survey and Planning

We cannot give precise recommendations for a site survey as every site varies. However, a site survey is a prerequisite to installation in all cases. The correct and effective placement of base stations prevents problems and maximizes coverage. Most issues with any DECT system arise from the number and positioning of the base stations.

The basic aim is to ensure:

- Base station coverage in all areas of expected DECT phone usage.
- Sufficient number of base stations covering each area for the number of expected simultaneous users in that area.
- Sufficient overlap between areas of base station coverage to allow for [call handover](#)^[34] when DECT phone users are moving.
- Where possible, [synchronization](#)^[35] of each base station with more than one other base station.

The diagram below indicates the basic measures for coverage between a base station and a DECT phone.

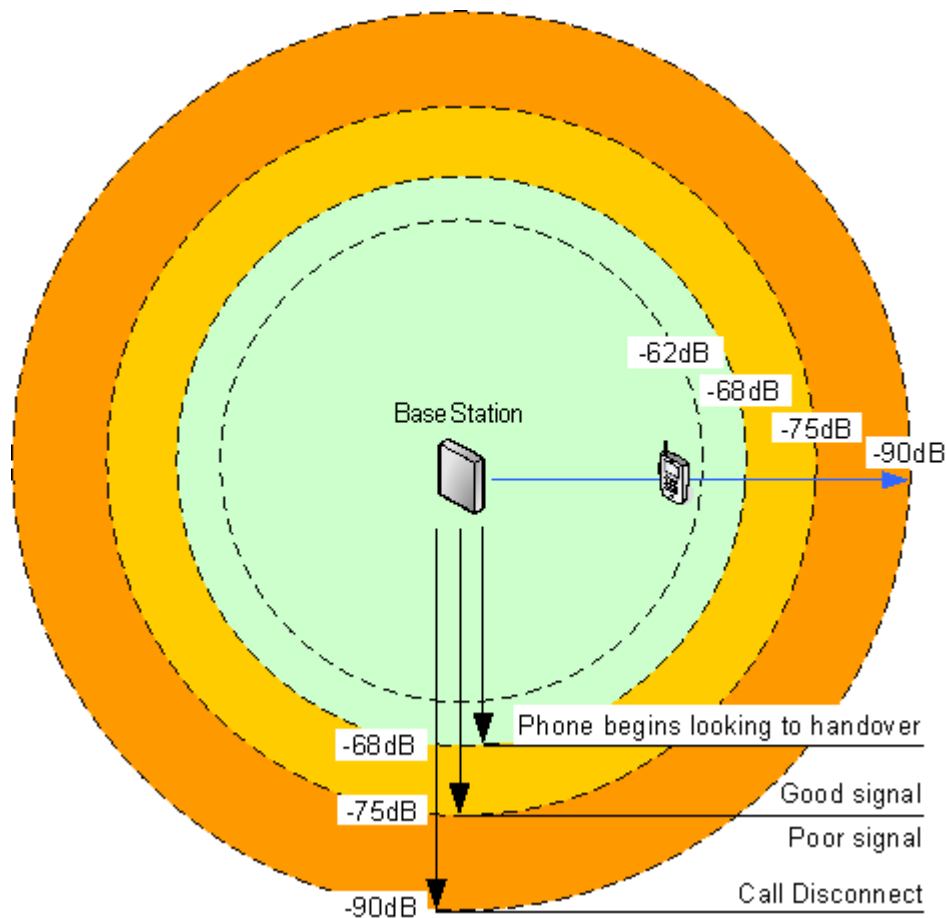

Signal	Description
-40dB	Strong signal typically seen when a phone is close to the base station.
-62dB	Minimum signal strength at which a base station will accept a phone wanting to handover from another base station.
-68dB	Signal strength below which the phone will begin looking for a base station to which it can handover.
-75dB	At this signal strength, the increased error rate will become apparent in the speech.
-90dB	At this signal strength calls are likely to disconnect. This is also the limit for one base station to synchronize with another.

Though this section focuses mainly on the measure of signal strength, the DECT signalling employs a number of methods to overcome a poor signal. The other key factor that affects signalling is the error rate. While decreasing signal strength and increasing error rate are usually related, there may be some scenarios where a higher than expected error rate occurs, for example, reflected signals.

2.1 Factors to Consider

In ideal open field conditions, the range between a phone and a standard base station can be up to 600 metres (2000 feet). However, in real conditions with obstacles absorbing signal strength and reflected signals giving increased error rates, the range is more realistically between 30 metres (100 feet) indoors and 300 metres (1000 feet) outdoors.

In practice, no rules or guarantees can be given for base station coverage. Coverage is affected by too many factors that are unique to each site. The following is a guide to those factors that can affect coverage which you should consider and look for during any site survey.

- **Obvious causes of signal problems**

- Metal surfaces.
- Concrete thickness greater than 1 metre (3 feet).

- **Beware of**

- **Windows with Reflective Film or Specialized Glass.**

These produce increased signal reflection and reduced signal pass-through.

- **Wire Meshes and Grills with Apertures of Less than 4cm (1.5 inches).**

These block signals as effectively as continuous metal sheet.

- **Fire Doors**

These block the signals. In multi-occupancy building such as hotels, the high number of fire-doors may be a problem.

- **Stair Wells**

In modern office buildings, stair wells frequently combine concrete building supports, fire doors and the intervening floor material, making them a special problem.

- **Screened Rooms**

Typically found in offices involved with TV, video and radio production, but also possible in computer centers.

- **Empty Sites**

Do not perform a survey on a site that is not yet occupied. The survey results will differ from those of the same site once occupied by the customer business. Similarly the survey should be performed during normal business hours in order to assess the areas of usage and the effect of equipment being operated and moved.

- **Be aware of**

- **Signal Direction**

The signal from a base station does not propagate evenly in all directions. The signal typically propagates strongest in the horizontal plane. However, the ability for a base station to serve callers located on floors above or below it should not be ignored. This may allow coverage to be extended to areas not frequently used and so not meriting a dedicated local base station.

- **Other Radio Signals**


The ability to receive normal broadcast radio signals in an area is not an indication that DECT signaling will be received and vice versa.

- **Rack Chargers**

A rack charger (6 phones) immediately creates an area where a single base station (8 calls) is near maximum capacity. Look to provide overlapping base station support to areas where rack chargers will be located.

2.2 Handover

Once a phone is connected on a call through a particular base station, it will normally maintain connection with that base station even if the phone moves into an area with a stronger signal from another base station. However, when the signal to the phone drops below -68dB , the phone will begin looking for another base station with a better signal to which it can handover (this is often referred to as "roaming"). If the other base station signal is -62dB or higher, the phone will handover to that base station if it has free capacity.

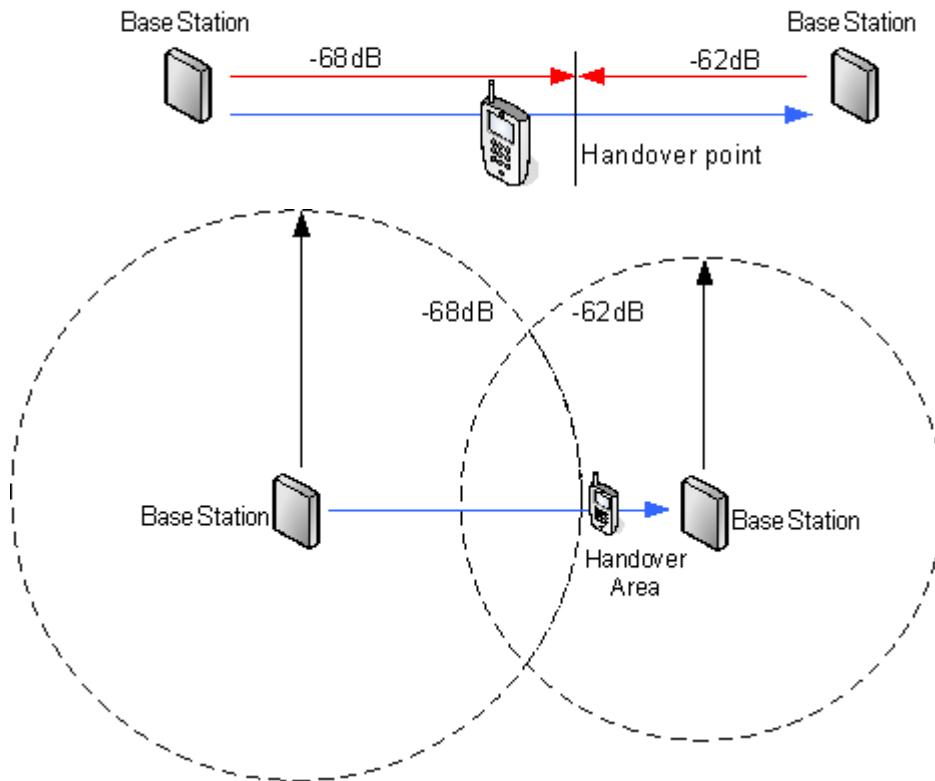

2.3 Base Station Synchronization

Base stations in the DECT R4 system need to be synchronized with each other. This can be done with a signal as low as -90dB between base stations (note however that call quality deteriorates rapidly when below -75dB).

One base station is assigned as the 'air sync master', typically the master base station. Each other base station can sync directly with it or indirectly via a synchronization chain. However, it is preferable that the number of synchronization 'hops' between any particular base station and its air sync master base station is kept as low as possible. To help achieve this it is recommended that the air sync master is placed centrally within the set of base stations.

Where possible, each base station should be placed within synchronization range of more than one base station, which allows the base stations to maintain synchronization should one base station fail or be switched off for maintenance. The process of synchronizing by the shortest route to the air sync master when in synchronization range of multiple base stations is automatic.

For more information, see [Configuring Air Sync](#)^[205].

Advanced Scenario: Separated Locations

In most scenarios, the master base station is also used as the air sync master for all the other slave base stations and that is the scenario documented in this manual. However, in scenarios where you have base stations in separate locations that are not within synchronization range of each other, it is permissible to assign separate air sync masters in each location. However, there must be absolutely no overlap (<-90dB) between the separate groups of base stations. Any overlap will cause frequent loss of synchronization.

Having separate locations, each with its own synchronization, is done through the settings on the **DECT | Air Sync** tab of each base station. For each location, set the same **Sync Region** number for all the base stations at that location, using a different number for each location. In addition, use the **Sync Mode** drop-down menu to configure one of the base stations in each location as the **Master** base station.

- **Note:**

In deployments in mixed systems with IP Base Stations and IP-DECT Gateways, the IPDECT Gateways need to be physically interconnected for the purpose of radio synchronization. When configuring an IP-DECT Gateway as an air sync master, use sync region 0. All other base stations should be configured as sync slaves. Systems with IPBS in sync regions that have only IPBS should use non-zero sync region number(s) and be configured with at least one sync master with the remaining IPBSs configured as sync slaves.


2.4 Performing a Survey

- While performing a survey you will require the following information:
 - **Building Layout**
Accurate building plans are an essential aid to both the site survey and also for later fault analysis. Ensure that you have an accurate plan of the customer premises, including the locations of mains power outlets and network connection points.
 - **The area of coverage required?**
Which areas within the plans the customer expects to be covered. Do they expect coverage outside the building and or in buildings separate from the main building.
 - **The number of simultaneous users within different areas?**
Each base station can support up to 8 simultaneous calls (4 for a Compact Base Station).
- Perform the survey during normal business hours. The movement of large items of machinery, such as lifts and shutter doors, will then be observable during the survey.
- Ensure that you have read this documentation and understand the requirement of both [phone handover](#)^[34] and [base station synchronization](#)^[35].
- As the survey takes place, note whether additional network connection points will be required and or mains power outlets. Consider the use of Power over Ethernet, if possible in order to simplify base station installation.

Site Survey Mode

The following method is used to put a subscribed phone into site survey mode.

1. Go to the **Call Time** menu (**Menu | Calls | Call Time**).
2. Activate the **Admin** menu by pressing ► * ◀◀ * ◀◀
3. In **Admin** menu, select **DECT Info**.
4. Select **Link**. The phone will display information about the base station.

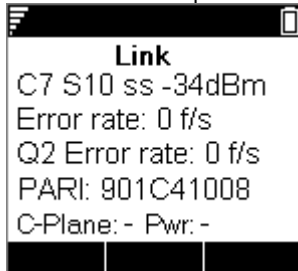

- **C7 S10**
This is the DECT signal carrier and slot.
- **ss**
This is the [signal strength](#) ^[32]. This is the main value that should be recorded and accessed as you perform the survey.

Signal	Description
-40dB	Strong signal typically seen when a phone is close to the base station.
-62dB	Minimum signal strength at which a base station will accept a phone wanting to handover from another base station.
-68dB	Signal strength below which the phone will begin looking for a base station to which it can handover.
-75dB	At this signal strength, the increased error rate will become apparent in the speech.
-90dB	At this signal strength calls are likely to disconnect. This is also the limit for one base station to synchronize with another.

- **Error rate / Q2 Error rate**
These are the error (corrupted) frames per second on the signals from and to the base station.
- **PARI**
The PARI of the DECT system.
- **Bear:**
The current power output of the phone.
 - **Pwr** = on hook
 - **LU** = off hook, Low power
 - **US** = off hook, Normal power
 - **EU** = off hook, High power

Chapter 3.

Provisioned Installation

3. Provisioned Installation

A provisioned install is the recommended method for both installation simplicity and handset feature support.

- **When to Use IP Office Provisioning**

IP Office provisioning simplifies installation and maintenance and provides 3720, 3725, 3740 and 3749 phones with additional [IP Office user features](#)^[118]. Therefore it is the recommended method for new installations whenever possible.

- Provisioning installation in pre-configured or auto-create modes should be used for all installations with just 3720, 3725, 3740 and 3749 phones.
- Provisioning installation in pre-configured mode should be used for all installations with a mix of 3720, 3725, 3740, 3749 phones and other DECT phones.
- Provisioning installation should not be used for installations with no 3720, 3725, 3740 or 3749 phones. See [Non-Provisioned Installation](#)^[182].

Note: For systems installed using IP Office provisioning, the DECT frequency is automatically configured by the [IP Office system](#)^[51] and will override any manual setting.

1. [Unpack the latest IP DECT software](#)^[42].
2. [Configure the IP Office for provisioned operation](#)^[43].
3. [Configure the Master Base Station](#)^[52].
4. [Configure the Slave Base Stations](#)^[73].
5. [Base Station Mounting](#)^[80].
6. [Phone Subscription](#)^[82].

The installation process used here is only an example. Other methods and order can be used once you become familiar with the installation process. For example, installing all the slave base stations before installing the master base station.

IP Office Installation Requirements

- It is assumed that you are familiar with installation and configuration of IP Office systems.

Information

- Service user name and password for IP Office configuration access.
- Service user name and password for IP Office security settings access.
- IP Office IP address.
- Avaya IP Endpoint licenses.

Parts Required

- IP Office Release 9.1 software DVD or image of the IP Office Release 9.1 admin software.

Tools Required

- Programming PC with IP Office Manager application installed. You must have rights on this PC to change its IP address settings unless it is a DHCP client.
- Software for zip file extraction.

IP Base Station Installation Requirements

Parts Required

- Base station
Includes:
 - Base station.
 - Two 3.5mm screws and two 6mm wall plugs suitable for wall mounting onto a solid wall (brick or similar).
 - 1.2 metre (4 foot) LAN cable. If this is replaced with a longer cable the replacement should be a CAT5 Ethernet LAN cable.
- If using Power over Ethernet:
 - The base station supports Power over Ethernet, IEEE 802.3af, class 2.
- If not using Power over Ethernet:
 - Base station power supply unit.
Required if not using Power over Ethernet to power the base station. Note that the base station power supply units include an 8 metre (26 feet) cable from the PSU to the base station. Check that you have the correct type of power supply unit for the locale.
 - BSX-0013: Europe (except United Kingdom).
 - BSX-0014: United Kingdom.
 - BSX-0015: USA/Canada.
 - BSX-0016: Australia.
 - Mains power outlet socket.
- LAN Socket.

Information

- DECT R4 SARI.
- Base Station IP Addresses.
- Detailed plans from the site survey indicating the intended base station locations, LAN sockets and if necessary power supply outlets.

Tools

- Programming PC with DECT R4 software.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.
- Drill and drill bits suitable for the selected wall mounting position of the AIWS.
- Screwdrivers for use with the screws selected for AIWS wall mounting.

Phone Subscription Requirements

Information

- Service user name and password for IP Office configuration.
- User names and extension numbers for the DECT phones.
- Phone IPEI numbers if using an pre-configured installation mode.

Tools

- **IP Office Manager.**
- **Device Manager**
The software installed on each handset may need to be upgraded to match that supplied with the [DECT R4 software](#)^[42]. This is done using the Windows Device Manager software to upgrade phones via an advanced charger or using [AIWS Device Manager](#)^[125] to upgrade phones over the air.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.


3.1 DECT Software

Before beginning installation, in addition to having IP Office Manager installed, you need to unpack the DECT R4 software onto your programming PC.

DECT R4 is supported on a range of Avaya systems. However, for IP Office operation, only firmware specifically documented as having been tested and supported with IP Office should be used. Details of supported firmware will be included in IP Office Technical Bulletins and Technical Tips.

To unpack the DECT R4 software:

1. On the programming PC, create a folder with a name indicating its purpose, for example **c:\IP_DECT_R4**.
2. Within the IP Office Administrator Application software (ie. the software from which IP Office Manager is installed), locate the folder **IPDECT**.
3. The folder contains a file **DECT R4.zip**. This is the file containing software for DECT R4. The file **IPDECT.zip** contains software for the previously supported IP DECT product and not for DECT R4.
4. Copy the **DECT R4.zip** file to the folder created on the programming PC.
5. Using WinZip or a similar tool, extract the contents of the zip file into the folder, maintaining the directory structure of the zip files.
6. The set of files should appear similar to the following.

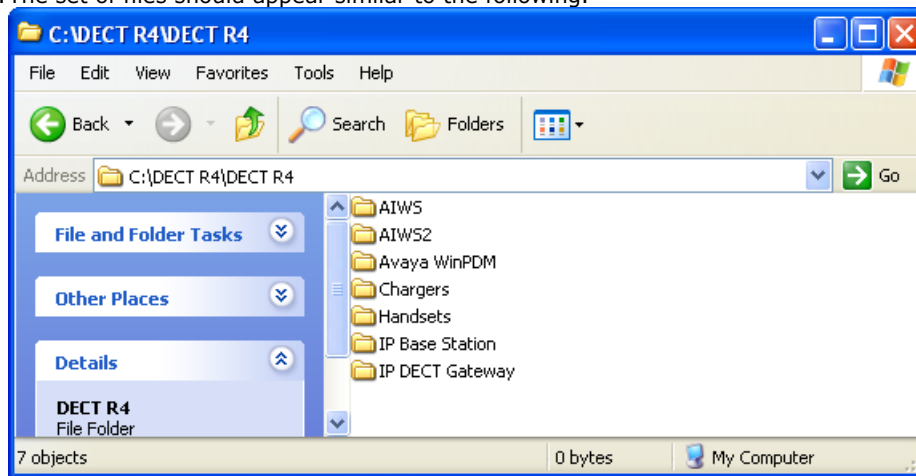

7. Check the software levels as follows:

- Open the **IP Base Station** folder. There are separate sub-folders for **IPBS1** and **IPBS2** base stations. Open each and note the software level shown as part of the .bin file filenames, there are separate files for the base station boot file and firmware file. All the base station in the installed system should be run the same levels of software.
- Open the **Handsets** folder and note the software level shown as part of the .pkg file filenames. The handsets in the system should be running this level of software or higher.
- Open the **IP DECT Gateway** folder and note the software level shown as part of the .bin filenames.

Device Management

During installation (provision or non-provisioned) it may be necessary to upgrade the software being used by the 3720, 3725, 3740 or 3749 phones. This is done in one of two ways:

- **Windows Device Manager**

The Windows device manager application can be used to upgrade the software of phones placed in an advanced charger and connected to the PC via USB or LAN. If using this method, install the Windows Device Manager software and load the parameter definition files supplied with the DECT R4 software.

- **AIWS Device Management**

The AIWS device includes an integrated version of device manager that can be used to perform over the air upgrades. This method is only recommended for the maintenance of an existing system. For upgrades during installation of a new system, the use of Windows Device Manager is recommended.

3.2 IP Office Configuration

The IP Office configuration for a provision installation consists of the following steps:

1. [Check and configure IP Office security settings](#) ⁴⁴.
2. [Setup the IP DECT Line and enabling subscription](#) ⁴⁶.
3. [Add IP Endpoint licenses](#) ⁴⁸.
4. [Manually create extensions \(optional\)](#) ⁵⁰.
5. [Configuring a Source Number](#) ⁵¹.

Requirements

- It is assumed that you are familiar with installation and configuration of IP Office systems.

Information

- Service user name and password for IP Office configuration access.
- Service user name and password for IP Office security settings access.
- IP Office IP address.
- Avaya IP Endpoint licenses.

Parts Required

- IP Office Release 9.1 software DVD or image of the IP Office Release 9.1 admin software.

Tools Required

- Programming PC with IP Office Manager application installed. You must have rights on this PC to change its IP address settings unless it is a DHCP client.
- Software for zip file extraction.

3.2.1 Security Settings

The provisioning connection between the IP Office control unit and the master base station uses the HTTP/HTTPS service configured in the IP Office system's security settings.


- **Important**


It is important to note that for new IP Office Release 9.1 systems and system where the security settings have been defaulted:

- The **IPDECTService** service user used for provisioning is disabled by default.
- The **TFTP Directory Read** function used by handsets to display the IP Office system directory is off by default.



To check the security settings:

1. Start IP Office Manager and select **File | Advanced | Security Settings....**
2. From the discovery menu select the IP Office and click **OK**. Enter the systems user name and password for the security service user login. These may be different from the name and password used for IP Office configuration access.

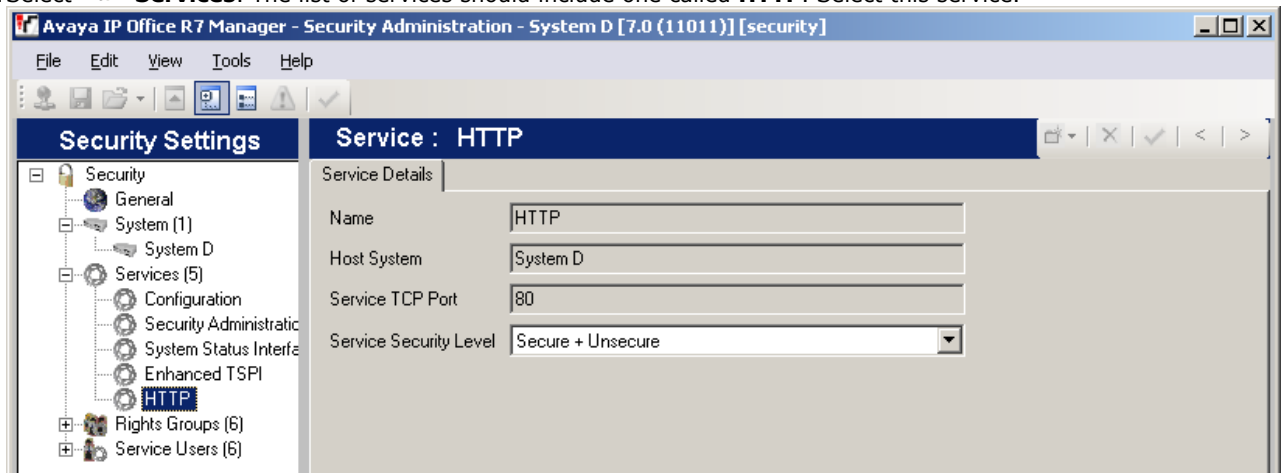
3. Select  **Services**. The list of services should include one called **HTTP**. Select this service.




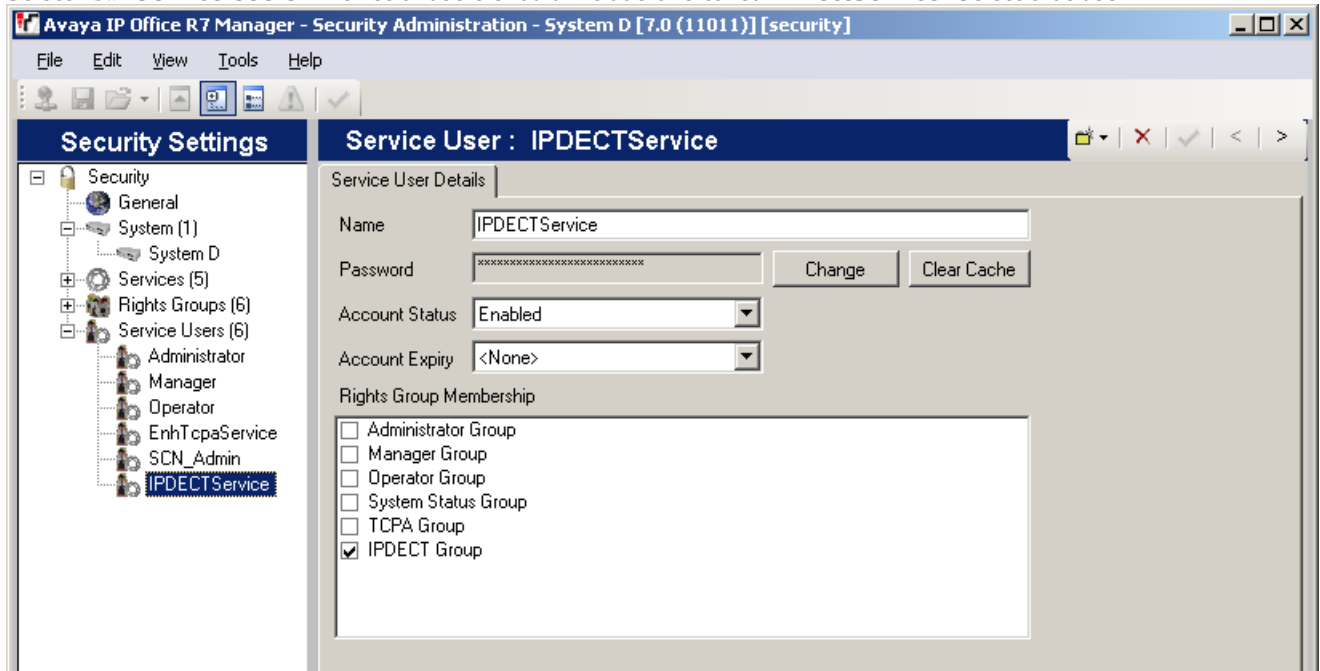
4. The HTTP service affects all HTTP connections provided by the IP Office system. Changing its setting will affect applications other than just the DECT R4. The only option that can be changed is the **Service Security Level**. The default is **Secure + Unsecure**, meaning both http and https can be used between the base station and IP Office.

5. Select  **Rights Groups**. The list of groups should contain one called **IPDECT Group**. Select that group. If the group is not present in the list, click on the  new entry icon and create the group.

6. Select the **HTTP** tab. Check that the option **DECT R4 Provisioning** is selected. Check that no other options are selected on any other tab.

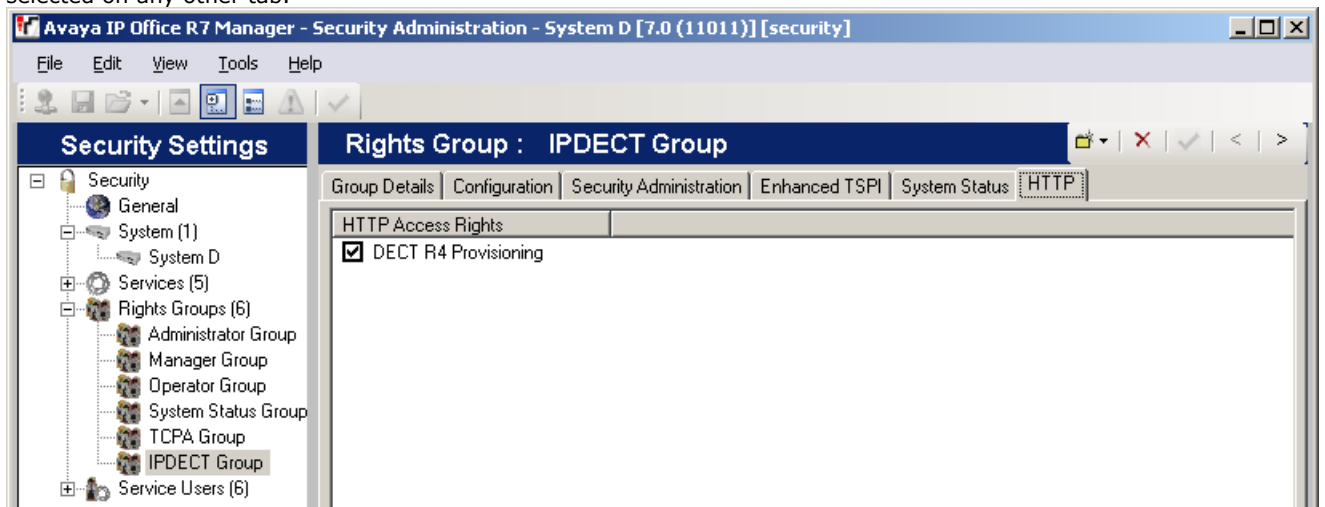


7. Select  **Service Users**. The list of users should include one called **IPDectService**. Select that user.





- a. In the **Rights Group Membership** list check that the user is set as a member of the **IPDECT Group**.
- b. Check that the **Account Status** is **Enabled** and the **Account Expiry** as **<None>**.
- c. Change the password if prompted, otherwise click **Change**. Enter a password for the service. The service user name and password are used in the provisioning settings of the master base station.


8. Select  **System**. Select the **Unsecured Interfaces** tab. Select **TFTP Directory Read** and click **OK**. This setting needs to be enabled to allow the handsets to display the IP Office system directory.

9. Click **OK** and then click on the  icon to save any changes you have made to the security settings.

3.2.2 IP DECT Line Setup

At this stage we will create an IP DECT line for traffic between the IP Office and the DECT R4 system. The line is configured with the IP address of the master base station. The IP Office configuration only requires and allows a single IP DECT line.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Click on the  icon and select **IP DECT Line**. The settings for an IP DECT line are displayed.
4. On the **Line** tab there are no adjustable settings. Once the system is installed and operational, this tab lists the DECT extensions.

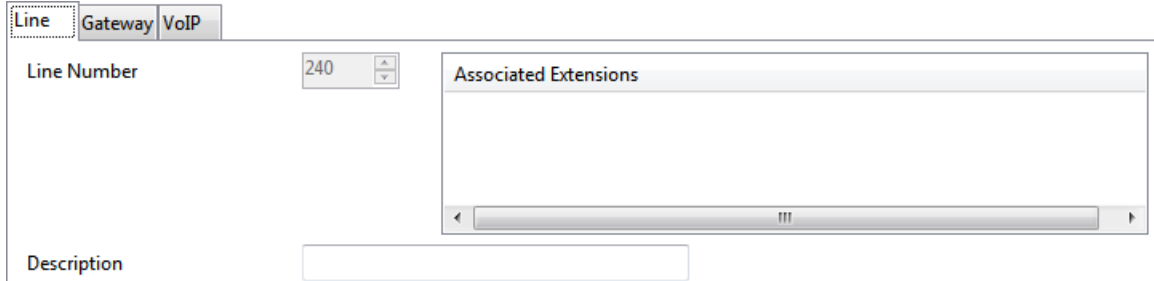


Line Number: 240

Associated Extensions

Description

5. Select the **VoIP** tab. This table is used to set details of the master base station.

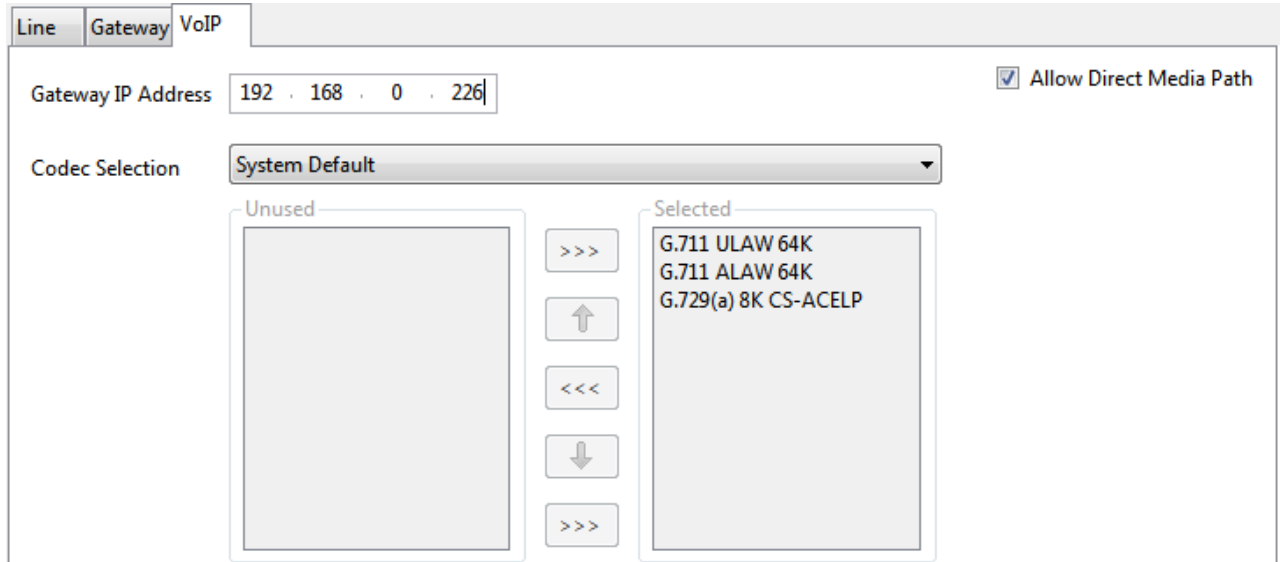

Line Gateway VoIP

Gateway IP Address: 192 . 168 . 0 . 226

Codec Selection: System Default

Allow Direct Media Path

Unused

Selected

- G.711 ULAW 64K
- G.711 ALAW 64K
- G.729(a) 8K CS-ACELP

- a. Set the **Gateway IP Address** to match the IP address that will be assigned to the master base station.
- b. Leave the other fields at their default settings.

6. Select the **Gateway** tab.

- If you want to use anonymous handset subscription, select the **Auto-Create Extension** and **Auto-Create User** options.
- For a provisioning installation, select **Enable Provisioning**.
- In the **SARI/PARK** field enter the SARI code that will be provided to the master base station.
- In the **Subscriptions** drop down select either **Auto-Create** or **Preconfigured**.

- **Auto-Create**

If you select this option, extension and user entries are automatically created in the IP Office configuration when a new handset is subscribed. Use this option for anonymous subscription. Ensure that the **Auto-Create User** and **Auto-Create Extension** settings are also selected. For a provisioned installation, this mode should be used if the installation includes just 3720, 3725, 3740 and 3749 phones.

- **Subscription Using IP Office Auto-Create**

Allowing phone subscription using the IP Office auto-create options for extensions and or users makes changes to the current running configuration of the IP Office system. For this method to work, you must ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

- **Preconfigured**

If you select this option, handset will only be able to subscribe if they match an existing IP DECT extension configured in the IP Office configuration, including an IPEI. For a provisioned installation, this mode should be used if the installation includes a mix of 3720, 3725, 3740, 3749 phones and other DECT phones.

- **Disabled**

After installation and subscription of the handsets, this option can be selected to prevent the further subscription of handsets.

- In the **Authentication Code** field enter the numeric code that handset should enter during the subscription process. This needs to be 4 to 8 digits long.

7. Save the configuration back to the IP Office system.

3.2.3 Adding Licenses

Each IP DECT extension requires an Avaya IP Endpoint license. This applies even if the handset subscribed to the IP DECT R4 system is not an Avaya phone.

Phones without a license will still be able to subscribe and register but will be limited to making emergency calls only (calls that match an IP Office **Dial Emergency** short code). The associated user will be treated as if logged off. If a license becomes available, it will be assigned to any unlicensed DECT handsets first and then to any other unlicensed Avaya IP phone in the order that the phones registered.

- **Avaya IP Endpoint Licenses**

Licenses are added to the IP Office configuration and are based on a serial number unique to the system.

- For each IP500 VCM 32 or IP500 VCM 64 card installed in the system also enables 12 Avaya IP endpoints without requiring licenses.
- For each IP400 VCM card installed in the system, each VCM channel supported by the card allows support for 3 Avaya IP phones.
- The VCM channels provided by IP500 Combination cards do not enable any Avaya IP endpoints.
- Licenses are normally automatically assigned to extensions in order of registration. However, existing extensions can be configured to [reserve a license](#)^[48]. This ensures that they do not become unlicensed when newly added extensions manage to register first following a system reboot.

3.2.3.1 Checking the Licensing Number

IP Office licenses are issued against a unique dongle serial number. For IP500 control units, the number is unique to the smart card fitted to the control unit. For IP500v2 control units, the number is unique to the System SD card fitted to the system. For any licenses entered into the system configuration to be valid, they must be licenses issued against that serial number.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.


2. Select  **System**.

3. Select the **System** tab.

4. The feature key serial number is shown by the **Dongle Serial Number** or the **System Identification Number** field.

3.2.3.2 Adding Licenses

1. Using IP Office Manager, retrieve the configuration from the IP Office system.

2. Select  **License**. The current licenses in the system configuration are displayed.

3. Click **Add** and select **ADI**.

4. Enter the license which you have been supplied and click **OK**.

5. The type of the license, **Avaya IP endpoints**, should be displayed but with its **License Status** set to **Unknown**. If the **License Type** was not recognized, check that the key was entered correctly.


6. Save the configuration back to the IP Office system and then receive the configuration from the IP Office system again.

7. The **License Status** should now be **Valid**.

3.2.3.3 Reserving Licenses

Licenses are normally automatically assigned to extensions in order of registration. However, existing extensions can reserve a license in order to ensure they do not become unlicensed when new extensions added to the system manage to register first following a system reboot.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.

2. Select  **Extension** and then select the DECT extension.

3. Select the **IP DECT** tab. Note, the appearance of this menu will vary depending on whether you are doing a provisioned or non-provisioned installation.

The screenshot shows a configuration window with two tabs: 'Extn' and 'IP DECT'. The 'IP DECT' tab is active. The window contains the following fields and options:

- DECT Line ID:** A dropdown menu showing '240 (190.168.42.224)'.
- Message Waiting Lamp Indication Type:** A dropdown menu showing 'On'.
- IPEI:** A text input field containing '0'.
- Use Handset Configuration:** An unchecked checkbox.
- Reserve Licence:** A dropdown menu showing 'Reserve Avaya IP endpoint licence'.

4. Setting the **Reserve Licence** option to **Reserve Avaya IP endpoint licence** is used to reserve an existing license for the extension.
5. Repeat the process for any other extensions for which you want to reserve the license.
6. Save the configuration back to the IP Office system.


3.2.4 Manually Creating Extensions

If the IP DECT line's subscription setting is set to **Preconfigured**, you must manually add extension and user entries for each handset to the IP Office configuration.


To manually add extension and user entries:

1. Using IP Office Manager, retrieve the configuration from the IP Office system.

2. Click on  **Extension**.


3. Click on the  icon and select **IP DECT Extension**. This option is greyed out until an IP DECT line is added to the configuration.

4. Select the **Extn** tab. Set the **Base Extension** number to a currently unused extension number.

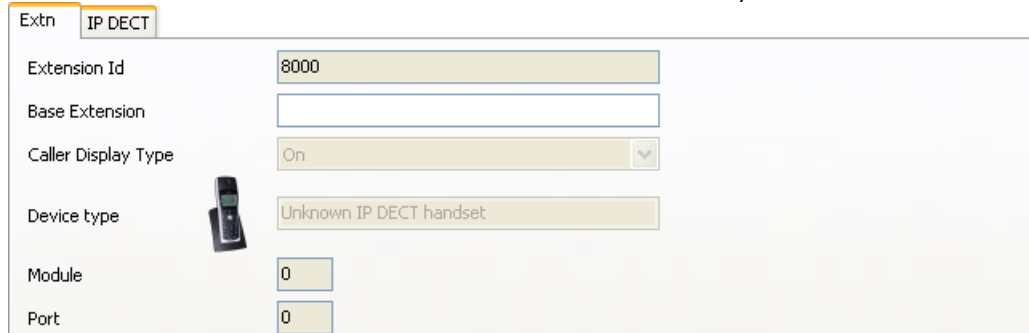

The screenshot shows the configuration form for an IP DECT extension. The 'Extn' tab is active. The 'Extension Id' field contains '8000'. The 'Base Extension' field is empty. The 'Caller Display Type' dropdown is set to 'On'. The 'Device type' dropdown is set to 'Unknown IP DECT handset'. The 'Module' field contains '0' and the 'Port' field contains '0'.

5. Select the **IP DECT** tab. Note that the appearance of this tab varies depend on whether the IP DECT line has **Enable Provisioning** selected or not, this example is for provisioning enabled.

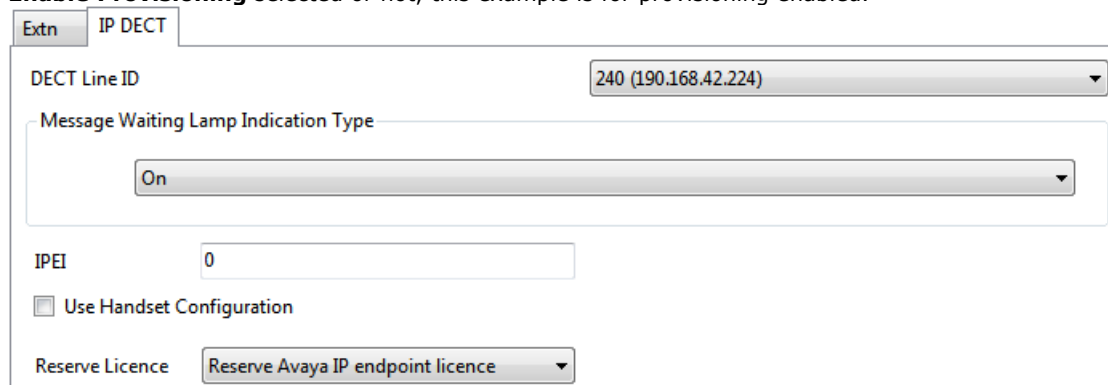

The screenshot shows the configuration form for an IP DECT line. The 'IP DECT' tab is active. The 'DECT Line ID' dropdown is set to '240 (190.168.42.224)'. The 'Message Waiting Lamp Indication Type' dropdown is set to 'On'. The 'IPEI' field contains '0'. The 'Use Handset Configuration' checkbox is unchecked. The 'Reserve Licence' dropdown is set to 'Reserve Avaya IP endpoint licence'.

a. Set the **Message Waiting Lamp Indication Type** to **On**.

b. Select the **Reserved Avaya IP endpoint license** option. This option will be greyed out if there are insufficient licenses. If this option is selected, the phone will be licensed before any other Avaya IP endpoints for which this option has not been set.

c. Set the IPEI to match that of the handset. For new phones the IPEI is shown on the screen. For other phones it can be displayed by selecting **Menu | Settings | Device Info | IPEI/IPDI**. It is also shown on a label under the battery.

- For 3720, 3725, 3740 and 3749 phones, the IPEI can be displayed by selecting **Menu | Settings | Device Info | IPEI/IPDI**. It is also printed on a label under the phone's battery.

d. If **Use Handset Configuration** is selected, the handset user is able to set the phone language and date/time format. If not selected, those settings are driven by the system or user locale settings in the IP Office configuration.

6. Click **OK**.

7. IP Office Manager will prompt whether you want to create an associated user. Select **Yes**.

8. The user settings are displayed. Adjust any of these if required and click **OK**.

9. Repeat the process to create any other extension and user entries required. Then save the configuration back to the IP Office system.

3.2.5 Controlling the DECT Frequency

For a provisioned installation, the DECT frequency setting of the DECT system is automatically set to match the IP Office system locale. However, in some special cases it may be necessary to set the DECT frequency differently from the one inferred from IP Office system locale.

This can be done by entering one of the following NoUser Source Numbers into the IP Office system configuration.

To force the DECT frequency selection:

1. Using IP Office Manager, receive the configuration from the IP Office system.
2. Select **Users** and then select the **NoUser** user.
3. Select their **Source Numbers** tab.
4. Enter one of the following source numbers.
 - **IPB_FR_EU**
The IP Office will provision the DECT system to use the European DECT frequency.
 - **IPB_FR_NA**
The IP Office will provision the DECT system to use the North American DECT frequency.
 - **IPB_FR_SA**
The IP Office will provision the DECT system to use the South America DECT frequency.
5. Save the configuration back to the IP Office system selecting to include a reboot.

3.3 Master Base Station Setup

The DECT master base station configuration for a provision installation consists of the following steps:

1. [Default the Base Station](#) ^[53].
2. [Determine the Base Station IP Address](#) ^[53].
3. [Access the Base Station Configuration](#) ^[54].
4. [Set the Base Station IP Address](#) ^[55].
5. [Configuring VLAN Setting](#) ^[56].
6. [Update the Base Station Software](#) ^[58].
7. [Show/Hide Advanced Options](#) ^[60].
8. [Select Master Mode](#) ^[61].
9. [Set the DECT Password](#) ^[62].
10. [Select IP Office mode](#) ^[63].
11. [Set the Time Zone](#) ^[64].
12. [Enable Provisioning](#) ^[65].
13. [Enable HTTPS and Security Certificates](#) ^[66].
14. [Configuring the Radio Settings](#) ^[69].
15. [Phonebook Integration](#) ^[70].
16. [Performing an RFP Scan](#) ^[71].
17. [Entering a PARI](#) ^[71].
18. [Configuring air sync](#) ^[72].

3.3.1 Defaulting the Base Station

This process will default a base station or IP DECT Gateway, erasing its configuration. After the unit restarts it will default to the IP address 192.168.0.1/255.255.255.0. For more information on the base station LEDs and what their statuses indicate, see [Base Station Status Lamps](#) ^[15].

To default a base station:


1. With the unit not connected to anything else, connect the power supply and switch on. The LED on the base station flashes red to indicate that no Ethernet is detected. Otherwise, the LED flashes blue.
2. Wait approximately five seconds.
3. Press and hold the **Reset** button on the base station for approximately 10 seconds. For IPBS2 base stations, the LED on the base station changes to quick flashing blue, then goes out and finally returns to a slow flashing blue.
4. Release the **Reset** button and wait for the base station to reset. The LED should turn back on to solid amber.
5. Quickly press the **Reset** button once. The base station reboots with default settings. The default IP is 192.168.0.1, with DHCP on but not active. If you want to activate DHCP, reset the base station again.

3.3.2 Determining the Base Station IP Address

The address an existing base station or IP DECT Gateway is using can be determined using the following process. It uses the MAC address of the unit, which you can find printed on a label on the back or bottom of the unit.

This procedure requires use of the Command Prompt, for which you *must* have Administrator rights.

To display the base stations IP address:

1. Right-click on the  **Command Prompt** icon (**Programs | Accessories**) and select **Run as administrator**.
2. Enter **nbtstat -R**. The PC should respond that it has purged and reloaded the NBT remote cache table.
 - For a base station, enter **nbtstat -a ipbs-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
 - For a IP DECT Gateway, enter **nbtstat -a ipbl-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
3. The results indicate the IP address the device is currently using.

3.3.3 Access the Base Station Configuration


To login to a base station:

1. Depending on whether DHCP is being used or not:

- If connected directly to the base station, change your programming PC's network address to 192.168.0.200 with subnet mask 255.255.255.0. Connect the LAN cable from your PC to the base station.
- If both your PC and the base station are connected to a LAN network with DHCP server, ensure your PC is set to act as a DHCP client or has a fixed address that is valid on the network.

2. Start your web browser and enter the http:// or https:// followed by the IP address of the base station. The default IP address is 192.168.0.1. If a security certificate warning is displayed, select to continue to this website.

3. The base station should respond with its initial configuration menu.

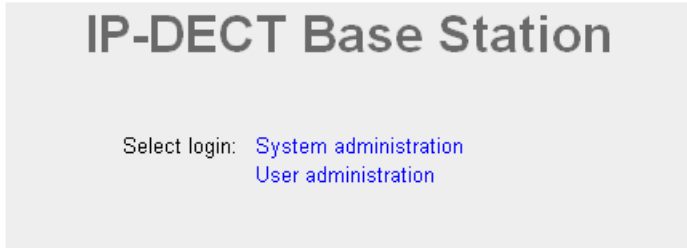

4. Select **System administration**. A password entry dialog will be displayed. Enter the default user name (**admin**) and password (**changeme**).

5. The configuration menu for the base station is displayed.

Configuration	Info	Admin	NTP	EULA
General				
LAN	Version	IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]		
DECT	Serial Number	09AD15300066		
Services	MAC Address (LAN)	00-01-3e-01-6f-9c		
Administration	Sntp Server	192.168.0.210		
Users	Time	** ** ** **		
Device Overview	Uptime	0d 0h 2m 29s		
Backup	RFP SW version	3.2.10		

6. Note the software levels shown in the **Version** screen. These determines whether you need to upgrade the base station software.

3.3.4 Set the Base Station IP Address

By default a base station defaults to 192.168.0.1. The process below can be used to change the DHCP mode and IP address of the base station.

To set the base station IP address:

1. Having browsed into the base station's configuration, in the left-hand column select **LAN**.
2. Select the **IP** tab.

Configuration	DHCP	IP	VLAN	Link	Statistics
General					
LAN					
IP					
LDAP					
DECT					
Unite					
Services					
Administration					
Users					
Device Overview					

Active Settings

IP Address: 192.168.0.226

Network Mask: 255.255.255.0

Default Gateway: 192.168.0.1

DNS Server:

Alt. DNS Server:

Check ARP:

- a. Enter the required **IP Address** and **Network Mask** for the base station. The other settings are optional.
 - b. Click **OK**.
3. Select the **DHCP** tab.

Configuration	DHCP	IP	VLAN	Link	Statistics
General					
LAN					
IP					
LDAP					

Mode: disabled Currently - disabled

- a. Using the **Mode** drop-down, select **Disabled**.
 - b. Click **OK**.
4. The menu will prompt you with the message **Reset Required**. Do not click this or reset the base station at this stage.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.
 5. Log in again using the new IP address.

3.3.5 Configuring VLAN Settings

Both IPBS1 and IPBS2 base stations support VLAN operation. Note that the VLAN ID must be the same as the ID configured in the master base station, otherwise access to the base station is not possible.

Note: If "VLAN = 0", the Quality of Service (QoS) is inactive according to 802.1q. You should also avoid "VLAN = 1" as it is often used as a default VLAN setting.

3.3.5.1 Configuring VLAN

To set the base station VLAN ID:

1. Under the **Configuration** menu, navigate to **LAN** and then select the **VLAN** tab.

Configuration | DHCP | IP | **VLAN** | Link | Statistics

General | **LAN** | IP | LDAP | DECT | Unite | Services | Administration | Users | Device Overview

Configure the VLAN ID only if the switches and endpoints support VLAN tagging (IEEE 802.1q).
For priority tagging (802.1p) it is sufficient to configure the RTP priority value only.
Please be aware that you may not be able to access the device any further if the VLAN ID is changed!

Active Settings

ID

Priority - RTP Data

Priority - Signalling

2. In the **ID** field, enter the parameter required for the base station.
3. Click **OK**.

3.3.5.2 Viewing LAN Statistics

To view statistics of LAN events:

1. On the IP base station, select **LAN > Statistics**. On a IP DECT Gateway, select **LAN1 > Statistics**.

Configuration | DHCP | IP | **VLAN** | Link | Statistics

General | **LAN** | IP | LDAP | DECT | Unite | Services

tx-good
tx-unicast
tx-broadcast
tx-multicast
tx-lostcarrier
tx-deferred
tx-collision
tx-excesscol

2. Press **Clear** to reset the ethernet statistics counters. You may need to scroll down to view the **Clear** button.

3.3.5.3 Deactivating the LAN Port

The IP DECT Gateway has two LAN ports. The LAN2 port is used for administration only. If necessary, you can deactivate the port.

To deactivate the LAN port:

1. Select **LAN2 > IP**.

Configuration	DHCP	IP	Link	VLAN	Statistics
General					
LAN1					
LAN2					
IP					
LDAP					
DECT					
Unite					
Phonebook					
Administration					
Users					
Device Overview					
DECT Sync					

		Active Settings
IP Address	<input type="text" value="192.168.1.1"/>	192.168.1.1
Network Mask	<input type="text" value="255.255.255.0"/>	255.255.255.0
Default Gateway	<input type="text"/>	172.29.40.254
DNS Server	<input type="text"/>	
Alt. DNS Server	<input type="text"/>	
Check ARP	<input type="checkbox"/>	
Disable	<input checked="" type="checkbox"/>	

No IP protocol data will be sent/received via this interface

2. Select the **Disable** checkbox.
3. Click **OK**.

3.3.6 Update the Base Station Software


The base station may need to be upgraded to the [DECT software](#)^[42] supplied with IP Office administration software. That software consists of two parts, a firmware file and a boot file. All base stations in a DECT system should use the same software.

To update the base station firmware:

1. Browse into the base station's configuration and note the software levels shown by the **Version** line.

Configuration		Info	Admin	NTP	EULA
General	Version IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]				
LAN	Serial Number 09AD15300066				
DECT	MAC Address (LAN) 00-01-3e-01-6f-9c				
Services	SNTP Server 192.168.0.210				
Administration	Time ** ** ** **				
Users	Uptime 0d 0h 2m 29s				
Device Overview	RFP SW version 3.2.10				
Backup					

2. Check that these match the versions supplied with the IP Office administration software. Ensure that you are checking against the correct folder for an IPBS1 or IPBS2 base station. If they do not match, then you must upgrade the base station.

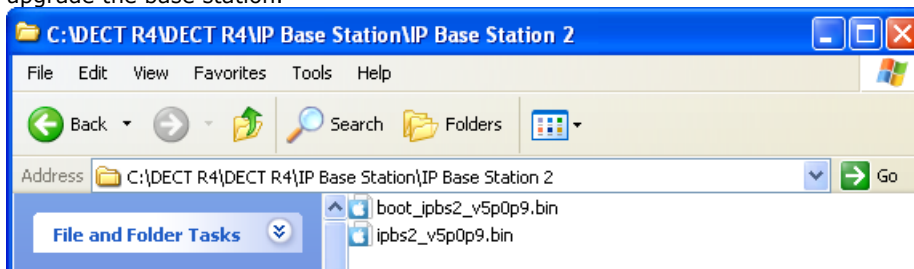

3. If both software files need to be upgraded, the boot file should be upgraded first.

- **To upgrade the boot file:**

In the left-hand column, under the **Administration** menu, select **Update** and then select the **Boot** tab.

Configuration		Config	Firmware	Boot
General	Upload bootcode to flash			
LAN	Flash status:			
IP	Bootcode Checksum OK			
LDAP	Firmware Checksum OK			
DECT	Do not interrupt bootcode upload! This may leave the bootcode defect.			
UNITE	If for some reason the bootcode upload was interrupted, repeat the upload before reboot.			
Phonebook	Bootcode File: <input type="text"/> <input type="button" value="Browse..."/>			
Administration	<input type="button" value="Upload"/>			
Users				
Device Overview				
DECT Sync				
Traffic				
Backup				
Update				

- **To upgrade the base station file:**
Select **Update** and then select the **Firmware** tab.

4. Click on the **Browse** button and browse to the **IP Base Station** sub-folder of the IP DECT R4 software you [previously extracted](#) onto the programming PC.
5. Select the appropriate file for the upgrade you are performing, for example the file with boot in the file name if doing a boot file upgrade. Click **Open**.
6. Click on the **Upload** button. The browser shows the progress of the upload and firmware upgrade. It will indicate when the process has been completed.

7. Click on **immediate reset**. The base station resets. Wait until the status lamps stop flashing.
8. If necessary log in again. The **General | Info** tab should now list the new firmware. If necessary, repeat the process for the firmware using the **Update | Firmware** menu.
9. For a IP DECT Gateway, if necessary, also repeat the process for base station firmware for base stations that will be connected to the IP DECT Gateway using the **Update | RFPs** menu.

3.3.7 Show/Hide Advanced Options

By default, all base station menus and menu options are visible, including numerous settings that are not applicable for IP Office operation. By turning off advanced options, only those menus and settings applicable to IP Office mode are shown. While this is not necessary for installation it is recommended.

This process is not necessary on the Compact Base Station which have advanced options hidden by default. This option is not supported on a IP DECT Gateway.

To show/hide advanced options:

1. Select **General | Admin**.

The screenshot shows the configuration interface for the Local Admin. The 'Admin' tab is active. The 'Local Admin' section includes fields for Device Name, User Name (admin), Password, and Confirm Password. The Password Policy section includes fields for Minimum length (8), Number of character types (2), and Number of previous passwords not allowed (1). There are also two checked checkboxes: 'Do not allow repeated characters' and 'Do not allow sequential characters'. The 'Administration Mode' section has a 'Show Advanced Options' checkbox, which is currently unchecked. 'OK' and 'Cancel' buttons are at the bottom of the form.

2. Enable or disable the **Show Advanced Options** checkbox as desired.
3. Click **OK**.
4. Refresh the browser window.

3.3.8 Select Master Mode

The base station needs to be told to act as a master base station. <<<check what is shown when on>>>

1. Select **DECT** and then select the **Master** tab.



The screenshot shows a configuration window with a sidebar on the left and a main content area. The sidebar has a 'Configuration' header and several tabs: 'General', 'LAN', 'DECT', and 'SARI'. The 'DECT' tab is selected. The main content area has a 'System' tab selected, and within it, the 'Master' sub-tab is active. In the 'Master' sub-tab, there is a 'Mode' dropdown menu currently set to 'Off'. Below the dropdown are two buttons: 'OK' and 'Cancel'.

2. Change the **Mode** to **Active** and click **OK**.
3. Reset the base station.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.

3.3.9 Set the DECT Password

To set the DECT system password:

1. Select **DECT** and then select the **System** tab.

Configuration	System	Master	Trunks	SARI																
General	<table><tr><td>System Name</td><td>DECT</td></tr><tr><td>Password</td><td>●●●●●●</td></tr><tr><td>Confirm Password</td><td>●●●●●●</td></tr><tr><td>Subscriptions</td><td>With System AC ▾</td></tr><tr><td>Authentication Code</td><td>54348779</td></tr><tr><td>Frequency</td><td>Europe ▾</td></tr><tr><td>Secure RTP</td><td>▾</td></tr><tr><td colspan="2"><input type="button" value="OK"/> <input type="button" value="Cancel"/></td></tr></table>				System Name	DECT	Password	●●●●●●	Confirm Password	●●●●●●	Subscriptions	With System AC ▾	Authentication Code	54348779	Frequency	Europe ▾	Secure RTP	▾	<input type="button" value="OK"/> <input type="button" value="Cancel"/>	
System Name					DECT															
Password					●●●●●●															
Confirm Password					●●●●●●															
Subscriptions					With System AC ▾															
Authentication Code					54348779															
Frequency					Europe ▾															
Secure RTP					▾															
<input type="button" value="OK"/> <input type="button" value="Cancel"/>																				
LAN																				
DECT																				
Services																				
Administration																				
Users																				
Device Overview																				
Backup																				
Update																				

2. Enter and confirm the password you want to use.
3. The **Subscriptions** and **Authentication Code** fields should not be adjusted. These will be set by the IP Office once the base station is in provisioning mode.
4. Check that the DECT **Frequency** field is set correctly for your location.

Note: For systems installed using IP Office provisioning, the DECT frequency is automatically configured by the [IP Office system](#) and will override any manual setting.

5. Click **OK**.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.

3.3.10 Select IP Office Mode

The base station needs to be told that it is connected to an IP Office system.

To set the PBX mode:

1. Select **DECT** and then select the **Master** tab.

The screenshot shows a configuration window with a sidebar on the left containing the following menu items: Configuration, General, LAN, DECT, Services, Administration, Users, Device Overview, Backup, and Update. The main window has tabs for System, Master, Trunks, and SARI. The Master tab is active. The Mode is set to 'Active'. Under 'Multi Master Configuration', the checkbox is checked and 'Master ID' is set to '0'. Under 'IP-PBX', the checkbox is checked and 'PBX' is set to 'ACM'. There are 'OK' and 'Cancel' buttons at the bottom.

2. Change the **PBX** setting to **IPO** and click **OK**.

The screenshot shows the same configuration window as above. The 'PBX' setting under 'IP-PBX' is now set to 'IPO'. The 'PBX Resiliency' checkbox is unchecked. The 'OK' and 'Cancel' buttons are still present at the bottom.

3. Reset the base station.

- a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
- b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.

3.3.11 Set the Time Zone

During a provisioned installation, Network Time Protocol (NTP) settings are all greyed out as the IP Office is automatically set as the time server. However, if you do not set the time zone prior to provisioning, the time and date on all the sets will be incorrect.

To set the timezone:

1. Select **General** and then select the **NTP** tab.

Configuration	Info	Admin	NTP	EULA
General				
LAN				
DECT				
Services				
Administration				
Users				

Time Server	<input type="text"/>
Timezone	Europe - Central European Time (UTC+1) ▾
String	CET-1CEST-2.M3.5.0/2.M10.5.0/3
<input type="button" value="OK"/>	

2. Using the **Timezone** drop-down menu, select the appropriate time zone for you area.
3. Click **OK**.

3.3.12 Enable Provisioning

The master base station can now be configured for IP Office provisioning. Once this is enabled, several fields of the base station configuration will be set by the IP Office system. Other fields are greyed out and or automatically set to the values required for IP Office operation.

Prior to enabling IP Office provisioning, ensure that you [configure the time zone](#)^[64]. Otherwise, the time and date on all sets will be incorrect, as the IP Office is automatically set as the time server.

To enable provisioning:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].

- Select **Services** and then select the **Provisioning** tab.
- Set the **Current View** to **Primary**. The Redundant view is used when configuring [IP Office switch fallback](#)^[100].

Configuration	Update	Logging	HTTP	HTTP Client	SNMP	Provisioning	Phonebook
General							
LAN							
IP							
LDAP							
DECT							
Unite							
Services							
Administration							
Users							
Device Overview							
DECT Sync							
Traffic							
Backup							
Update							
Diagnostics							
Reset							

Current view Primary

Enable

Use HTTPS

PBX IP Address

General HTTP settings

Base directory

User Name

Password

Update service sub directory and file name

Command File

Provisioning sub directory and file name

System data

User data

Status Active

- Select the **Enable** option.
 - The IP Office [security settings](#)^[44] control whether HTTPS is supported between the IP Office control unit and the master base station (by default it is supported).
 - Set the **PBX IP Address** to match the IP Office system.
 - In the **User Name** and **Password** fields, set the details that match the IP Office system's service configured for IP DECT. See [Security Settings](#)^[44].
- Click **OK**.
 - Reset the base station.
 - Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.
 - Select the **General | Provisioning** tab again. The Status should have changed to **Connected**.
 - Select **DECT | SARI**. The value of the SARI entered into the IP Office configuration should now also be visible in the base station configuration.
 - Select **DECT | System**. The message **System in Provisioning Mode** is shown. The **Subscriptions** mode is greyed out and set to **With System AC**.

3.3.13 Enabling HTTPS and Security Certificates in the Web Interface

Depending on your site configuration, you might have to enable provisioning in the device configuration such that the IP DECT allows both self-signed certificates and approved certificates from a trusted location. You can also configure this option in IP Office Manager.

To select security certificates:

1. Enable **Show Advanced Options**. See [Show/Hide Advanced Options](#).
2. Ensure that [HTTPS provisioning is enabled](#).
3. Save the configuration and reset the device.
4. Select **General | Certificates** and wait to see the certificate from IP Office appear in the **Not trusted** list.


5. Under **Rejected Certificates**, select the desired certificate from the **Not trusted** list and press the **Trust** button.

The certificate should appear in the **Trust List** section. No reset is required.

3.3.14 Enabling HTTPS and Security Certificates in IP Office Manager


Depending on your site configuration, you might have to enable provisioning in IP Office Manager such that the IP DECT allows both self-signed certificates and approved certificates from a trusted location. You can also configure this option in the base station configuration. See [Enabling HTTPS and Security Certificates in the Web Interface](#).

1. In the base station configuration, navigate to **General | Certificates** and download the device certificate by clicking **DER** as shown below. Save the **.cer** file to a known location.

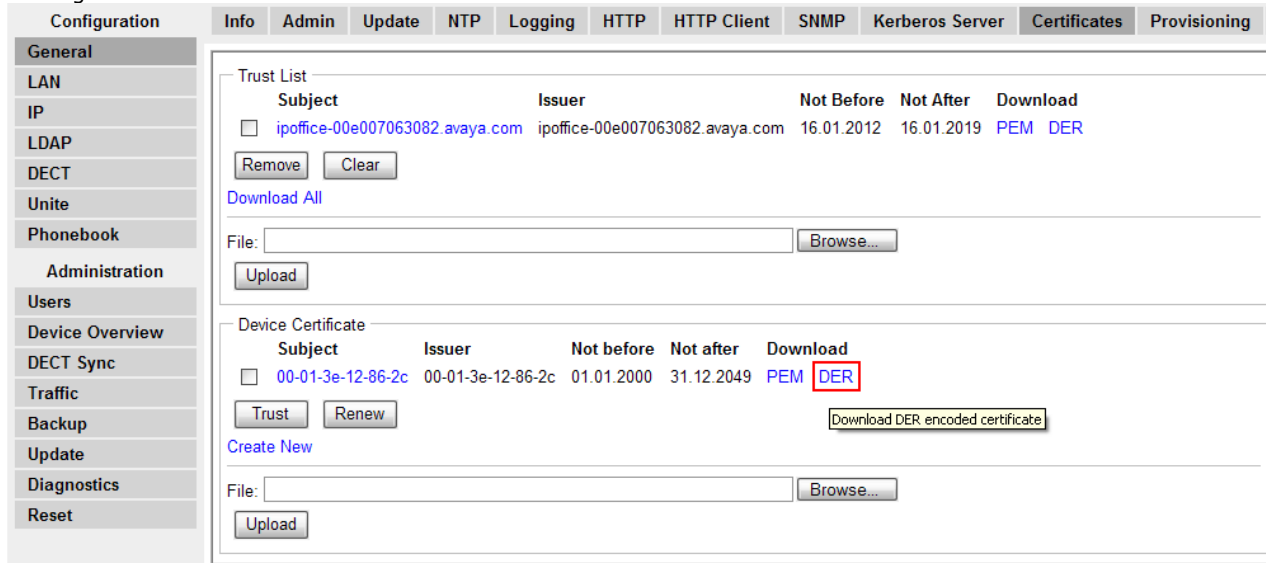

2. In IP Office Manager, retrieve the IP Office configuration.
3. Access [security settings](#) and navigate to the **System | Certificates** tab.

4. In the **Trusted Certificate Store** section, click **Add**. A Certificate Source pop-up appears.

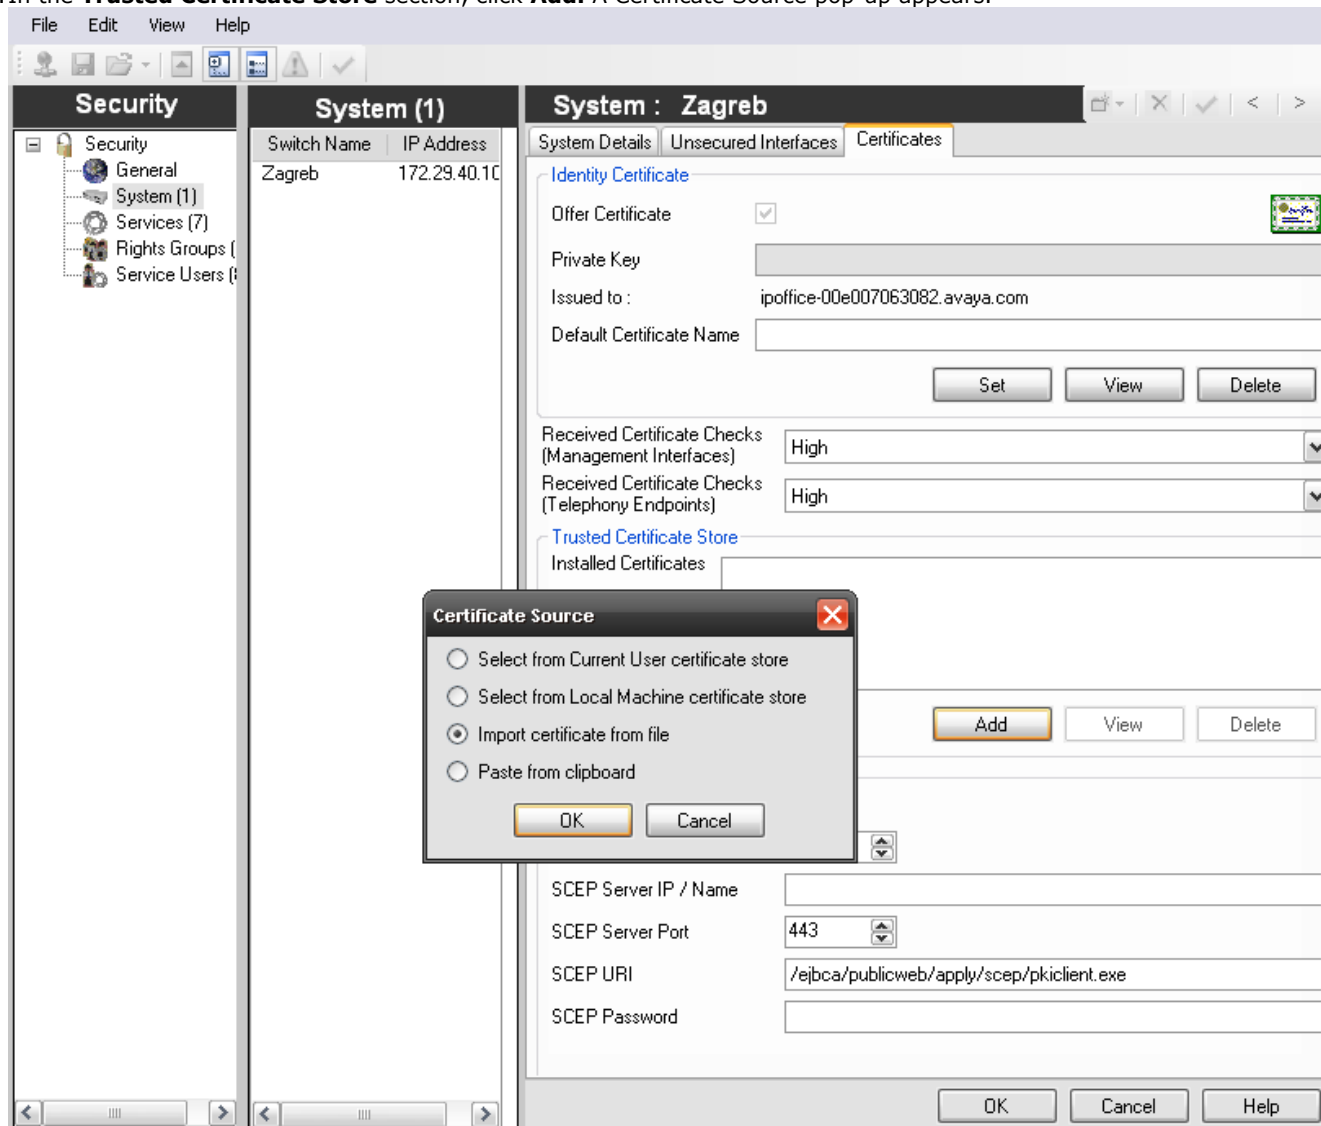

5. Select **Import certificate from file** and click **OK**.

6. Locate the **.cer** file saved in step 1 and click **Open**.

7. If necessary, use the **Received Certificate Checks (Management Interfaces)** drop-down menu and select something other than **None**.

8. Save the configuration back to the IP Office system.

3.3.15 Registering the Radio Settings

Each base station has a radio interface that needs to connect with the master base station. This includes the master base station's own radio interface.

To register radion base stations:

1. Select **Device Overview** and then select the **Radios** tab.

The screenshot shows a configuration interface with a sidebar on the left and a main content area. The sidebar has a 'Configuration' section with sub-items: General, LAN, DECT, Services, Administration, Users, and Device Overview. The 'Radios' tab is selected in the main content area. Below the tab is a table titled 'Uninitialized Registrations' with the following data:

Name ↑	IP Address	Device Name	Version	Connected Time	
IPBS-01-6f-9c	192.168.0.226	10:50]	[7.1.2/7.1.2/IPBS1-Y4/PD]	0d 1h 46m 5s	Add

2. The list shows those base stations that the master can detect in the list of **Uninitialized Registrations**. Click **Add**.
3. On the popup form that appears, click **OK**.
4. Wait for the **Radios** tab to refresh and show that the radio base station is connected. Note that this can take a couple of minutes.

3.3.16 Phonebook Integration

In an IP Office provisioned installation, the phonebook settings are automatically set by the IP Office system. However, use of IP Office users, groups and directory as part of the DECT phone directory still needs to be enabled if required. If not enabled, the Central Phonebook functions on the DECT phones will not work. For DECT systems using an AIWS, central phone book provisioning is done via the AIWS.

To configure the phonebook source:

1. Select **Services** and then select the **Phonebook** tab.

The screenshot shows a configuration window with a sidebar on the left and a main content area on the right. The sidebar has a 'Configuration' header and several menu items: General, LAN, DECT, Services (highlighted), Administration, Users, Device Overview, Backup, and Update. The main content area has two tabs: 'Provisioning' and 'Phonebook' (highlighted). Below the tabs, there is a form with the following elements: an 'Enable' checkbox (unchecked), a 'General Settings' section containing a 'Search Direction Numbers' dropdown menu (set to 'Right to left') and a 'Phonebook Number' text input field (containing '999999'), and a 'TFTP Settings' section containing a 'Server IP Address' text input field (containing '192.168.0.214'). At the bottom of the form are 'OK' and 'Cancel' buttons.

2. Select **Enable**.
3. Click **OK**.

3.3.17 Advanced Options

The following processes are only required if:

- The DECT system is operating in the same area as other DECT systems.
- The position of the master base station means it cannot be used as the air synch master for all the other base stations.

3.3.17.1 Performing an RFP Scan

The Primary Access Rights Identifier (PARI) is a part of the base station broadcast identity that uniquely identifies master base station. The same PARI is automatically assigned to slave base station. However, if more than one DECT system is operating within the same coverage area, each system needs to have a separate unique PARI assigned.

If the customer system is in the same area as other DECT system, perform an RFP scan using the following procedure:

- **! WARNING**
Executing an RFP scan terminates any calls using the base station and remains unavailable for approximately 30 seconds whilst the scan is performed.

To run an RFP scan:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].
1. Select **Diagnostics** and then select the **RFP Scan** tab.
 2. Click **Start Scanning**.
 3. When the results are shown, note the details.

Configuration	Logging	Tracing	Alarms	Events	Performance	Config Show	Ping	Traceroute	RFP Scan						
General	<div style="border: 1px solid black; padding: 5px;"> <p>IP-DECT Systems</p> <hr/> <p>Other Systems</p> <table border="1"> <thead> <tr> <th>RFPI</th> <th>RSSI</th> </tr> </thead> <tbody> <tr> <td>0138E80A80</td> <td>-106</td> </tr> <tr> <td>0194FAB2C9</td> <td>-106</td> </tr> </tbody> </table> </div>									RFPI	RSSI	0138E80A80	-106	0194FAB2C9	-106
RFPI										RSSI					
0138E80A80										-106					
0194FAB2C9										-106					
LAN															
IP															
LDAP															
DECT															
Unite															
Services															

3.3.17.2 Entering a PARI

Having used an [RFP scan](#)^[71] to check what PARI codes are already in use in the area, ensure that the master base station has a unique code.

To set the system's PARI:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].
1. In the left-hand panel select **DECT**. Select the **PARI** tab.

Configuration	System	Suppl. Serv.	Master	Trunks	Radio	Radio config	PARI	SARI	Air Sync
General	<div style="border: 1px solid black; padding: 5px;"> <p>System ID <input type="text" value="32"/></p> <p><input type="button" value="OK"/> <input type="button" value="Cancel"/></p> </div>								
LAN									
IP									
LDAP									
DECT									

2. Enter a value between 1 and 35. This value must be unique from any other DECT R4 master base station in the area.
3. Click **OK**.

3.3.17.3 Configuring Air Sync

Base stations in the DECT R4 system need to be synchronized with each other. This can be done with a signal as low as -90dB between base stations (note however that call quality deteriorates rapidly when below -75dB).

One base station is assigned as the 'air sync master', typically the master base station. Each other base station can sync directly with it or indirectly via a synchronization chain. However, it is preferable that the number of synchronization 'hops' between any particular base station and its air sync master base station is kept as low as possible. To help achieve this it is recommended that the air sync master is placed centrally within the set of base stations.

Where possible, each base station should be placed within synchronization range of more than one base station, which allows the base stations to maintain synchronization should one base station fail or be switched off for maintenance. The process of synchronizing by the shortest route to the air sync master when in synchronization range of multiple base stations is automatic.

To configure Air Sync:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#).
- In the left-hand panel, select **DECT**. Select the **Air Sync** tab.

- Set the **Sync Mode** to **Master**.
- Click **OK**.

Advanced Scenario: Separated Locations

In most scenarios, the master base station is also used as the air sync master for all the other slave base stations and that is the scenario documented in this manual. However, in scenarios where you have base stations in separate locations that are not within synchronization range of each other, it is permissible to assign separate air sync masters in each location. However, there must be absolutely no overlap (<-90dB) between the separate groups of base stations. Any overlap will cause frequent loss of synchronization.

Having separate locations, each with its own synchronization, is done through the settings on the **DECT | Air Sync** tab of each base station. For each location, set the same **Sync Region** number for all the base stations at that location, using a different number for each location. In addition, use the **Sync Mode** drop-down menu to configure one of the base stations in each location as the **Master** base station.

Configuring Air Sync in Separated Locations

- For each base station in the system, configure a **Sync Region** number under the **DECT | Air Sync** tab in the Device Manager and click **OK**.
All the base stations in a single region should contain the same **Sync Region** number, but each Sync Region must have its own unique number. By default, **Sync Region = 0**, which means that no region is defined.
- For each new **Sync Region** created, configure one base station as the **Master** using the **Sync Mode** drop-down menu and click **OK**.
You must configure at least one master base station per region.

3.4 IP Slave Base Station Setup

The slave base station configuration for a provision installation consists of the following steps:

1. [Default the Base Station](#) ⁷⁴.
2. [Determine the Base Station IP Address](#) ⁷⁴.
3. [Access the Base Station Configuration](#) ⁷⁵.
4. [Set the Base Station IP Address](#) ⁷⁶.
5. [Update the Base Station Software](#) ⁷⁷.
6. [Register the Slave Base Station](#) ⁷⁹.

3.4.1 Defaulting the Base Station

This process will default a base station or IP DECT Gateway, erasing its configuration. After the unit restarts it will default to the IP address 192.168.0.1/255.255.255.0. For more information on the base station LEDs and what their statuses indicate, see [Base Station Status Lamps](#) ^[15].

To default a base station:


1. With the unit not connected to anything else, connect the power supply and switch on. The LED on the base station flashes red to indicate that no Ethernet is detected. Otherwise, the LED flashes blue.
2. Wait approximately five seconds.
3. Press and hold the **Reset** button on the base station for approximately 10 seconds. For IPBS2 base stations, the LED on the base station changes to quick flashing blue, then goes out and finally returns to a slow flashing blue.
4. Release the **Reset** button and wait for the base station to reset. The LED should turn back on to solid amber.
5. Quickly press the **Reset** button once. The base station reboots with default settings. The default IP is 192.168.0.1, with DHCP on but not active. If you want to activate DHCP, reset the base station again.

3.4.2 Determining the Base Station IP Address

The address an existing base station or IP DECT Gateway is using can be determined using the following process. It uses the MAC address of the unit, which you can find printed on a label on the back or bottom of the unit.

This procedure requires use of the Command Prompt, for which you *must* have Administrator rights.


To display the base stations IP address:

1. Right-click on the  **Command Prompt** icon (**Programs | Accessories**) and select **Run as administrator**.
2. Enter **nbtstat -R**. The PC should respond that it has purged and reloaded the NBT remote cache table.
 - For a base station, enter **nbtstat -a ipbs-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
 - For a IP DECT Gateway, enter **nbtstat -a ipbl-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
3. The results indicate the IP address the device is currently using.
5. Use that address to access the base stations configuration and set it to a fixed address.

3.4.3 Access the Base Station Configuration

To login to a base station:

- Depending on whether DHCP is being used or not:
 - If connected directly to the base station, change your programming PC's network address to 192.168.0.200 with subnet mask 255.255.255.0. Connect the LAN cable from your PC to the base station.
 - If both your PC and the base station are connected to a LAN network with DHCP server, ensure your PC is set to act as a DHCP client or has a fixed address that is valid on the network.
- Start your web browser and enter the http:// or https:// followed by the IP address of the base station. The default IP address is 192.168.0.1. If a security certificate warning is displayed, select to continue to this website.
- The base station should respond with its initial configuration menu.

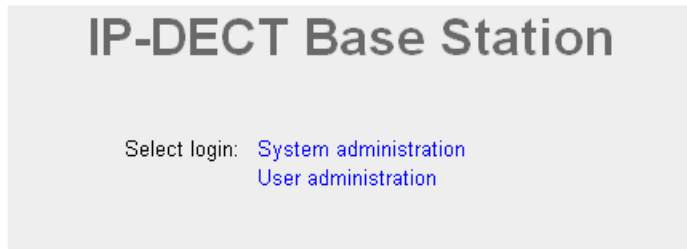

- Select **System administration**. A password entry dialog will be displayed. Enter the default user name (**admin**) and password (**changeme**).
- The configuration menu for the base station is displayed.

Configuration	Info	Admin	NTP	EULA
General				
LAN	Version IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]			
DECT	Serial Number 09AD15300066			
Services	MAC Address (LAN) 00-01-3e-01-6f-9c			
Administration	SNTP Server 192.168.0.210			
Users	Time ** ** ** ** ** **			
Device Overview	Uptime 0d 0h 2m 29s			
Backup	RFP SW version 3.2.10			

- Note the software levels shown in the **Version** screen. These determines whether you need to upgrade the base station software.

3.4.4 Set the Base Station IP Address

By default a base station defaults to 192.168.0.1. The process below can be used to change the DHCP mode and IP address of the base station.

To set the base station IP address:

1. Having browsed into the base station's configuration, in the left-hand column select **LAN**.
2. Select the **IP** tab.

The screenshot shows a configuration window with a sidebar on the left and a main content area. The sidebar has a 'Configuration' section with tabs for 'DHCP', 'IP', 'VLAN', 'Link', and 'Statistics'. Below this are sections for 'General', 'LAN', 'LDAP', 'DECT', 'Unite', 'Services', 'Administration', 'Users', and 'Device Overview'. The 'IP' tab is selected. The main content area is titled 'Active Settings' and contains the following fields:

IP Address	<input type="text" value="192.168.0.226"/>	192.168.0.226
Network Mask	<input type="text" value="255.255.255.0"/>	255.255.255.0
Default Gateway	<input type="text" value="192.168.0.1"/>	192.168.0.1
DNS Server	<input type="text"/>	
Alt. DNS Server	<input type="text"/>	
Check ARP	<input type="checkbox"/>	

At the bottom of the main content area are 'OK' and 'Cancel' buttons.

- a. Enter the required **IP Address** and **Network Mask** for the base station. The other settings are optional.
 - b. Click **OK**.
3. Select the **DHCP** tab.

The screenshot shows the same configuration window as above, but with the 'DHCP' tab selected in the sidebar. The main content area shows a 'Mode' dropdown menu set to 'disabled' and the text 'Currently - disabled'. Below this are 'OK' and 'Cancel' buttons.

- a. Using the **Mode** drop-down, select **Disabled**.
 - b. Click **OK**.
4. The menu will prompt you with the message **Reset Required**. Do not click this or reset the base station at this stage.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.
 5. Log in again using the new IP address.

3.4.5 Update the Base Station Software


The base station may need to be upgraded to the [DECT software](#)^[42] supplied with IP Office administration software. That software consists of two parts, a firmware file and a boot file. All base stations in a DECT system should use the same software.

To update the base station firmware:

1. Browse into the base station's configuration and note the software levels shown by the **Version** line.

Configuration		Info	Admin	NTP	EULA
General					
LAN	Version	IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]			
DECT	Serial Number	09AD15300066			
Services	MAC Address (LAN)	00-01-3e-01-6f-9c			
Administration	Sntp Server	192.168.0.210			
Users	Time	** ** * ** *			
Device Overview	Uptime	0d 0h 2m 29s			
Backup	RFP SW version	3.2.10			

2. Check that these match the versions supplied with the IP Office administration software. Ensure that you are checking against the correct folder for an IPBS1 or IPBS2 base station. If they do not match, then you must upgrade the base station.

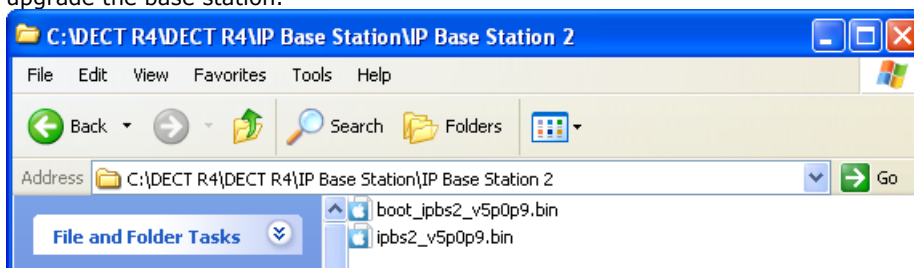

3. If both software files need to be upgraded, the boot file should be upgraded first.

- **To upgrade the boot file:**

In the left-hand column, under the **Administration** menu, select **Update** and then select the **Boot** tab.

Configuration	Config	Firmware	Boot
General			
LAN			
IP			
LDAP			
DECT			
UNITE			
Phonebook			
Administration			
Users			
Device Overview			
DECT Sync			
Traffic			
Backup			
Update			

Upload bootcode to flash

Flash status:
 Bootcode Checksum OK
 Firmware Checksum OK

Do not interrupt bootcode upload! This may leave the bootcode defect.
 If for some reason the bootcode upload was interrupted, repeat the upload before reboot.

Bootcode File:

- **To upgrade the base station file:**
Select **Update** and then select the **Firmware** tab.

The screenshot shows a web-based configuration interface. On the left is a navigation menu with categories: Configuration (General, LAN, IP, LDAP, DECT, UNITE, Phonebook), Administration (Users, Device Overview, DECT Sync, Traffic, Backup, Update). The top navigation bar has tabs for Config, Firmware, and Boot. The 'Firmware' tab is active, showing a section titled 'Upload firmware to flash'. Below the title, it displays 'Flash status: Bootcode Checksum OK, Firmware Checksum OK'. A red warning message reads: 'Do not interrupt firmware upload! This may leave the firmware defect. If for some reason the firmware upload was interrupted, repeat the upload before reboot.' There is a text input field for 'Firmware File:' with a 'Browse...' button next to it, and an 'Upload' button below. A note at the bottom states: '(Note: Upload takes at least 15 seconds)'.

4. Click on the **Browse** button and browse to the **IP Base Station** sub-folder of the IP DECT R4 software you [previously extracted](#) onto the programming PC.
5. Select the appropriate file for the upgrade you are performing, for example the file with boot in the file name if doing a boot file upgrade. Click **Open**.
6. Click on the **Upload** button. The browser shows the progress of the upload and firmware upgrade. It will indicate when the process has been completed.

The screenshot shows the same configuration interface as above, but with the 'Boot' tab selected. The main content area displays a large heading 'Bootcode update complete'. Below the heading, there are two options: 'immediate reset' and 'reset when idle', both in blue text.

7. Click on **immediate reset**. The base station resets. Wait until the status lamps stop flashing.
8. If necessary log in again. The **General | Info** tab should now list the new firmware. If necessary, repeat the process for the firmware using the **Update | Firmware** menu.
9. For a IP DECT Gateway, if necessary, also repeat the process for base station firmware for base stations that will be connected to the IP DECT Gateway using the **Update | RFPs** menu.

Repeat the steps above for any other base stations that are also being installed. All the base stations should use the same firmware.

3.4.6 Register the Slave Base Station

The slave base station needs to register with the master base station. This is done in the master base station configuration.

To register the slave base station with the master:

1. Login to the [master base station](#) ⁽¹⁹⁰⁾.
2. Select **Device Overview** and then select the **Radios** tab.

Configuration	Radios
General	
LAN	
DECT	
Services	
Administration	
Users	
Device Overview	

Static Registrations									
Name ↑	RFPI	IP Address	Sync	Region	Device Name	Version	Connected Time		
IPBS-01-5d-e0	9014CC1008	127.0.0.1	Master	OK	0	13:57]	[4.1.26/4.1.26/IPBS1-Y3/PC]		
Radios: 1, Registrations: 1									
Uninitialized Registrations									
Name ↑	IP Address	Device Name	Version	Connected Time					
IPBS-01-6f-82	192.168.0.225	IP-DECT Base Station	[4.1.26/4.1.26/IPBS1-Y3/PD]	0d 0h 1m 29s Add					

3. The new slave base station is shown as an unregistered device. Click on **Add**.
4. On the popup form that appears, click **OK**.
5. The slave base station will be listed as a registered device. It can take up to two minutes for the base station to synchronize with the master base station. During this time its upper lamp will flash red and the status shows as **Not in sync**. Once it is in sync, the upper lamp is extinguished and the status changes to **OK**.

Configuration	Radios
General	
LAN	
DECT	
Services	
Administration	
Users	


Static Registrations									
Name ↑	RFPI	IP Address	Sync	Region	Device Name	Version	Connected Time		
IPBS-01-5d-e0	9014CC1008	127.0.0.1	Master	OK	0	13:57]	[4.1.26/4.1.26/IPBS1-Y3/PC]		
IPBS-01-6f-82	9014CC2009	192.168.0.225	Slave	OK	0	IP-DECT Base Station	[4.1.26/4.1.26/IPBS1-Y3/PD]		
Radios: 2, Registrations: 2									

3.5 Base Station Mounting

The base station can now be powered down and mounted in its intended operating position. The removable bracket on the back of the base stations can be used for either wall mounting using two screws suitable for the surface or for mounting on columns using two metal bands.

Wall Mounting

Remove the mounting bracket from the base station. Use it as a template for marking the screw fixing holes. Note the diagram below indicating the required clearance for getting the base station onto the mounting bracket.

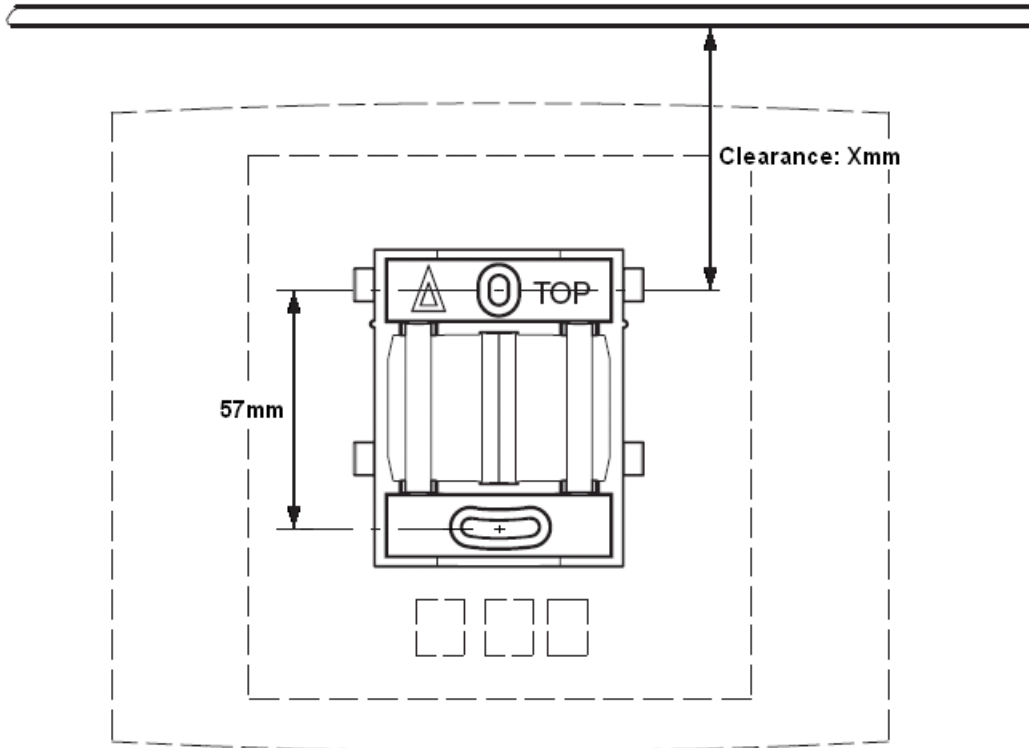

1. Hold the mounting bracket with its flat side against the wall with the text 'TOP' upwards and mark the two holes. Observe the minimum distance between the top screw hole and the ceiling. This depends on the base station type as follows:


Base Station Type	Internal Aerials	External Aerials
IPBS1 or Digital Base Station	65mm	160mm
IPBS2	100mm	195mm

2. Drill the two holes using a 6mm diameter drill and insert the included wall plugs.
3. Position the mounting bracket with its flat side to the wall and fasten it with the two included 3.5mm diameter screws.

Column/Pillar Mounting

The mounting bracket can be fixed to a pole of 45mm diameter or greater, or a beam of 50mm width minimum by using a strap or flexible metal band less than 30 mm wide. A suitable strap or flexible metal band is not included with the base station.

Note: Mounting a wireless base station directly on a steel beam or pillar could result in signal disruptions, such as dead zones or reflections. If it is absolutely necessary to mount the base station on a metallic surface, use spacers to separate the base station from the surface by 20-25 cm.

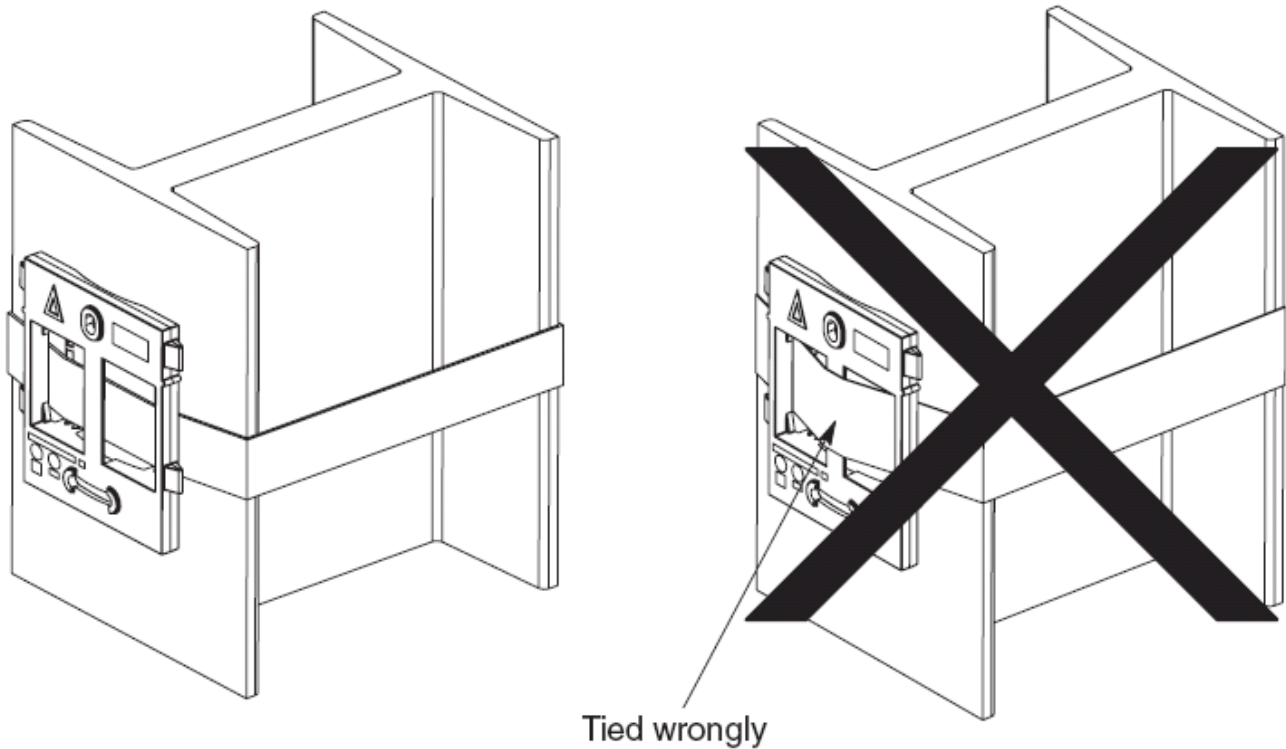

3.6 Phone Subscription

There are two methods of phone subscription; **pre-configured** or **anonymous**.

In both cases, the IP Office configuration should also contain available [Avaya IP Endpoint Licenses](#)^[48]. The PARK code and Authentication Code of the DECT R4 system are required during subscription. The values set on the IP DECT line in the IP Office configuration are used.

Anonymous Phone Subscription

This method is used when the IP Office IP DECT line's **Subscriptions** setting is set to **Auto-Create**. After successfully subscribing, the phone is assigned a temporary extension number just about the highest existing extension number. This can either be accepted or another extension number specified.

- **Subscription Using IP Office Auto-Create**

Allowing phone subscription using the IP Office auto-create options for extensions and or users makes changes to the current running configuration of the IP Office system. For this method to work, you must ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

1. Set the IP DECT line's **Subscriptions** mode to **Auto-Create**. Ensure that the **Auto-Create User** and **Auto-Create Extension** options are also selected.
2. [Subscribe the phone to a temporary extension number](#)^[86].
3. [Accept the temporary extension number \(*#\) or enter an alternate extension number \(XXX*LLL#\)](#)^[86].
4. [Disable subscription when all phones have been subscribed](#)^[95].

Preconfigured Phone Subscription

This method is used when the IP Office IP DECT line's **Subscriptions** setting is set to **Preconfigured**. The SARI and Authentication Code set in the IP Office configuration are used. Using this method, entries for the IP DECT extensions and users must first be created in the IP Office configuration. The matching phones can then be subscribed.

1. Set the IP DECT line's **Subscriptions** mode to **Preconfigured**.
2. [Create an IP DECT extension and user entry for each phone](#)^[84].
3. [Enable DECT subscription](#)^[85].
4. [Subscribe the phones](#)^[86].
5. [Disable subscription when all phones have been subscribed](#)^[95].

Requirements

Information

- Service user name and password for IP Office configuration.
- User names and extension numbers for the DECT phones.
- Phone IPEI numbers if using an pre-configured installation mode.



Tools


- **IP Office Manager.**
- **Device Manager**
The software installed on each handset may need to be upgraded to match that supplied with the [DECT R4 software](#)^[42]. This is done using the Windows Device Manager software to upgrade phones via an advanced charger or using [AIWS Device Manager](#)^[125] to upgrade phones over the air.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.

3.6.1 Enabling IP Office Subscription


The IP DECT line settings control whether DECT handsets are able to subscribe.

To enable IP Office handset subscription:

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Click on the  icon and select **IP DECT Line**. The settings for an IP DECT line are displayed.
3. The **Line** tab will list any DECT extensions already subscribed.

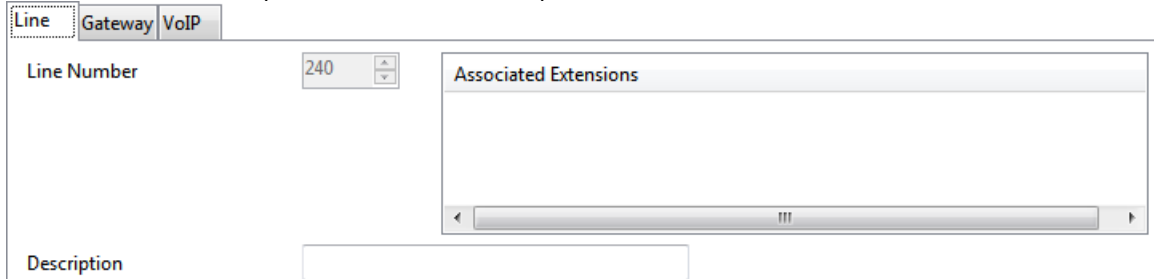

4. Select the **Gateway** tab.

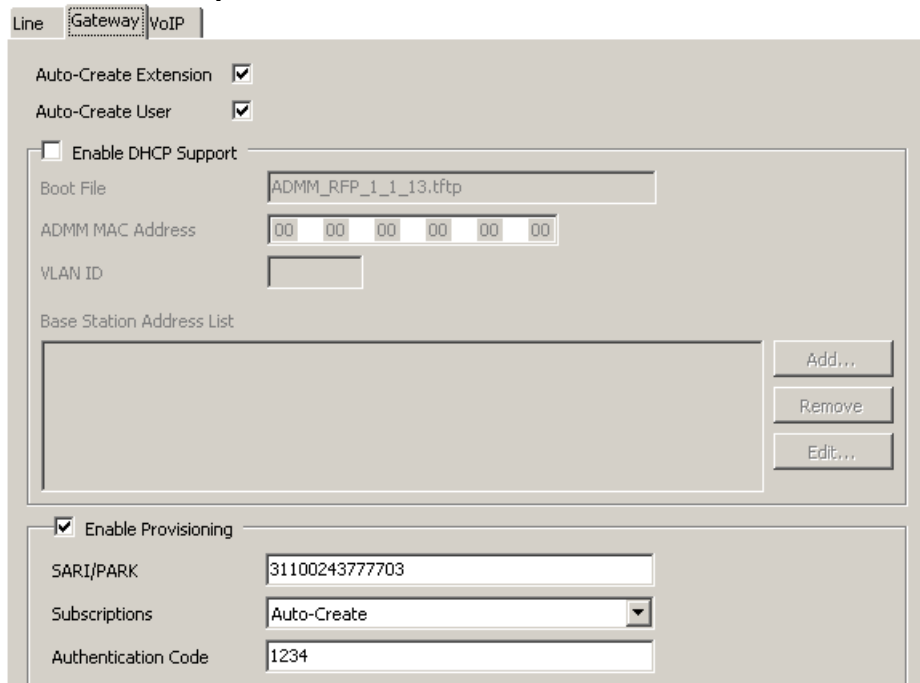

5. Note the values set in the **SARI/PARK** and **Authentication Code** fields. These values are used during the phone subscription.
6. Change the **Subscriptions** mode to either **Auto-Create** or **Preconfigured**.

- **Auto-Create**

If you select this option, extension and user entries are automatically created in the IP Office configuration when the handsets are subscribed. Use this option for anonymous subscription. Ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

- **Preconfigured**

If you select this option, handset will only be able to subscribe if they match an existing IP DECT extension in the IP Office configuration.

7. Save the configuration back to the IP Office system.


3.6.2 Manually Creating Extensions

If the IP DECT line's subscription setting is set to **Preconfigured**, you must manually add extension and user entries for each handset to the IP Office configuration.


To manually add extension and user entries:

1. Using IP Office Manager, retrieve the configuration from the IP Office system.

2. Click on  **Extension**.

3. Click on the  icon and select **IP DECT Extension**. This option is greyed out until an IP DECT line is added to the configuration.


4. Select the **Extn** tab. Set the **Base Extension** number to a currently unused extension number.

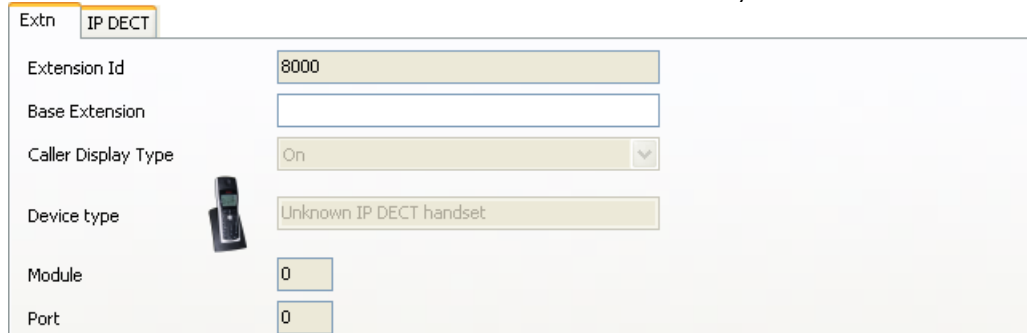

The screenshot shows the 'IP DECT' configuration form. The 'Extn' tab is active. The form contains the following fields and values:

- Extension Id: 8000
- Base Extension: (empty)
- Caller Display Type: On
- Device type: Unknown IP DECT handset
- Module: 0
- Port: 0

5. Select the **IP DECT** tab. Note that the appearance of this tab varies depend on whether the IP DECT line has **Enable Provisioning** selected or not, this example is for provisioning enabled.

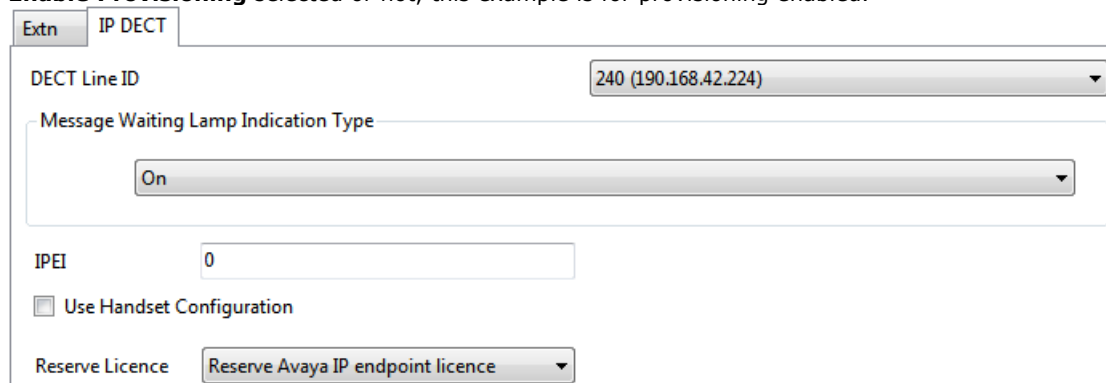

The screenshot shows the 'IP DECT' configuration form with provisioning enabled. The 'IP DECT' tab is active. The form contains the following fields and values:

- DECT Line ID: 240 (190.168.42.224)
- Message Waiting Lamp Indication Type: On
- IPEI: 0
- Use Handset Configuration:
- Reserve Licence: Reserve Avaya IP endpoint licence

a. Set the **Message Waiting Lamp Indication Type** to **On**.

b. Select the **Reserved Avaya IP endpoint license** option. This option will be greyed out if there are insufficient licenses. If this option is selected, the phone will be licensed before any other Avaya IP endpoints for which this option has not been set.

c. Set the IPEI to match that of the handset. For new phones the IPEI is shown on the screen. For other phones it can be displayed by selecting **Menu | Settings | Device Info | IPEI/IPDI**. It is also shown on a label under the battery.

- For 3720, 3725, 3740 and 3749 phones, the IPEI can be displayed by selecting **Menu | Settings | Device Info | IPEI/IPDI**. It is also printed on a label under the phone's battery.

d. If **Use Handset Configuration** is selected, the handset user is able to set the phone language and date/time format. If not selected, those settings are driven by the system or user locale settings in the IP Office configuration.

6. Click **OK**.

7. IP Office Manager will prompt whether you want to create an associated user. Select **Yes**.

8. The user settings are displayed. Adjust any of these if required and click **OK**.

9. Repeat the process to create any other extension and user entries required. Then save the configuration back to the IP Office system.

3.6.3 Enabling DECT Subscription

For pre-configured extensions, whilst the extension setting are automatically obtained by the DECT system through provisioning, it is still necessary to enable a 2 minute window during which subscription of the handset is allowed.

To enable pre-configured phone subscription:

1. Login to the [master base station](#) ^[196].
2. Click **Users** and select the **Users** tab.
3. Click **show**. The tab should list the details of the pre-configured DECT extensions and users on the IP Office system.

No	Display	IPEI / IPDI	AC	Prod	SW	EE	Registration
702	Extn702 702	036470433612	1234				Not Subscribed
701	Extn701 701	036470427078	1234	3725	4.3.3		Subscribed






4. For the unsubscribed handsets, check that the IPEI/IPDI value is shown in **blue**. This is the clickable link that starts the 2 minute subscription window for that handset. If the link does not appear check that the IPEI/IPDI has been entered in the [IP Office configuration for the extension](#) ^[84].
5. Click the IPEI/IPDI link and then [subscribe the handset](#) ^[86].
 - **Tip:** Start the handset subscription process up to the stage where the **OK** button is shown. Only click the link above at this stage and then click **OK** on the handset.
6. Once subscription on the handset has been successful, clicking **show** again should show that phone now as subscribed and also show the type of phone and its software level.
7. Repeat this process for any other new handsets.





3.6.4 Subscribing a Phone

The method of subscription is largely the same regardless of whether the IP Office's [IP DECT line's](#) ⁴⁶ **Subscriptions** setting is set to **Auto-Create** or **Preconfigured**. The SARI and Authentication Code set in the IP DECT line configuration are requested during the subscription process.

3720, 3725, 3740, 3749 Phones

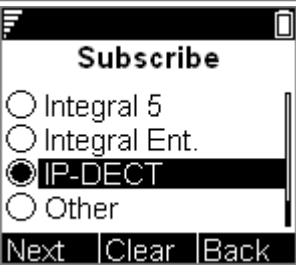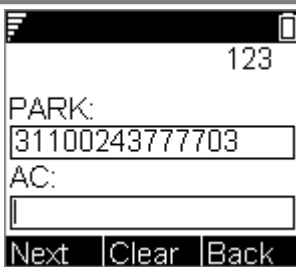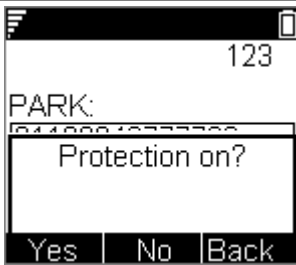
- Switch on the phone:
 - **3720**: Select **Menu | Settings | System | Subscribe**.
 - **3725/3740/3749**: Select **Menu | Connections | System | Subscribe**.

Display	Actions
	<p>Details of the phone's current subscription are displayed. Select Next.</p>
	<p>The System name is just used by the phone to identify the different subscriptions it may have.</p> <p>Enter any name and select Next.</p>
	<p>The phone will display a list of telephone system types to which it can connect. Scroll the selected option to IP-DECT and select Next.</p>
	<p>The phone now requires the PARK (SARI) and AC (authentication code) of the system to which it should subscribe.</p> <p>Enter the PARK and then scroll to the AC field.</p> <p>Enter the AC and select Next.</p>
	<p>The Protection on? prompt is displayed.</p> <ul style="list-style-type: none"> • If you select No, the user can delete the subscription from the list of subscriptions known by the phone. • If you select Yes, the user cannot delete the subscription.

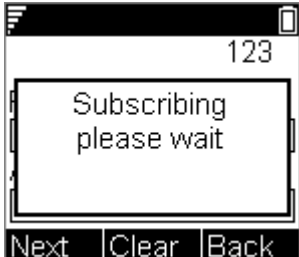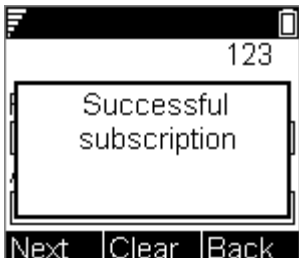
Display	Actions
	<p>A summary of the subscription details is shown. Check that the values are correct</p>
	<p>Select OK. The phone broadcast for DECT systems to which it can subscribe.</p>
	<p>When a DECT system is located, the handset will attempt to subscribe to that system.</p>
	<p>The success or failure of the subscription is indicated.</p>

Press **Back** until the normal display is shown. The display shown after successful subscription will depend on whether anonymous subscription is being used or the phone matches an existing extension in the IP Office configuration.

Auto-Create Subscription Mode

	<p>If the phone displays Enter New Login, it has been assigned a temporary extension number, shown in brackets. The temporary number is simply the highest existing extension number plus 1.</p> <ul style="list-style-type: none"> To accept the temporary extension number as permanent, dial *# and then make the call. To specify a different extension number, dial XXX*LLL# where XXX is the extension number to use and LLL is the Login Code to assign to the user. To accept the temporary extension as permanent but set a login code for the user, dial *LLL# where LLL is the Login Code to assign to the user.
---	---

Preconfigured Subscription Mode/Existing Extension Subscription

	<p>If the phone's IPEI matches an existing extension entry in the IP Office configuration, the phone will use that extension's settings.</p> <p>This may occur even when using anonymous subscription if the phone is an existing extensions re-subscribing to the system.</p>
---	--

3701/3711 Phones


This method is only supported if the IP DECT line's **Subscriptions** setting is set to **Preconfigured** and matching configuration entries for the extensions have been created.

1. Switch on the phone.
2. Select **Menu | System | Subscription | Subscribe HS**.
3. Select **PABX-PIN**.
4. Enter the authentication code.


3.6.5 Upgrading Phones

DECT R4 is supported on a range of Avaya systems. However, for IP Office operation, only software specifically documented as having been tested and supported with IP Office should be used. Details of supported software for any particular IP Office release is included in IP Office Technical Bulletin for that release.

1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
2. Within the Avaya Device Manager, select the **Devices** tab.

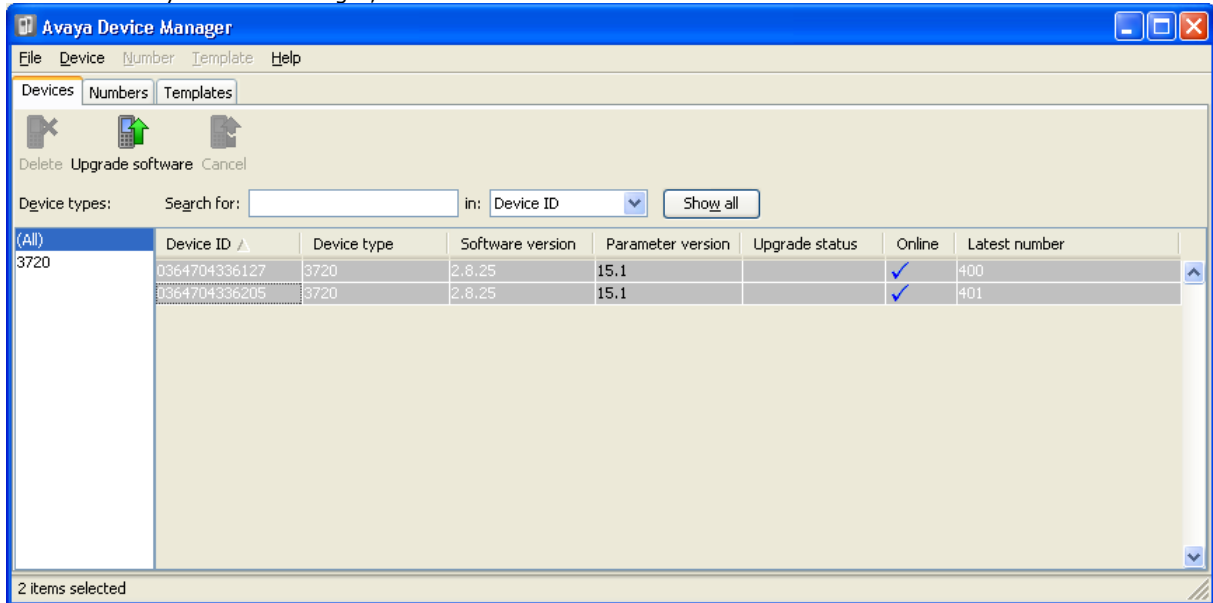


3. The current software version of each phone is shown. Compare this to the software versions available, shown by the version set as part of the .pkg file name included with the [DECT R4 software](#)^[42].

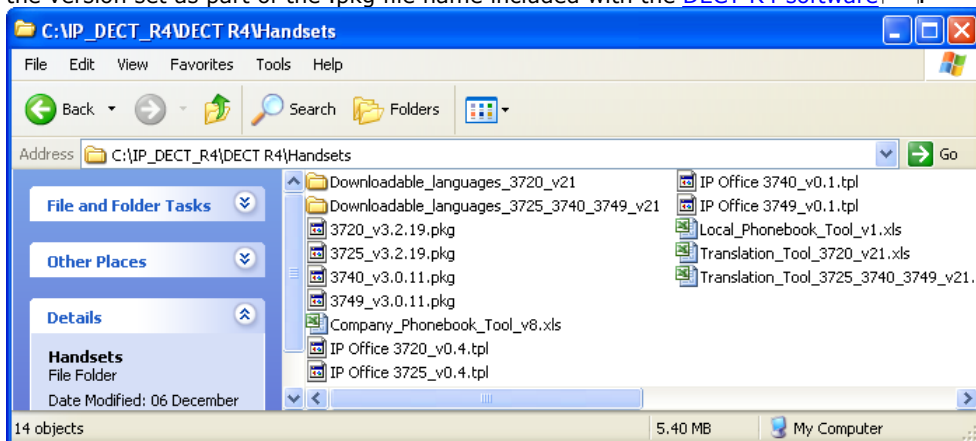

4. In the device manager, select the phones that you want to upgrade.
5. Click **Upgrade Software**. The menu shown will depend on whether you are using the AIWS for an over the air upgrade or WinPDM for an in charger upgrade.


- **AIWS Upgrade Software Menu**

This menu is shown when using the AIWS based device manager to upgrade phones over the air. This method supports a number of additional options but is much slower than upgrading phones in an advanced charger.

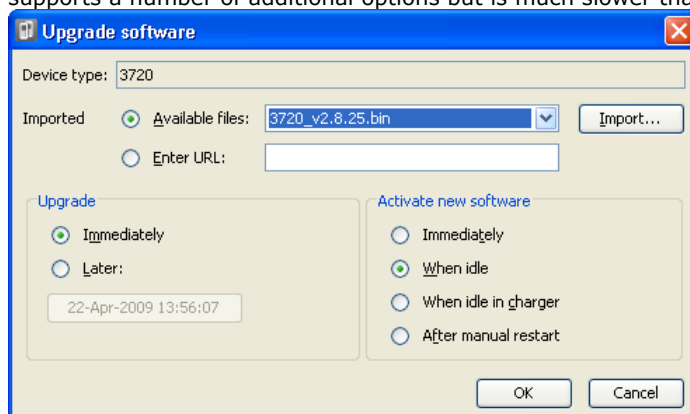

- **Advanced Charger/WinPDM Upgrade Menu**

This menu is shown when using the Windows based device manager to upgrade a phone currently in an advanced charger connected to the PC by USB or LAN. See [Installing Windows Device Manager](#)^[91].

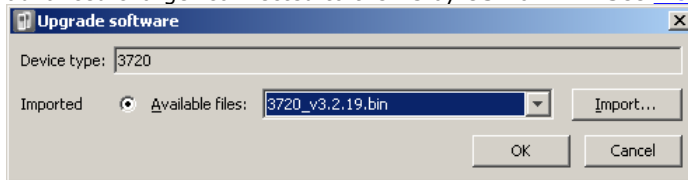

6. If you have already imported the parameter definition files for the phones, use the **Available Files** drop-down to select the software bin file for the type of phone being upgraded. Otherwise click on **Import** and browse to the .pkg files for the phone type.

7. Select the other upgrade settings required and click **OK**.

The upgrade begins. The following images show a typical upgrade as it is being performed on a 3720 device.

(All)	Device ID ▲	Device type	Software version	Parameter version	Upgrade status	Online	Latest number
3720	0364704336127	3720	2.8.25	15.1	Downloading	✓	400
	0364704336205	3720	2.8.25	15.1	Downloading	✓	401

Configuration **System** **Master** **Trunks** **SARI**

General

LAN

DECT

Services

Administration

Users

Device Overview

Backup

Update

Mode: Active

IP-PBX

PBX: IPO

PBX Resiliency:

OK Cancel


reset required

(All)	Device ID ▲	Device type	Software version	Parameter version	Upgrade status	Online	Latest number
3720	0364704336127	3720	2.8.25	15.1	Complete	✓	400
	0364704336205	3720	2.8.25	15.1	Complete	✓	401

3.6.5.1 Installing Windows Device Manager to Upgrade Phones

It may be necessary to upgrade to software used by the 3720, 3725, 3740 and 3749 phones. For new installations it is assumed that the Windows Device Manager and advanced chargers will be used for this.


1. Browse to the location where you unpacked the IP Office software for DECT R4. Locate the **Avaya WinPDM** folder and double-click **Setup.exe**.

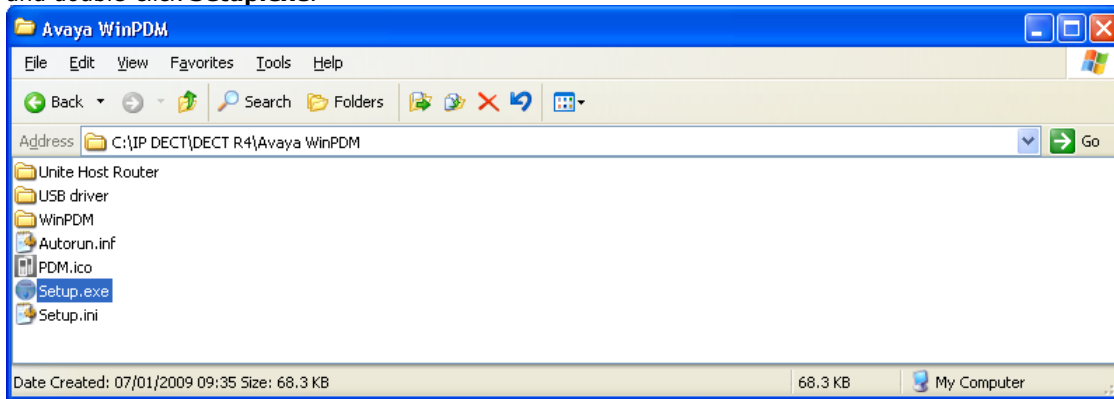


2. Click **Next**.




3. Select **Avaya WinPDM** and click **Next**.

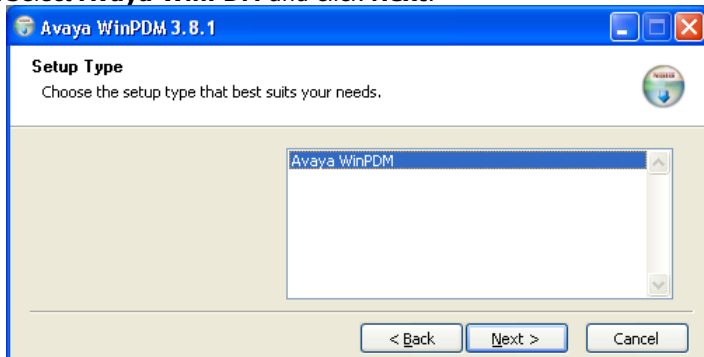


4. Click **Install**.

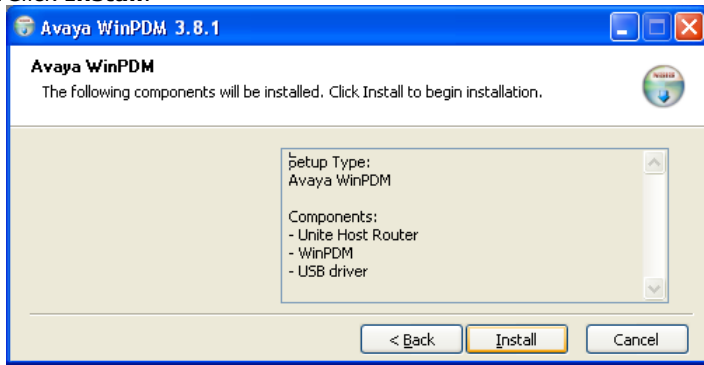

Wait for the Avaya WinPDM to install.

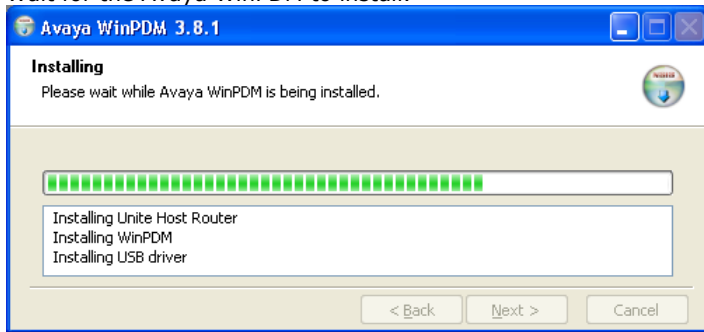

5. When the installation completes, click **Finish**.

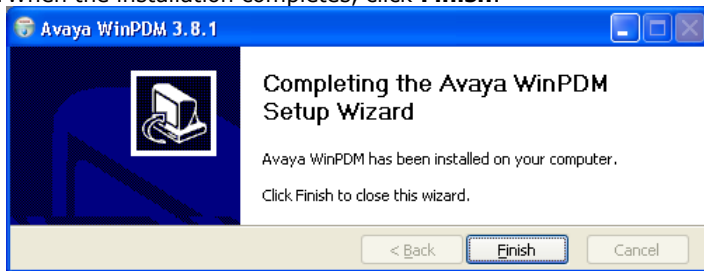

3.6.5.2 Starting Windows Device Manager

1. Select **Start | All Programs | Avaya WinPDM**.


2. Click on the **Avaya WinPDM** icon.

- If this is the first time that Avaya WinPDM has been run, you will be asked to create a site. Enter a name for the site that you have been installing and click **OK**.
- If this is the first time that Avaya WinPDM has been run, you will be prompted to import parameter definition files.


3.6.5.3 Loading Parameter Definition Files

The parameter definition files supplied with the DECT R4 software include software files used to update the phone software. These files must be uploaded to WinPDM in order to allow phones to be upgraded.


1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
2. Select **File | File management**.

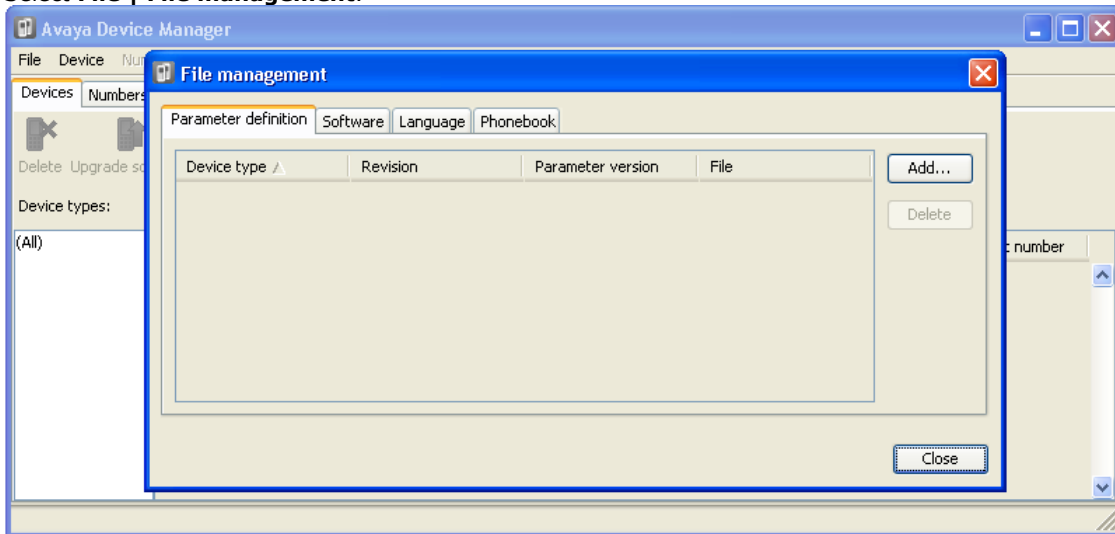


3. Select the **Parameter definition** tab.
4. Click **Add...**. Browse to the **Handsets** folder in the software previously unpacked. Select the **.pkg** files in the folder and click **Open**.

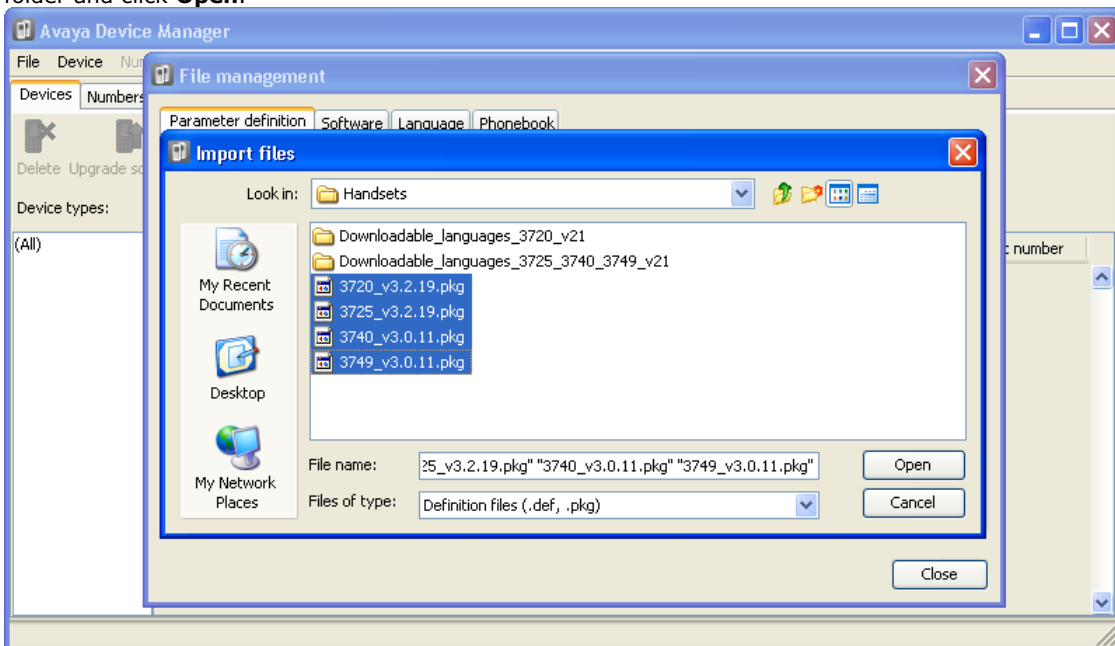

5. Click **Add...** again. Browse to the **Chargers** folder in the software previously unpacked. Select the **.pkg** files in the folder and click **Open**.

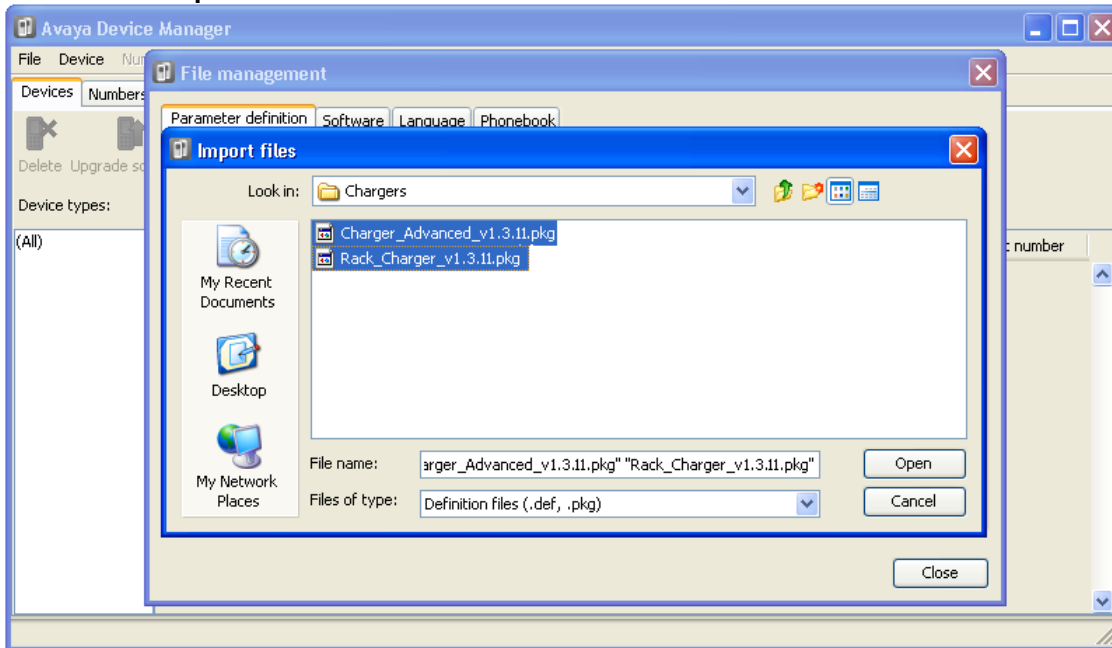

6. The list of parameter definition files should now be complete.

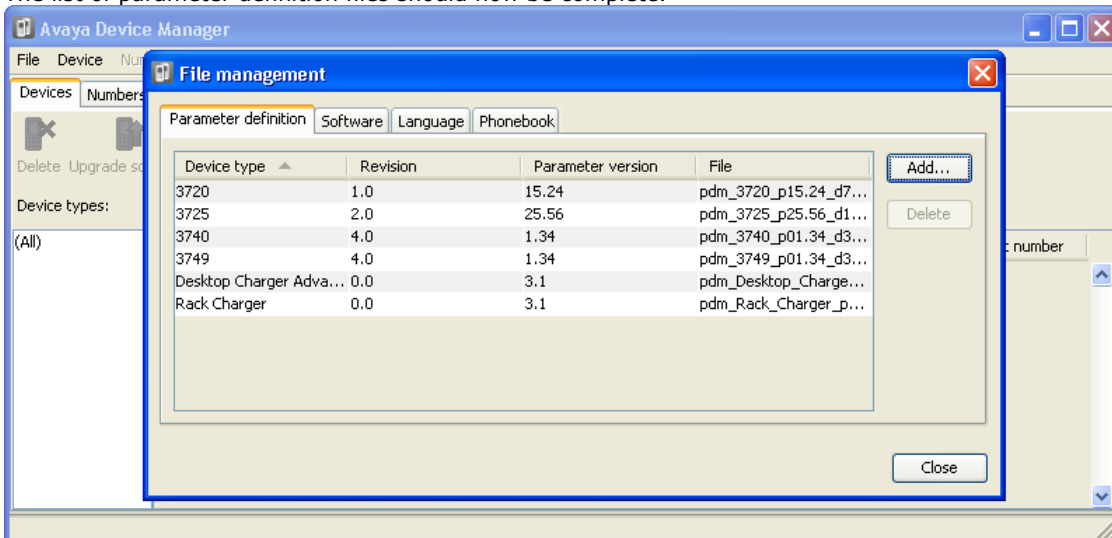


7. Select **Close**.

3.6.6 Disabling IP Office Subscription

Subscription can be disabled. This does not affect re-subscription by extensions that are already configured in the IP Office configuration.

Ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Select the **IP DECT Line** previously created.
4. Click on the **Gateway** tab.
5. Change the **Subscriptions** setting to **Disabled**.
6. Save the configuration back to the IP Office system.

3.6.7 Displaying Subscribed Users



There are a number of ways to display the phones subscribed to the system.

Using the Master Base Station

1. Login to the master base station.
2. Select Users and select the Users tab.
3. Click on **show**. Details of the subscribed phones are shown.

The screenshot shows a web interface with a left-hand navigation menu and a main content area. The navigation menu includes 'Configuration', 'Administration', and 'Users'. Under 'Configuration', there are sub-menus for 'General', 'LAN', 'IP', 'LDAP', 'DECT', 'UNITE', 'Phonebook', and 'Users'. The 'Users' sub-menu is selected. The main content area has tabs for 'Users' and 'Anonymous', with 'Users' being active. It displays details for a user named 'PARK' with a 3rd party number '2110024755' and a 'Master Id' of '0'. There is a 'show' button next to the Master Id. To the right, there are sections for 'User Administrators' (showing 0) and a table of 'Users' (showing 1). The table has columns for 'No', 'Display', 'IPEI / IPDI', 'AC', 'Prod', 'SW', and 'Registration'. One user is listed with 'No' 660, 'Display' 'Extn660 660', 'IPEI / IPDI' '036470433620', 'AC' '1234', 'Prod' '3720', 'SW' '3.2.19', and 'Registration' 'Subscribed'.

Using IP Office Manager

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Click on the  icon and select **IP DECT Line**. The settings for an IP DECT line are displayed.
4. On the **Line** tab there are no adjustable settings. Once the system is installed and operational, this tab lists the DECT extensions.

The screenshot shows the 'Line' configuration page in IP Office Manager. At the top, there are three tabs: 'Line', 'Gateway', and 'VoIP', with 'Line' being the active tab. Below the tabs, there is a 'Line Number' field with a dropdown menu showing '240'. To the right of this field is an 'Associated Extensions' section, which is currently empty. Below the 'Line Number' field is a 'Description' field, which is also empty.

Using the IP Office System Status Application

The System Status application lists DECT extensions as a subset of H.323 extensions. It can also be used to force the unsubscription of a phone.

Home Extension Number	Telephone Type	Registration
6001	3725	Subscribed

3.6.8 Unsubscribing Phones

DECT phones can subscribe to multiple DECT systems and can then be switched between the system to which they are currently subscribed.

The **Unsubscribe** option provided through phone menus does not unsubscribe a phone from the DECT R4 system or IP Office. It just removes details of the subscribed system from the phone. The Unsubscribe function only works for subscriptions where the **Protection** option was set to **No** during the original [subscription](#)^[86].

Resubscribing the phone reinstates the DECT R4 system in the list of systems of which the phone can select to be currently subscribed.

To remove a phone from a system that is used IP Office provisioning, the phone's extension entry should be deleted from the IP Office configuration. To remove a phone from a system that is not using IP Office provisioning, the phone's extension entry must be deleted from both the IP Office configuration and the master base station configuration.

Chapter 4.

DECT Resilience

4. DECT Resilience

IP Office Release 9.1 introduces two methods for ensuring continued DECT availability. Both methods can be combined to ensure maximum availability. In both case, it is recommended that normal installation of the DECT R4 system is completed and tested before then adding mirroring and or switch resilience.

- **Master Base Station Mirroring:** ⁽¹⁰⁴⁾

It is now possible to configure two base stations to act as 'mirrored' master base stations. One becomes the active master base station whilst the other becomes a standby master base station. If for any reason the active master base station becomes unavailable, the IP Office switches to using the standby master base station to continue DECT operation. Mirroring is not supported between compact and non-compact base stations. However, it is supported between a IP DECT Gateway and non-compact base station.

- **IP Office Switch Resilience:** ⁽¹⁰⁴⁾

The IP Office controlling the DECT system can be configured to allow that control to be automatically passed to another IP Office system when it is not available. The SCN line between the two systems can be configured to allow DECT backup for resiliency scenarios in the same was as existing resilience for H.323 IP telephones. If for any reason the primary IP Office system becomes unavailable, DECT control and users are switched to the backup IP Office system.

- Currently this feature is only supported on IP Office lines with the **Transport** option set to **Proprietary**.

4.1 Configuring Base Station Mirroring

To increase resilience of the DECT network, two base stations can be configured to operated as 'mirrored' master base stations. Only one is the active master base station at any time, however the other takes over as the master base station when required.



All the normal requirements for the master base station apply to both the mirrored base stations. That includes the air sync requirements unless air sync is assigned to another base station. See [Configuring Air Sync](#)⁷².

Mirroring is not supported between compact and non-compact base stations. However, it is supported between a IP DECT Gateway and non-compact base station.

4.1.1 Configuring the IP Office

In the IP Office system, the IP DECT line needs to be configured with the IP addresses of both of the mirrored base stations.

To configure the IP Office for mirroring:

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Click on the  icon and select **IP DECT Line**. The settings for an IP DECT line are displayed.
4. Select the IP DECT line and select the **VoIP** tab.

Line	Gateway	VoIP
Gateway IP Address	172 . 29 . 40 . 29	<input type="checkbox"/> VoIP Silence Sup
Standby IP Address	172 . 29 . 40 . 30	<input checked="" type="checkbox"/> Allow Direct Me

- a. In the **Gateway IP Address** and the **Standby IP Address**. field enter the IP addresses of the two base stations that will be mirrored.
- b. Save the changes.

4.1.2 Configuring the Mirrored Base Stations

Use the following process to configure the master base station and its mirror.

To configure the mirrored base stations:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#).

- Login to the first master base station.
- Select **DECT** and then select the **Master** tab.

Configuration	System	Suppl. Serv.	Master	Trunks	Radio	Radio config	PARI	SARI	Air Sync
General									
LAN									
IP									
LDAP									
DECT									
Unite									
Services									
Administration									
Users									
Device Overview									
	Mode	<div style="border: 1px solid gray; padding: 2px;"> Mirror 172.29.40.28 Off Active Standby Deployment Mirror </div>							
	Mirror Master IP Address	172.29.40.28							
	Mirror Status	Active Connected to 172.29.40.28							
	IP-PBX								
	PBX	IPO							
	PBX Resiliency	<input checked="" type="checkbox"/> System in Provisioning Mode							
	Protocol	H.323/XMobile							
	ARS Prefix								

- Set the **Mode** to **Mirror**.
- Set the **Mirror Master IP address** field to the IP address of the other based station.
- Click **OK**.

- Select the **DECT | Radio** tab.

Configuration	System	Suppl. Serv.	Master	Trunks	Radio	Radio config	PARI	SARI
General								
LAN								
IP								
LDAP								
DECT								
Unite								
Services								
Administration								
Users								
Device Overview								
DECT Sync								
	Disable	<input type="checkbox"/>						
	Master Name	DECT						
	Master Password	••••••••						
	Master IP Address	172.29.40.29						
	Alt. Master IP Address	172.29.40.28						
	Status	Connected to Master 172.29.40.29						
	Max RTP Streams							
	Number of Streams							

- In the **Master IP Address** field, enter the base station's own IP address.
- In the **Alt. Master IP Address** field, enter the IP address of the other master base station.
- Click **OK**.

- Reset the base station.

- Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
- Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.

- Repeat this process for the other mirrored base station.

4.1.3 Activating the Master Base Station

Only one base station in the mirrored pair acts as the master base station at any time. The initial selection is done through the base station menus of the selected member of the mirrored pair.

To select the active mirror:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].
1. Login to one of the mirrored master base stations.
 2. Select **DECT** and then select the **Master** tab.
 3. Click **Activate mirror**. That base station is made the currently active master base station in the mirrored pair.

4.2 Configuring Switch Resilience

For IP Office systems in a multi-site network such as a Small Community Network or IP Office Server Edition network, control of the IP Office's DECT system can be transferred to another IP Office system. This fallback occurs when the master base station cannot detect its primary IP Office system, that is the IP Office system configured with an IP DECT line to it.

During fallback, the specified fallback IP Office system takes control and hosts the DECT extensions and users that were previously on the primary IP Office system. However, no changes to the DECT configuration or additional handset subscriptions are allowed.

The fallback IP Office system can still host its own DECT R4 system using its own IP DECT line and master base station. When that is the case, it can only support fallback from another system up to its maximum capacity of DECT users including its existing native DECT users (384 on a IP500 V2, 400 on a Linux based system).

- Currently this feature is only supported on IP Office lines with the **Transport** option set to **Proprietary**.

For a provisioned installation:

- The centralized phone book is still supported after fallback. However, this does not apply to the phone book if being provided by an AIWS.
- An **R** is displayed on the DECT phones (3720, 3725, 3740 and 3749) when they are in fallback.
- By default DECT control and extensions automatically return to the primary IP Office system when it is available again.

For a non-provisioned installation:

- The centralized phonebook is not supported during fallback.
- The handsets do not display any indication that their system is in fallback.

4.2.1 Provisioned Base Station Configuration

For a provisioned installation, the master base station needs to be configured to accept a provisioning connection from the backup IP Office system.

To configure the provisioned master base station for IP Office resilience:

1. Login to the master base station.
 - This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].
2. Select **Services** and then select the **Provisioning** tab.

Configuration	Update	Logging	HTTP	HTTP Client	SNMP	Provisioning	Phonebook
General	Current view Redundant ▾						
LAN	Enable <input type="checkbox"/> Use HTTPS <input checked="" type="checkbox"/> PBX IP Address <input type="text"/>						
IP	General HTTP settings Base directory <input type="text" value="/system/ipdect/"/> User Name <input type="text" value="IPDECTService"/> Password <input type="password" value="••••••"/>						
LDAP	Update service sub directory and file name Command File <input type="text" value="update_service"/>						
DECT	Provisioning sub directory and file name System data <input type="text" value="system_data"/> User data <input type="text" value="extension_data?id="/>						
Unite	Status Inactive						
Services	<input type="button" value="OK"/> <input type="button" value="Cancel"/>						
Administration							
Users							
Device Overview							
DECT Sync							
Traffic							
Backup							
Update							
Diagnostics							
Reset							

3. Set the **Current View** to **Redundant**.
 - a. Select the **Enable** option.
 - b. The IP Office [security settings](#)^[44] control whether HTTPS is supported between the master base station (by default it is supported) and the backup IP Office system.
 - c. Set the **PBX IP Address** to match the backup IP Office system.
 - d. In the **User Name** and **Password** fields, set the details that match the fallback IP Office system's service user configured for IP DECT. See [Security Settings](#)^[44].
 - e. Ensure that the **Base directory** is set to **/system/backupipdect/** instead of **/system/ipdect/**.
 - f. Click **OK**.
4. Reset the base station.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.

4.2.2 Non-Provisioned Base Station Configuration

For non-provisioned systems, the master base station needs to be configured with details of a redundant trunk connection to the fallback IP Office and when to use that trunk.

To configure the non-provisioned master base station for IP Office resilience:

1. Login to the master base station.
 - This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].
2. Select **DECT** and then select the **Master** tab.

The screenshot shows the 'Master' tab configuration window. On the left is a navigation menu with 'DECT' selected. The main area contains the following fields:

- Mode: Active (dropdown)
- IP-PBX: (checkbox)
- PBX: IPO (dropdown)
- PBX Resiliency:
- Protocol: H.323/XMobile (dropdown)
- ARS Prefix: (text input)
- International CPN Prefix: (text input)
- National CPN Prefix: (text input)

Buttons for 'OK' and 'Cancel' are at the bottom.

3. Enable the **PBX Resiliency** and click **OK**.
4. Select the **Trunks** tab. Options for configuring the redundant trunk to the backup IP Office system are now displayed.

The screenshot shows the 'Trunks' tab configuration window. On the left is a navigation menu with 'Trunks' selected. The main area contains the following sections:

- Trunk Settings**
 - Prioritize primary trunk(s):
 - Status Inquiry period: 90 (text input)
 - Supervision timeout: 600 (text input)
- Trunk List**

Primary Trunks				
Name	Local Port	CS IP Address	CS Port	Status
Trunk1	1720	192.168.0.214	1720	Up
Redundant Trunks				
Name	Local Port	CS IP Address	CS Port	Status

Buttons for 'OK' and 'Cancel' are at the bottom.



5. In the **Trunk Settings** section, configure how fallback should operate:
 - **Prioritize primary trunk**
If selected, when during fallback the master base station detects that the primary IP Office has returned to normal operation, it returns DECT control to it. If not selected, the fallback IP Office retains control until it is manually returned using [System Status Application](#)^[109].
 - **Status Inquiry Period**
This field set how frequently (in seconds) the master base station should check the status of the primary IP Office. This value and the **Status Enquiry Period** set in the IP Office system configuration should match.
 - **Supervision Timeout**
This field sets how long after contact is lost (in seconds) before the master base station should fallback to the fallback IP Office system. This option is only supported a provisioned installation.

6. In the **Redundant Trunks** settings, set the port fields to **1720** and the **CS IP Address** to the IP address of the fallback IP Office system.
7. Click **OK** and reset the base station.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.

4.2.3 IP Office Configuration for Switch Resilience

For DECT switch resilience, the IP Office is configured as shown below. Only the primary IP Office needs this configuration. However, for provisioned systems, the security service user on the fallback IP Office must be [enabled and configured](#)^[44] to match the settings entered for the [redundant provisioning connection](#)^[105].

To configure the IP Office for DECT switch resilience:

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Click on the  icon and select **IP DECT Line**. The settings for an IP DECT line are displayed.
4. Select the **Gateway** tab.
5. Find the **Enable Resiliency** section.



The screenshot shows a configuration window for an IP DECT Line. The 'Gateway' tab is selected. In the 'Enable Resiliency' section, the following settings are visible:

- Enable Resiliency
- Status Enquiry Period: 30
- Prioritize Primary
- Supervision Timeout: 120

6. Select **Enable Resiliency**.
7. Only change the other values if necessary:
 - **Status Enquiry Period**
This field set how frequently (in seconds) the master base station should check the status of the primary IP Office. For a non-provisioned installation, this value should match the **Status Inquiry Period** set in the master base station.
 - **Prioritize Primary**
If selected, when during fallback the primary IP Office returns to normal operation, DECT control is automatically returned to it. If not selected, the fallback IP Office retains control until it is manually returned using [System Status Application](#)^[109].
 - **Supervision Timeout**
This field sets how long after contact is lost (in seconds) before the master base station should fallback to the fallback IP Office system. This option is only accessible here for a provisioned installation. For a non-provisioned installation the value is set through the master base station.
8. Click **OK**.
9. Save the settings back to the IP Office system.

To configure the IP Office (SCN) line for DECT resilience:

- Currently this feature is only supported on IP Office lines with the **Transport** option set to **Proprietary**.
1. Using IP Office Manager, load the configuration of the main IP Office system.

2. Locate and select the **IP Office** line between the primary system and the backup system.

Line Short Codes VoIP Settings T38 Fax

Line Number	17	Telephone Number	
Transport Type	Proprietary	Prefix	
Networking Level	SCN	Outgoing Group ID	241
		Number of Channels	20
		Outgoing Channels	20

Gateway		Port	1720
Address	172.29.40.105	SCN Backup Options	
Location	2: Bratislava	<input checked="" type="checkbox"/> Supports Fallback	
		<input checked="" type="checkbox"/> Backs up my IP Phones	
		<input checked="" type="checkbox"/> Backs up my Hunt Groups	
		<input checked="" type="checkbox"/> Backs up my Voicemail	
		<input checked="" type="checkbox"/> Backs up my IP Dect Phones	

3. In the **SCN Backup Options** section, select **Supports Fallback** and **Backs up my IP Dect Phones**.

4. Click **OK**.

5. Save the settings back to the IP Office system.

4.3 Viewing and Controlling Resilience

Using System Status Application you can view the status of both an IP Office system and also any DECT systems to which it is connected. This is done by selecting **System | IP DECT Systems**. Selecting the IP DECT System then displays details of the particular system and extensions being supported by that system.

The addresses and status of the mirrored master base stations is indicated. For the extensions, the connect being used is also indicated.

AVAYA IP Office System Status

Help Snapshot LogOff About

System

- Hard Disks
- H.323 Extensions
- IP DECT Systems (1)
 - IP DECT System 220
- Alarms (9)
- Extensions (3)
- Trunks (0)
- Active Calls
- Resources
- Voicemail
- IP Networking
- Locations

IP DECT System Status

Node Address: 172.29.40.17
 Type: DECT R4
 Master IP Address: 172.29.40.33
 Master Status: Up
 Standby Master IP Address: 172.29.40.34
 Standby Master Status: Up

Extensions:

Extension Number	Telephone Type	Active Location	Connection
705		LOCAL	Primary PBX - Master
706		LOCAL	Primary PBX - Master
707		LOCAL	Primary PBX - Master
708		LOCAL	Primary PBX - Master
709		LOCAL	Primary PBX - Master
710		LOCAL	Primary PBX - Master
711		LOCAL	Primary PBX - Master
712		LOCAL	Primary PBX - Master
713		LOCAL	Primary PBX - Master
714		LOCAL	Primary PBX - Master
715		LOCAL	Primary PBX - Master

Pause Switch to Primary Node Switch to Backup Node Unsubscribe

16:43:28 Online

The menu provides a number of controls:

- **Unsubscribe:**
Force the selected extension to unsubscribe.
- **Switch to Backup Node:**
Force the DECT connection to switch from the primary IP Office to the fallback IP Office.
- **Switch to Primary Node:**
Force the DECT connection to switch from the fallback IP Office to the primary IP Office.

Chapter 5.

IP DECT Gateway Installation

5. IP DECT Gateway Installation

Before installation ensure that you have performed an assessment of the [power consumption requirements](#)^[113] of the digital base stations. This will determine whether the base stations can be powered directly by the IP DECT Gateway or each need their own separate power adapters. If powered using separate power adapters, the EPP power wires from the IP DECT Gateway should not also be connected.

IP DECT Gateway Installation Summary

The configuration process for the IP DECT Gateway is very similar to that for an IP base station. In a new DECT R4 system installation, we recommend that the IP DECT Gateway is installed as the master base station for the system. This does not affect the allowed number of IP and or digital base stations.

The installation of a IP DECT Gateway as a master base station can be done as part of either a [provisioned installation](#)^[40] or [non-provisioned installation](#)^[182] installation. If the IP DECT Gateway is being added to an existing system, it can be added in the same way as for a new slave base station.

A summary of the installation stages is as follows:

1. Install in rack.
2. Attach power cable.
3. Connect the unit to the LAN using the LAN1 port.
4. Connect the digital base station cables.
5. Power on the unit.
6. Access and configure the unit in the same way as for a base station. The configuration required will depend on whether the IP DECT Gateway is being used as a master base station for the system.

5.1 Digital Base Station Power Consumption

The IP DECT Gateway can be used to power digital base stations via the same cable connection as used for signalling. However, the maximum power provision of the IP DECT Gateway is 15W and the power consumption of each digital base station is dependent on the cable wire size and length. The table below indicates the power consumption and can be used to calculate if the IP DECT Gateway can directly power the digital base stations. In cases where the IP DECT Gateway cannot directly power all the digital base stations, some of the base stations will need a separate power connection.

Cable Length in Meters	0.4mm Wire Diameter		0.5mm Wire Diameter		0.6mm Wire Diameter	
	0 EPP	1 EPP	0 EPP	1 EPP	0 EPP	1 EPP
0	5.0	5.0	5.0	5.0	5.0	5.0
100	5.2	5.1	5.1	5.1	5.1	5.1
200	5.3	5.2	5.2	5.1	5.1	5.1
300	5.6	5.3	5.3	5.2	5.2	5.1
400	5.8	5.5	5.5	5.3	5.3	5.2
500	6.1	5.6	5.6	5.4	5.4	5.2
600	6.5	5.8	5.8	5.5	5.4	5.3
700	7.1	6.0	6.0	5.6	5.5	5.3
800	8.1	6.2	6.2	5.7	5.6	5.4
900	–	6.5	6.5	5.8	5.7	5.4
1000	–	6.9	6.9	5.9	5.8	5.5
1100	–	7.3	7.3	6.1	5.9	5.6
1200	–	8.1	8.1	6.2	6.1	5.6
1300	–	–	–	6.4	6.2	5.7
1400	–	–	–	6.6	6.4	5.8
1500	–	–	–	6.9	6.6	5.8


The following power supply adapters are available to power a base station locally. The maximum length of cable from the adapter to the base station must not exceed 10 meters.

- **For European countries:** Version 130137B.
- **For the United Kingdom:** Version 130136B.
- **For the United States and Canada:** Version 130138A.
- **For Australia:** Version 130139B.

5.2 Installing the Digital Base Stations

Apart from the physical connection and power requirements, no configuration is required. The appropriate firmware files are automatically provided to the base stations by the IP DECT Gateway.

Use the following cable pin-out to prepare the cable for connecting the digital base station to the IP DECT Gateway. Remember to allow sufficient cable length to allow for any potential repositioning of the base stations that may be required.

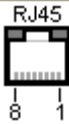
Base Station	Pin	MDI (Crossover)	Wire	Note
	1	Power	White/Orange	On connection if using the IP DECT Gateway for power. Do not connect if powering the digital base station using a separate power supply adapter. Refer to Digital Base Station Power Consumption .
	2	Power.	Orange/White	
	3	Data 1a.	White/Green	-
	4	Data 0a.	Blue/White	-
	5	Data 0b.	White/Blue	-
	6	Data 1b.	Green/White	-
	7	Not used.	White/Brown	-
	8	Not used.	Brown/White	-

Mounting

The base station can now be powered down and mounted in its intended operating position. The removable bracket on the back of the base stations can be used for either wall mounting using two screws suitable for the surface or for mounting on columns using two metal bands.

Wall Mounting

Remove the mounting bracket from the base station. Use it as a template for marking the screw fixing holes. Note the diagram below indicating the required clearance for getting the base station onto the mounting bracket.

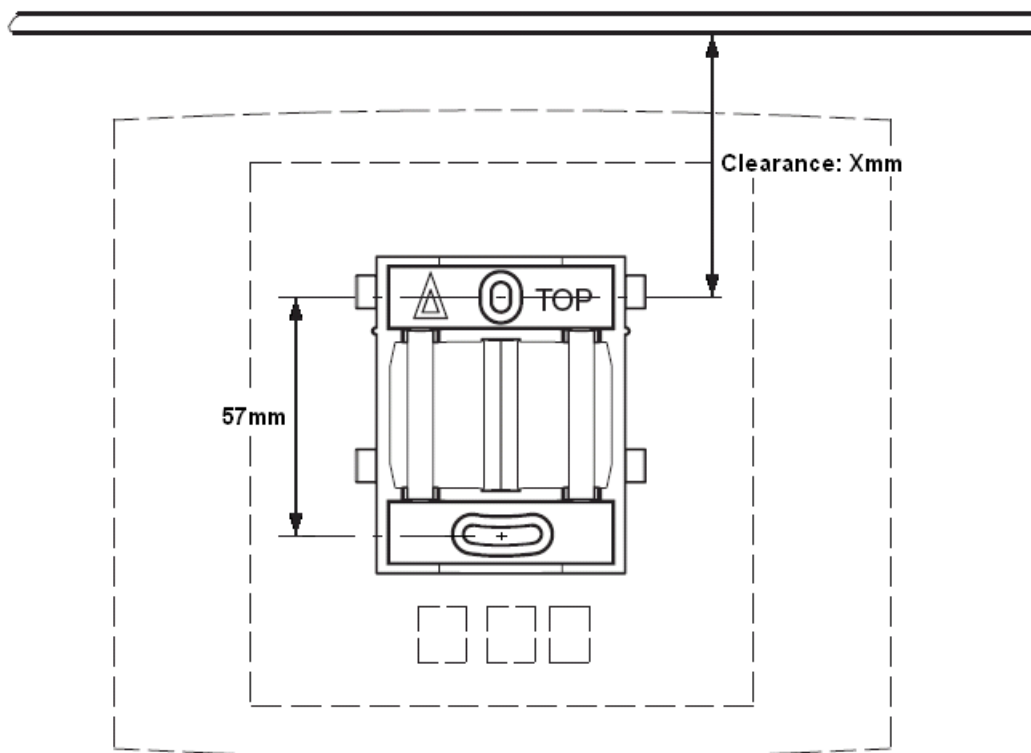

1. Hold the mounting bracket with its flat side against the wall with the text 'TOP' upwards and mark the two holes. Observe the minimum distance between the top screw hole and the ceiling. This depends on the base station type as follows:

Base Station Type	Internal Aerials	External Aerials
IPBS1 or Digital Base Station	65mm	160mm
IPBS2	100mm	195mm


2. Drill the two holes using a 6mm diameter drill and insert the included wall plugs.

3. Position the mounting bracket with its flat side to the wall and fasten it with the two included 3.5mm diameter screws.

Column/Pillar Mounting

The mounting bracket can be fixed to a pole of 45mm diameter or greater, or a beam of 50mm width minimum by using a strap or flexible metal band less than 30 mm wide. A suitable strap or flexible metal band is not included with the base station.

Note: Mounting a wireless base station directly on a steel beam or pillar could result in signal disruptions, such as dead zones or reflections. If it is absolutely necessary to mount the base station on a metallic surface, use spacers to separate the base station from the surface by 20-25 cm.

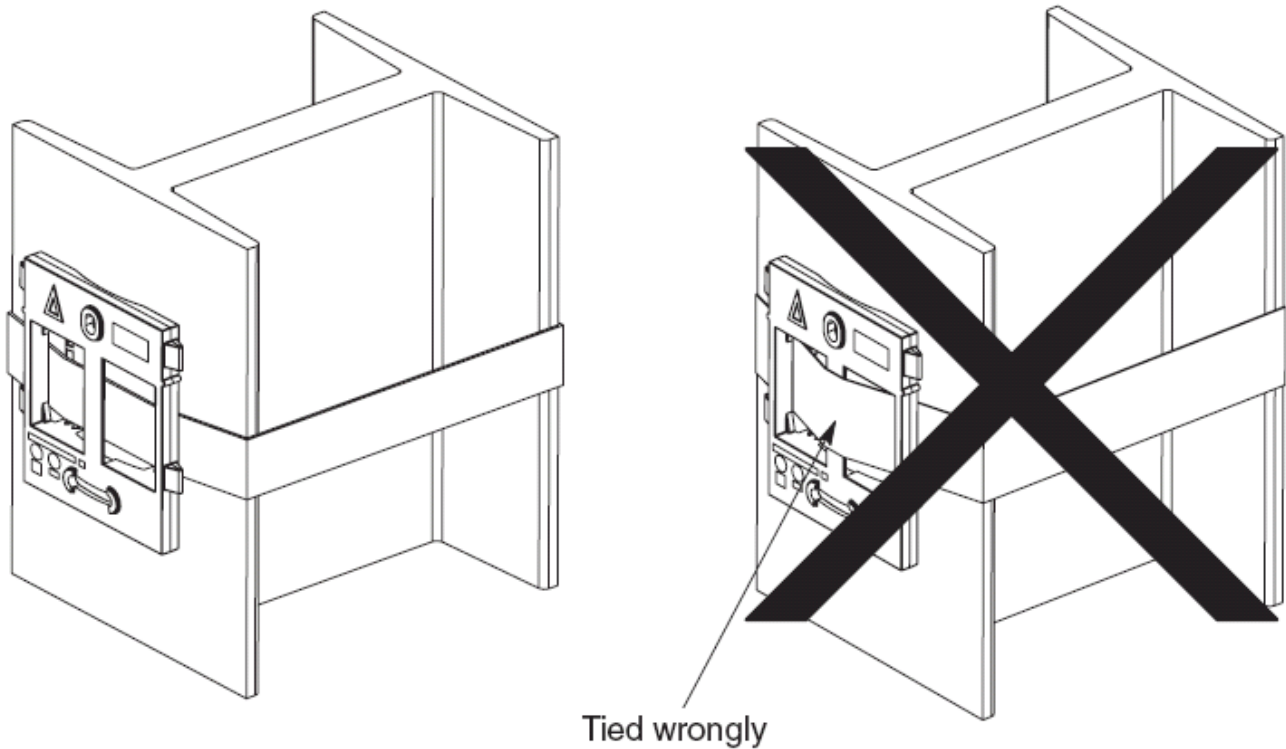

Chapter 6.


IP Office User Features

6. IP Office User Features

For systems installed using IP Office provisioning, the IP Office system provides 3720, 3725, 3740 and 3749 users with a range of additional IP Office specific features. These are in addition to the features detailed in the Avaya user guides for those phones.

Idle Display

The phone idle display shows a number of information elements. They are, from top down:

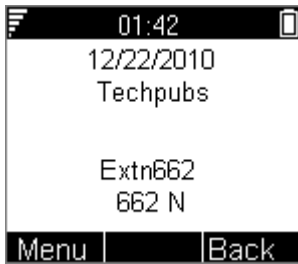

- The signal strength, time and battery charge. The battery charge will flash when below 5%.
- The date from the IP Office system.
- The name of the current subscription.
- The IP Office user name.
- The IP Office extension number and status indicators (see below).
- The soft key labels. The options here relate to the 3 buttons below the screen and change according according to the current phone state.


6.1 Status Indicators

The IP Office status indicators are shown after your extension number on the display. There may be more than one indicator shown. The possible status indicators are:

- **B = Barred**
A **B** is shown on your phone's display when the system administrator has set you to outgoing call barred status. You will only be able to make internal calls while this is applied.
- **D = Diverting (Forwarding) Calls**
A **D** is shown after your extension name on the phone's idle display when you have forward unconditional enabled.
- **G = Group Member (In Group)**
A **G** is shown after your extension name on the phone's idle display when have been configured as a member of a hunt group and your membership is enabled. While this is the case, you may receive calls targeted to the hunt group.
- **H = Held Call**
An **H** is shown after your extension name to indicate that you have a held call or calls on the IP Office system.
- **N = No Calls (Do Not Disturb)**
An **N** is shown after your extension name when you have do not disturb enabled.
- **O = Out of Service**
An **O** is shown on your phone's display when any of the groups of which you are enabled as a member is set to night service mode. In that mode calls to that group are diverted to its fallback if set or otherwise to voicemail if available.
- **P = Parked Call**
A **P** is shown after your extension name to indicate that you have a park call or calls.
- **T = Twinned**
A **T** is shown after your extension name on the phone's idle display if it is internally twinned with your deskphone. Calls to you will alert on both phones and can be answered by you at either phone.
- **R = Resilience**
An **R** is shown after your extension name on the phone's idle display your phone is working in resilience mode. This is used when there may have been a problem with the telephone system to which your phone was registered and another IP Office system is currently providing support for your phone. In this mode, some features may not be available and calls may be routed differently.
- **S = System Alarm**
If you are configured as a system administrator, an **S** in the phone's display indicates a system alarm. This is for information only, you are not expected to fix the alarm, just report it. (Not IP500)

6.2 Call Services

The following options can be accessed when the phone is idle or the current call is parked or held.

1. Press **Menu**. Scroll the display to  **Calls** and press **Select**.
2. Scroll down to **Call services** and press **Select**.
3. The list of available services is displayed. Scroll to the required service and press **Select**.
4. For some functions you may need to enter additional data on the display or select from a list. Do this and press **OK**.
5. The phone sends the appropriate signals to the IP Office.
6. Hang up the call.

The available services are:

- **Call Pickup Any**
Answer the first available call ringing anywhere on the phone system (unless the call is on a private line). Details of the callers and the original call destination will be displayed.
- **Call Pickup**
You can use this option to answer a call ringing at another extension. Select the option and enter the extension number.
- **Call UnPark**
Retrieve a call from the parked state. To do this you need to enter the park slot number assigned to the call when it was parked. You can park a call using the Park Call option and assign it an park slot number at the same time that you or another user can then use to unpark the call.
- **Call Waiting Suspend**
You can use this option to temporarily switch off [call waiting](#)^[122]. It will remain off until the end of your next call. Use this when you do not want a call interrupted by call waiting tones.
- **Cancel All Fwd**
You can use this option to switch off all your call forwarding. It does not affect the forwarding numbers, just your use of forwarding. If you have redirected your calls to another phone using follow me on that phone, this option also cancels the follow me.
- **Do Not Disturb On**
You can use this option to switch do not disturb on. Calls to you go to your voicemail mailbox if available, otherwise they receive busy. They do not follow any forwarding settings. A N for no calls is shown on the phone's idle screen when you have do not disturb switched on.
 - Some numbers can be configured as do not disturb exceptions. You can do this using the one-X Portal for IP Office application or from the menu of some desk phones (contact your system administrator for details). Those numbers are able to call you and transfer calls to you while you have do not disturb switched on.
- **Do Not Disturb Off**
You can use this option to switch do not disturb off. When off, calls will alert the handset and or follow your forwarding settings.
- **Fwd Unconditional On**
You can use this option to switch immediate call forwarding on. A forwarding number needs to be set for this to work, use the **Fwd number** call service to see and edit your current forwarding number. By default internal and external calls to you are forwarded but hunt group calls are not. However, the settings for internal and hunt group calls can be adjusted by your system administrator. To switch off forwarding, use **Cancel All Fwd**.
- **Fwd Busy On**
You can use this option to switch on forwarding of any additional calls when you are already have a call connected. If you have [call waiting](#)^[122] enabled, it is used for additional calls when you already have a call connected and another one waiting. To switch off forwarding, use **Cancel All Fwd**.
- **Fwd No Answer On**
You can use this option to forward any call that rings the handset without being answered. To switch off forwarding, use **Cancel All Fwd**.
 - The default no answer time used to trigger the forward is 15 seconds. However, this time can be adjusted by your system administrator if required.
 - If you use voicemail, the forward is used first. However, if the call is still unanswered, the phone system will still attempt to redirect the call to voicemail. This may not be possible for calls forwarded to external numbers.

- **Fwd Number**

You can use this option to see and set the number to which your calls are forwarded when you select **Fwd Unconditional On**. If your system uses an external dialing prefix, remember to include it if you want to forward calls to an external number. However, note that external forwarding may be restricted by your system administrator. This number is also used for **Fwd Busy On** and **Fwd No Answer On** unless you set a separate **Fwd Busy Number**.

- **Fwd Busy Number**

You can use this option to see and set the number to which your calls are forwarded when you select **Fwd Busy On** and or **Fwd No Answer On**. If your system uses an external dialing prefix, remember to include it if you want to forward calls to an external number. However, note that external forwarding may be restricted by your system administrator. To switch off forwarding, use **Cancel All Fwd**.

- **Follow Me Here On**

If you are a temporary user of the phone, you can use this option to have calls to your desk phone redirected to the handset. Select this option and enter your extension number.

- **Follow Me Here Off**

To end a follow me set using **Follow Me Here On**, select this option and enter your extension number. Calls to that number will no longer be redirected to the handset.

- **Login**

Users with a login code can 'hot desk', that is login at any phone on the system and, when finished making or taking calls, log out. While logged in on a phone, that phone adopts all their user settings and their calls are routed to it. This option can be used in a number of ways.

- The DECT handsets can be configured with no permanently associated user. To use the phone, you need to login using your extension number and login code.
- The DECT handsets can be configured with an associated user. However, you can use log in and log out as a method of security for your phone.
- Other users can use their log in code when they temporarily need to use your handset as their own phone. While they do this you are logged out.
- Note that SMS messaging, provided by the AIWS, always goes to the same original handset even when the associate user hot desks to another handset.

- **Logout**


If you have a login code, you can log out of the phone you are currently using. When you log out, if you are normally associated with another phone, you are automatically logged back in on that phone unless someone else is using it or you are set to forced login. If you are not automatically logged in elsewhere, then while logged out your are treated as being busy to all calls. Instead your calls go to voicemail if available.

6.3 In Call Options

During a call, the **More** soft key can be used to access a number of handset and IP Office functions while still remaining connected to the call.

1. During the call, press **More**.
 - If the phone is not currently on the call details screen, you may have to press Back to get to that screen before you can press **More**.
2. Select the function required.
3. Some functions may require you to enter some data, for example the destination for a transfer.

The possible functions are:

- **Auto Callback**
If you are making a call to another extension and it has not been answered, setting a callback tells the phone system to ring you when that extension finishes its next call. When you answer the target extension is rung again.
- **Call Park**
You can use this option to park your current call. You can enter a park slot number which is then useable by anyone else on the system to unpark the call.
 - If you do not enter a park slot number when parking a call, one is automatically assigned using your extension number plus a digit 0 to 9.
 - When you park a call, a **P** is shown on your phone's idle display until the call is unparked or the caller hangs up.
 - Parked calls automatically re-ring you if left parked for too long (the default time is 5 minutes).
- **Clear Call**
Use this option to end the current call and answer a held call. This may be useful when trying to transfer a held call and you find yourself connected to the transfer destinations voicemail or busy tone. Similarly you can use it when trying to add another party to a conference if the other party does not answer or does not want to be part of the conference.
- **Clear Call Waiting**
You can use this option to end your current call and automatically answer the waiting call.
- **Conference Add**
You can use this option to start a conference with the current call and any calls you currently have on hold. The conference is automatically assigned a conference number that is shown on the display.
To add another party to the conference, press **R** to put your connection to it on hold and dial the other party. When answered select **More > Conference Add**.
Note: This menu option is *only* available on DECT phones that were configured during a [provisioned installation](#) [40]. If you performed a [non-provisioned installation](#) [182], you will require a short code (*47) menu item to invoke the Conference Add feature.
- **Hold Call Waiting**
You can use this option to put your current call on hold and automatically answer the waiting call.
- **Call Record**
You can use this option to switch on call recording if your phone system includes IP Office Voicemail Pro.
- **Microphone Off**
You can use this option to turn the handset's microphone off. A  icon is displayed on the call details screen. The microphone is automatically re-enabled when you next make or answer a call.
- **Microphone On**
You can use this option to turn the handset's microphone back on if you have turned it off during the call.

6.4 Call Waiting Options

By default call waiting is turned on for all users. On the DECT display with a call already connected, another incoming call will cause you to hear a single beep and the phone display will alternate between details of your current call and the waiting call.

You can only have one connected call plus one waiting call. Any further calls will see you as being busy and will either follow your forward on busy settings if set or else go to voicemail if available. If you don't answer the waiting call, it will follow your forward on no answer settings if set or else go to voicemail.

If you end your current call while you have a call waiting, the waiting call will start ringing and can be answered. You can end your current call and automatically answer the waiting call by using the [Clear Call Waiting](#) ^[122] option. You can hold your current call and automatically answer the waiting call by using the [Hold Call Waiting](#) ^[122] option.

Chapter 7.

Device Management

7. Device Management

This section covers the use of the Device Management application to update the firmware on the phones and to apply customized features templates to the phones.

There are two variants of the device management application that can be used. They look similar and offer the similar features but operate differently:

- **AIWS Device Manager**

This is a version of the device manager application embedded into the AIWS unit. It can be started via browser access to the AIWS unit rather than having to be installed on a particular PC.


- **WinPDM (Windows Portable Device Manager)**

This is a version of the device manager application that can be installed onto a Windows PC.

The use of templates is not supported for systems installed and maintained using IP Office provisioning. With provisioned systems, device management should only be used for updating handset firmware.

7.1 Starting AIWS Device Manager

1. Enter the IP address of the AIWS into the browser address field.
 - Alternatively enter **http://Elise-0091921** as the address, replacing the digits with the AIWS unit's Module Key. The Module Key is printed on the [AIWS circuit board](#)^[156].
2. If a security certificate warning appears, select to continue.
3. Enter a user name and password. The default values are **admin** and **changeme**.
The AIWS menu is shown:

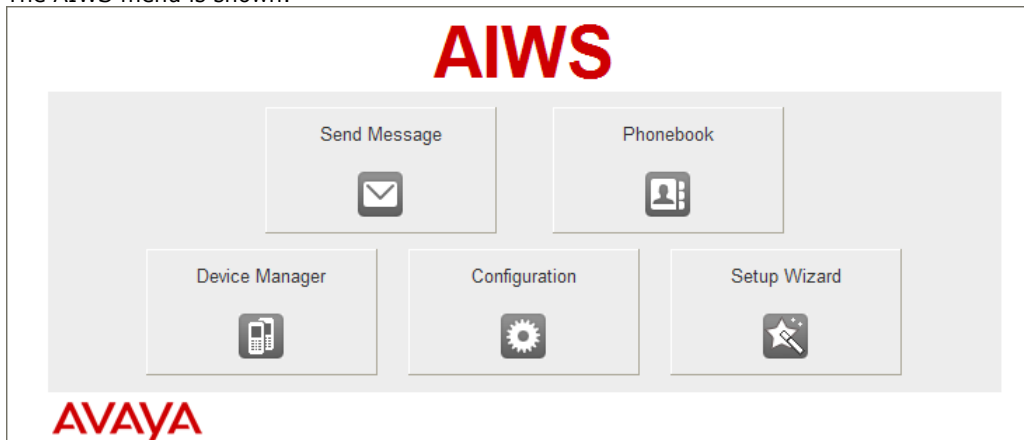


4. Select **Device Manager**.
5. If a web site certificate warning is displayed select to continue.
6. The Avaya Device Manager application is started.
 - If this is the first time that it has been started, it will prompt that no parameter definition files have been imported. Select **Yes**.


7.2 Load Parameter Definition Files

The parameter definition files supplied with the DECT R4 software include software files used to update the phone software. These files must be uploaded to WinPDM in order to allow phones to be upgraded.


1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
2. Select **File | File management**.

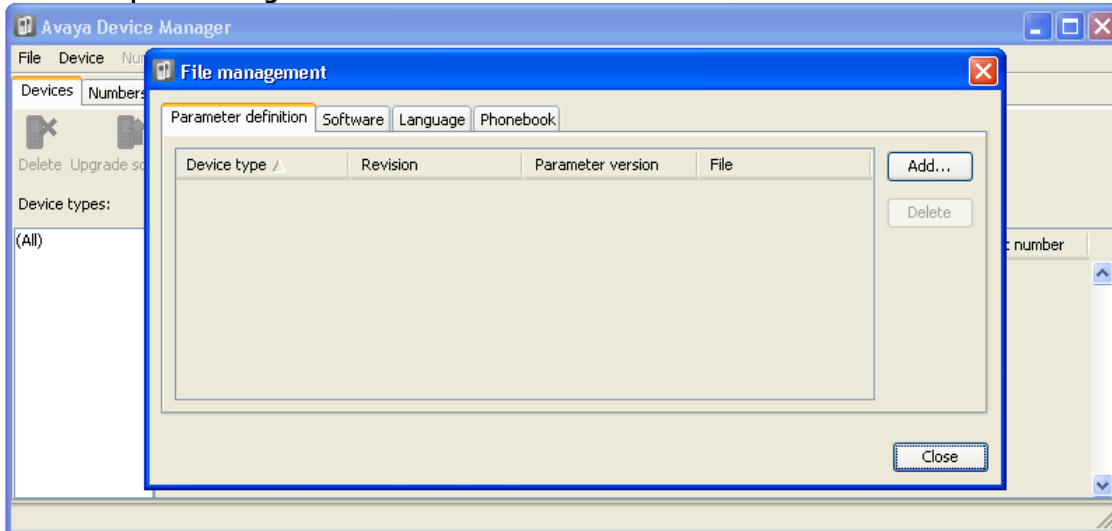


3. Select the **Parameter definition** tab.
4. Click **Add...**. Browse to the **Handsets** folder in the software previously unpacked. Select the **.pkg** files in the folder and click **Open**.

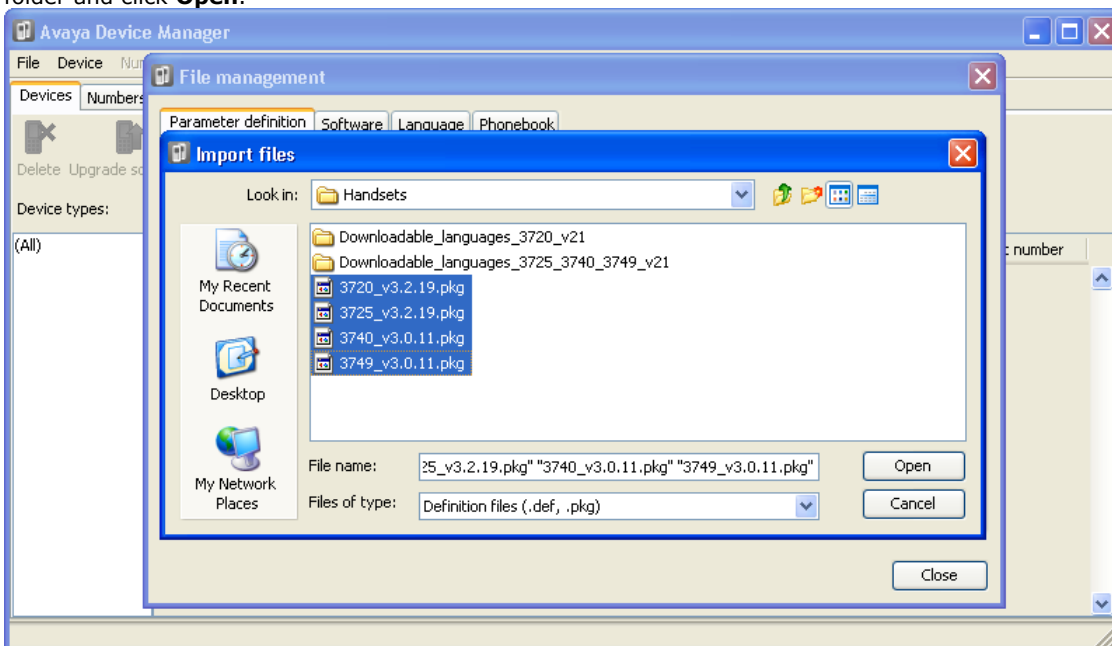

- Click **Add...** again. Browse to the **Chargers** folder in the software previously unpacked. Select the **.pkg** files in the folder and click **Open**.

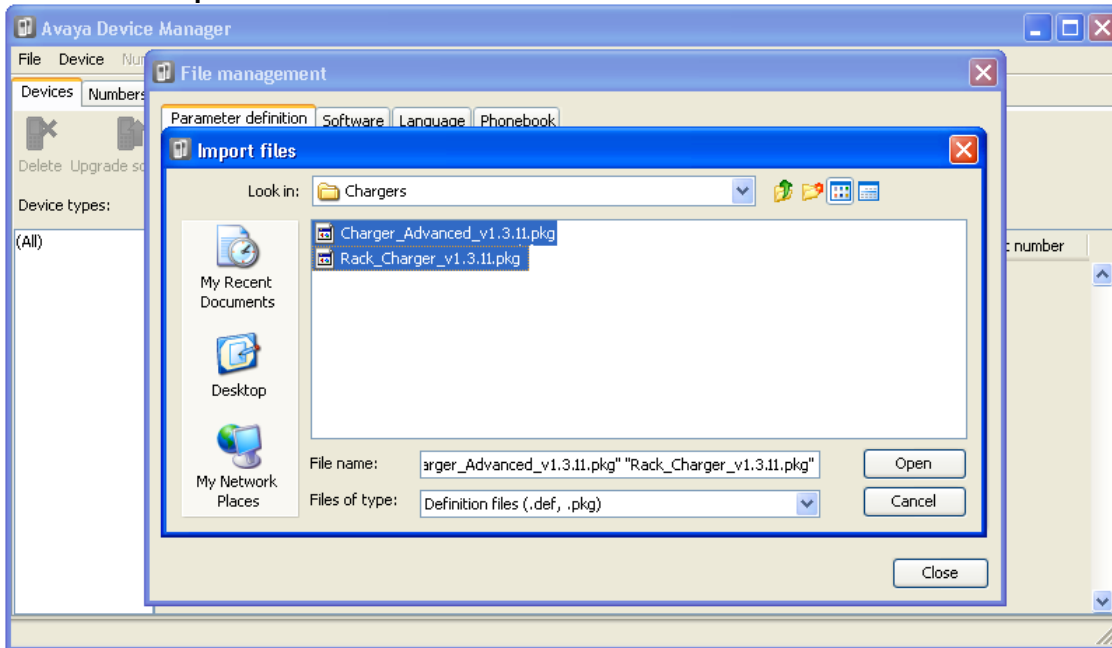

- The list of parameter definition files should now be complete.

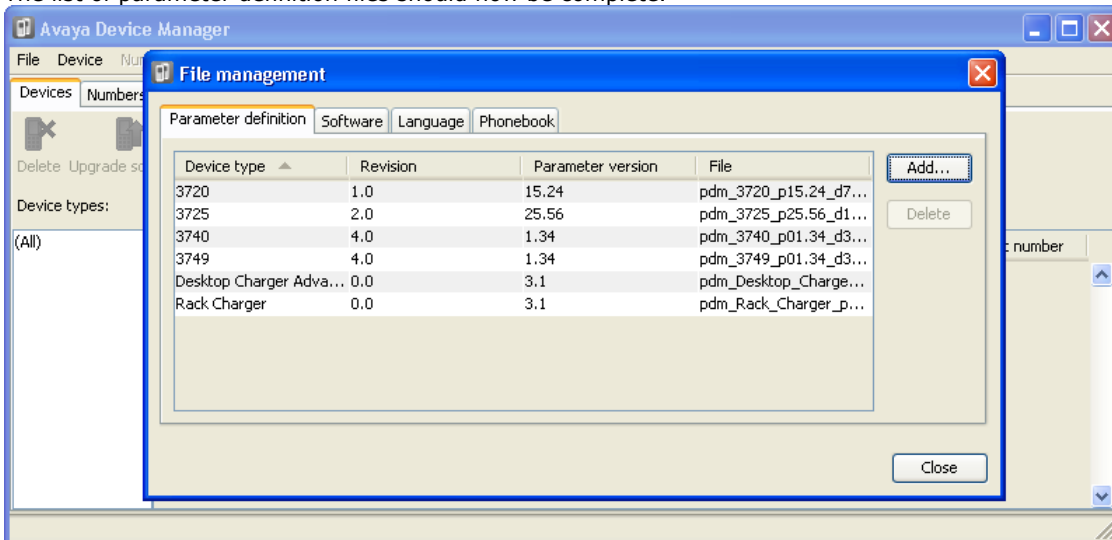


- Select **Close**.

7.3 Loading Phone Templates into Device Manager


Templates allow you to apply common settings to phones and chargers. The IP Office DECT R4 software set includes default templates for 3720, 3725, 3740, and 3749 phones that allow those phones to access IP Office functions through the phone menus.

The use of templates is not supported for systems installed and maintained using IP Office provisioning. With provisioned systems, device management should only be used for updating handset firmware.


1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
2. Select the **Devices** tab. The phones subscribed to the DECT system should be listed.

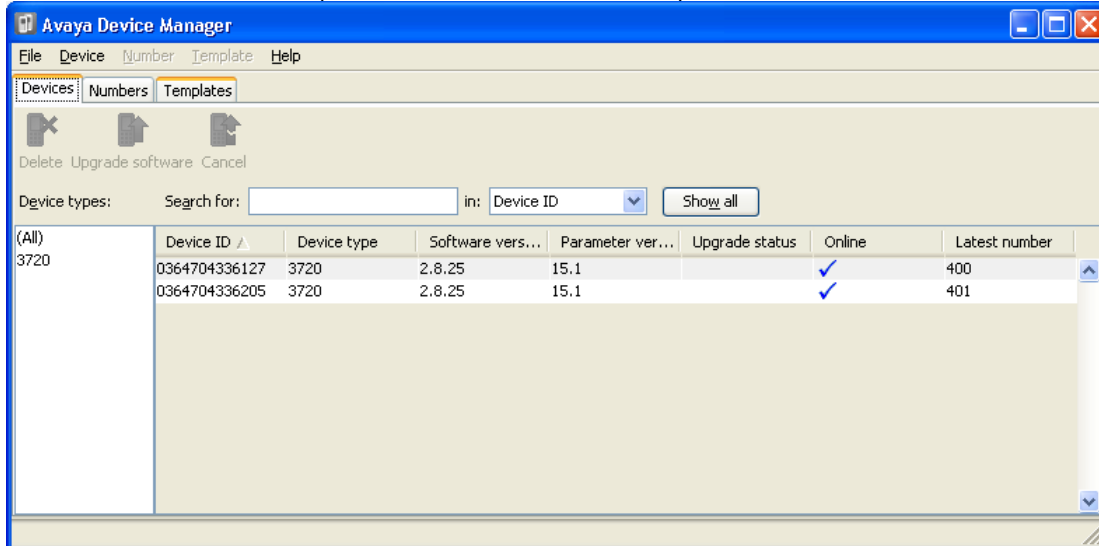


3. Select **File | Import | Templates...**

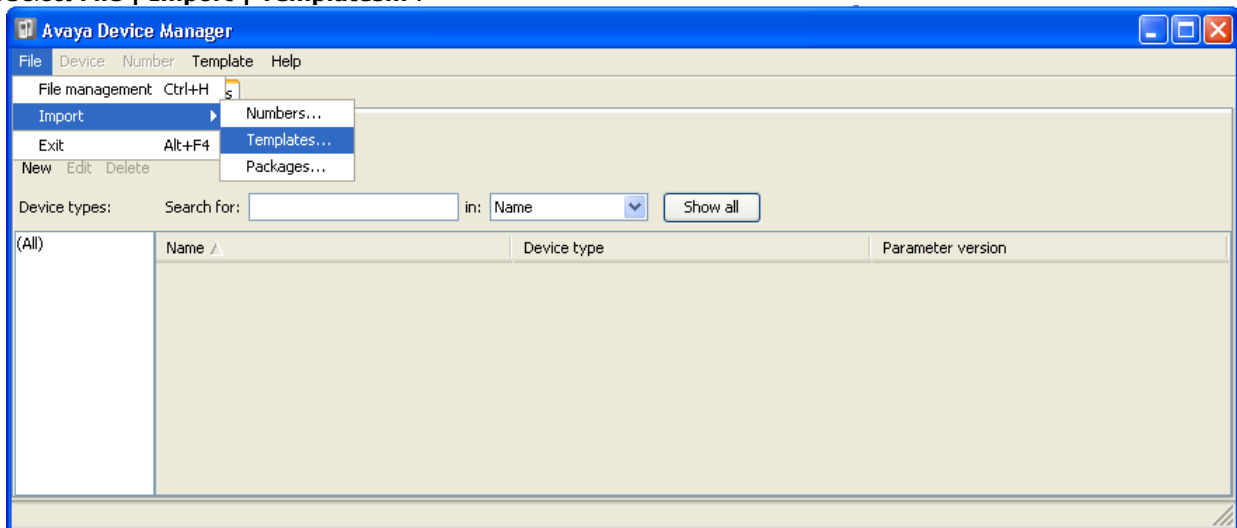

4. Browse to the previously unpacked software and select the **.tpl** template files.

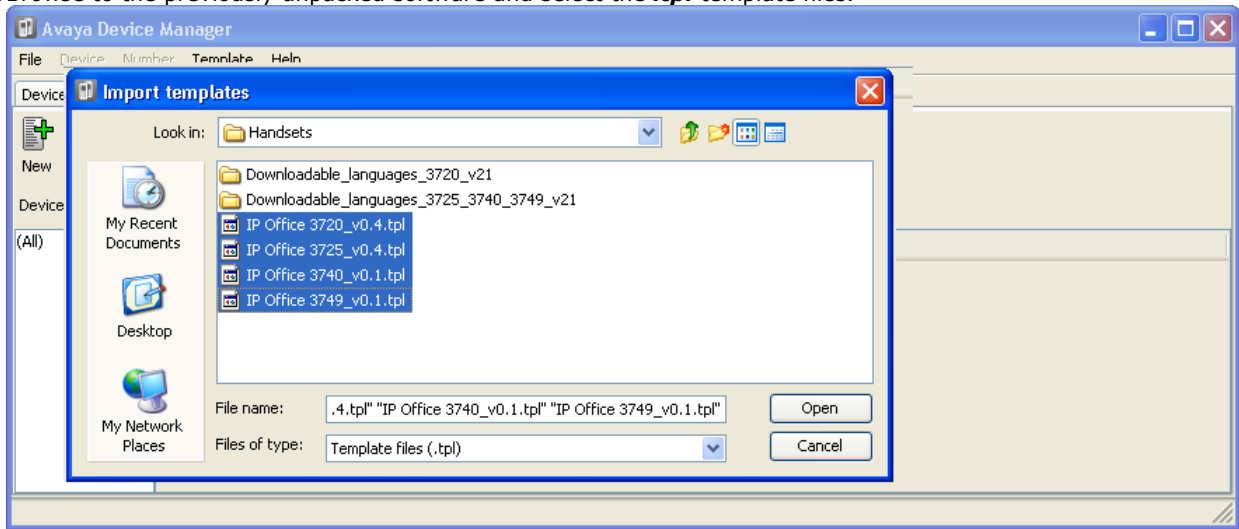


5. Click **Open**. The template files are loaded into Avaya Device Manager.

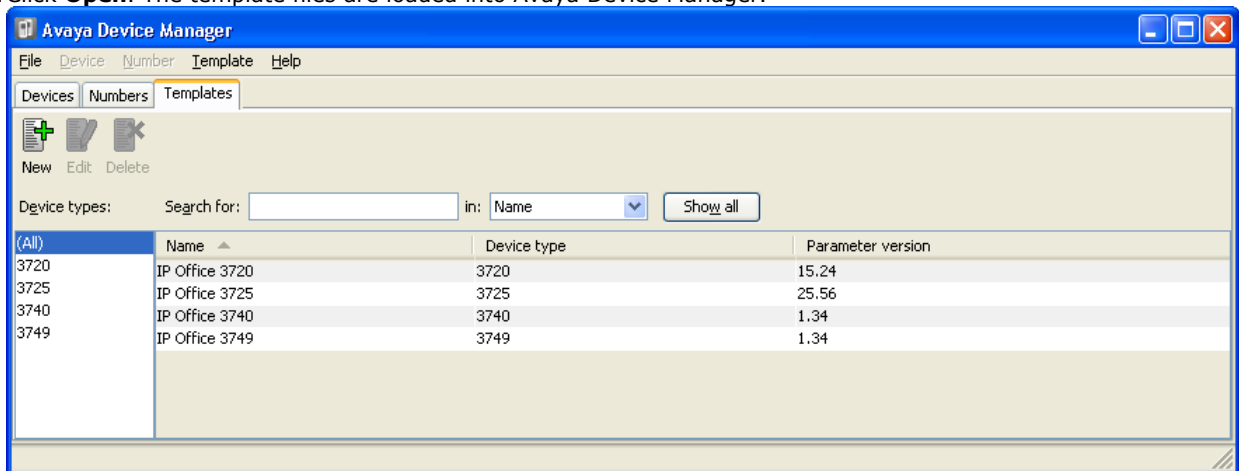



7.4 Applying Templates to Phones

The use of templates is not supported for systems installed and maintained using IP Office provisioning. With provisioned systems, device management should only be used for updating handset firmware.

1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
2. Within the Avaya Device Manager, select the **Templates** tab.
3. Right-click on the template and select **Apply to....**


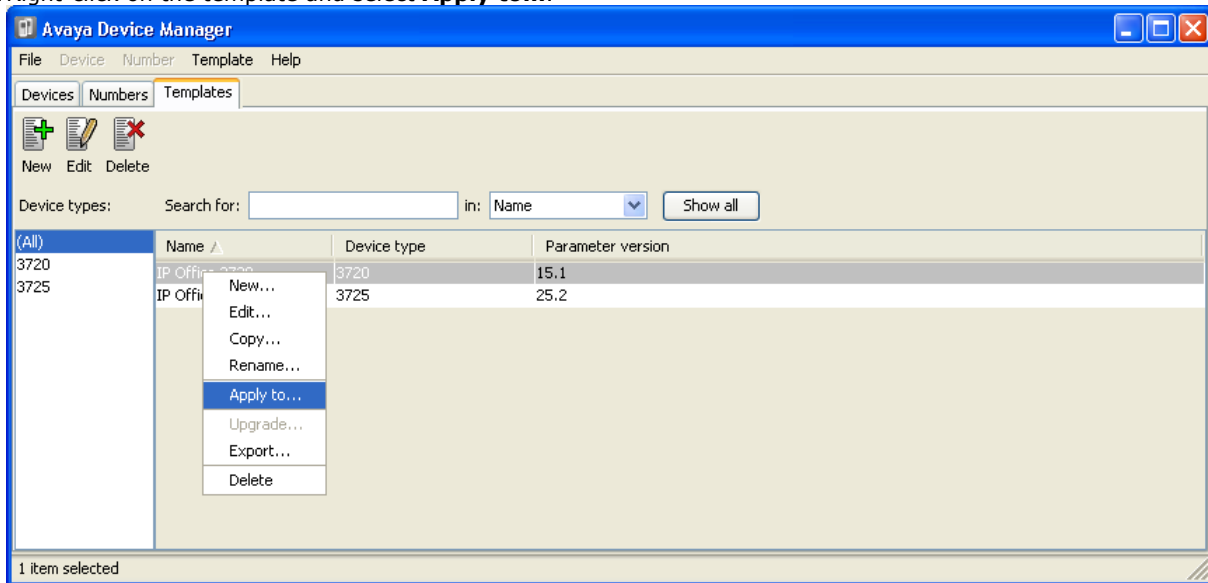


4. Select the phones to which you want the template to be applied. Click **OK**. The phones will begin uploading the template file.

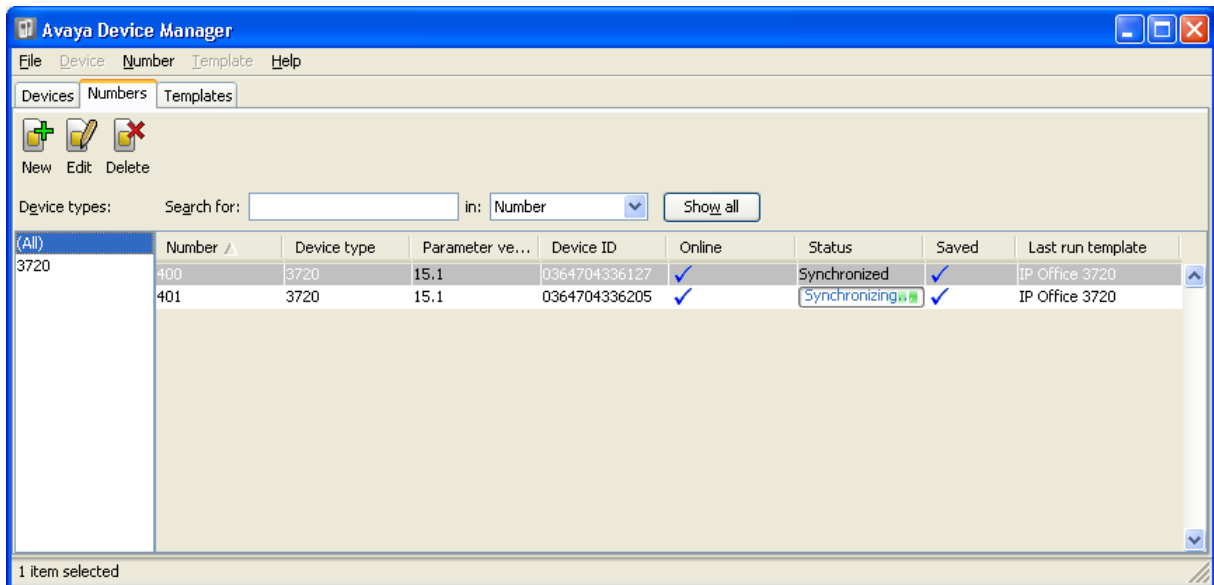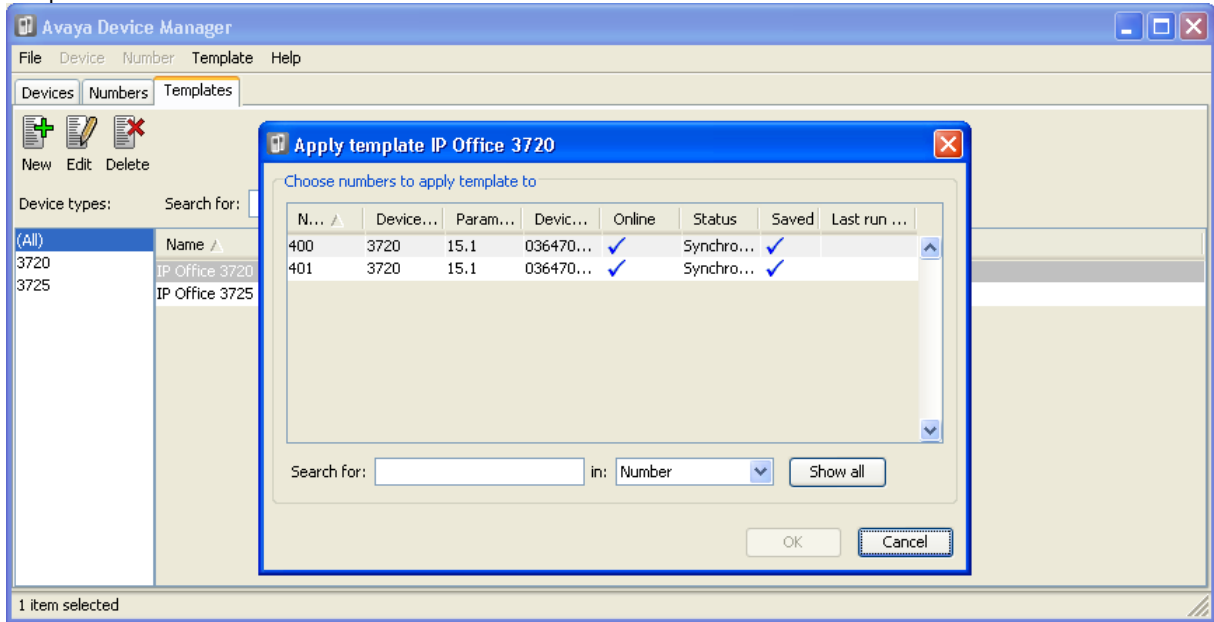

7.5 Editing Templates

1. Start the [AIWS Device Manager](#)^[126] or [Windows Device Manager](#)^[139].
2. Within the Avaya Device Manager, select the **Templates** tab.
3. Right click on the template and select **Edit**. Alternatively to create a new template, right-click on the template and select **Copy** and enter a new name for the new template.

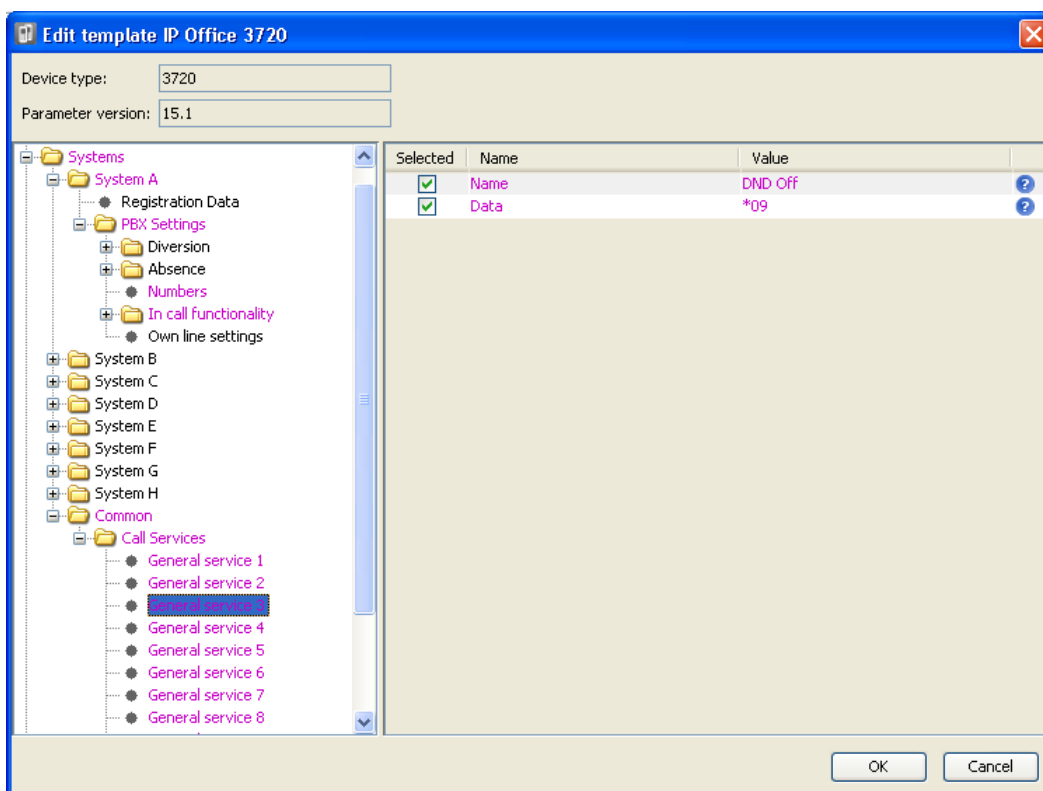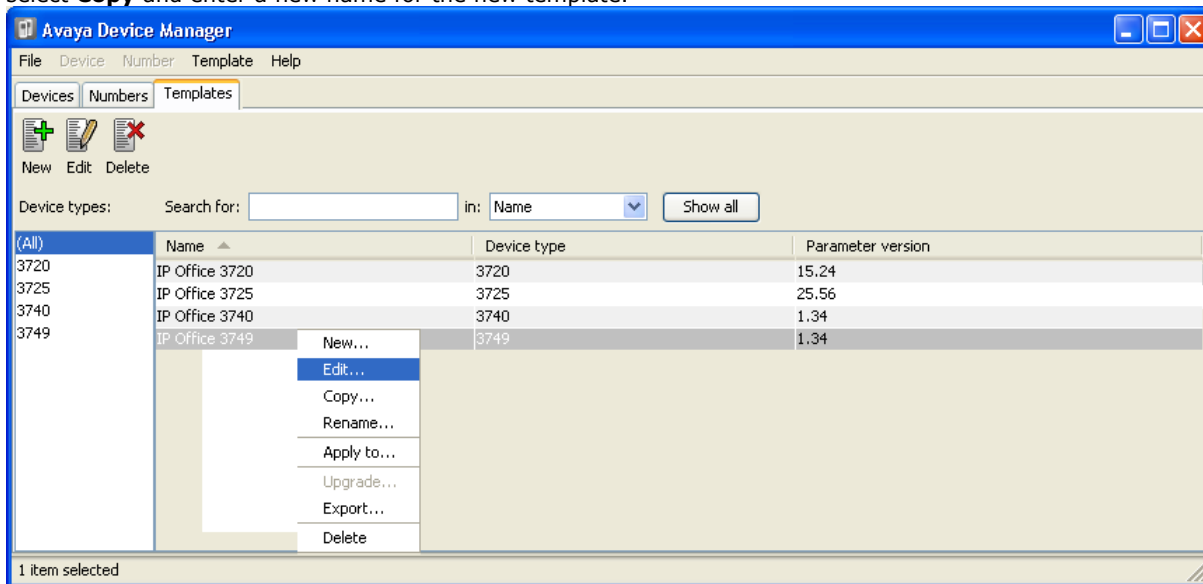

- **Systems | System A | PBX Settings | In call functionality**
Defines the options shown on the **More** menu shown on 3720, 3725, 3740 and 3749 phones when on a call. This can be used to enter the IP Office short codes for functions such as call park, conference and transfer.
 - **Systems | Common | Call Services**
Defines the options shown on the 3720, 3725, 3740 and 3749 phone Call services menu. This can be used to enter the IP Office short codes for functions such as call pickup, DND on/off.
4. The items shown in pink indicate areas of the template that contains settings selected to be applied to the device when the template is uploaded to the device. Items shown in blue have been changed during this editing session.
- **Black:** Normal
 - **Dark Blue:** Parameter has been edited during the current session.

- **Purple:** The parameter is enabled in the template.
- **Red:** Value not valid.
- **Turquoise:** The value differs from the default value

5. Each item within the template consists of 3 parts:

- **Selected** - If selected, the template value will be applied to devices to which the template is uploaded.
- **Name** - The non-editable name for the template item.
- **Value** - The value for the template item. This may be a drop-down list from which selection can be made.

6. Click **OK**.

7.6 Uploading a Language File

It is possible to upload one additional language to a phone. The language file is generated via an Excel file. A range of language files, including the Excel file used to generate language files, are included as part of the [DECT R4 software](#)^[42].

- Note: If another language file is uploaded, the first additional language is overwritten.
1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
 2. Within the Avaya Device Manager, select the **Devices** tab. Select the phones to which you want to upload the language file.
 3. Select **Device | Upload language** and browse to the language file.
 4. Click **OK**.


A parameter can be altered to match the uploaded language. This parameter is only used when Language is set. The Parameter can be found in the "Settings" folder. The parameter controls:

- The characters available for text input
- The sort order in the phonebook.


7.7 Upgrading Phone Software

DECT R4 is supported on a range of Avaya systems. However, for IP Office operation, only software specifically documented as having been tested and supported with IP Office should be used. Details of supported software for any particular IP Office release is included in IP Office Technical Bulletin for that release.

1. Start the [AIWS Device Manager](#)^[125] or [Windows Device Manager](#)^[139].
2. Within the Avaya Device Manager, select the **Devices** tab.

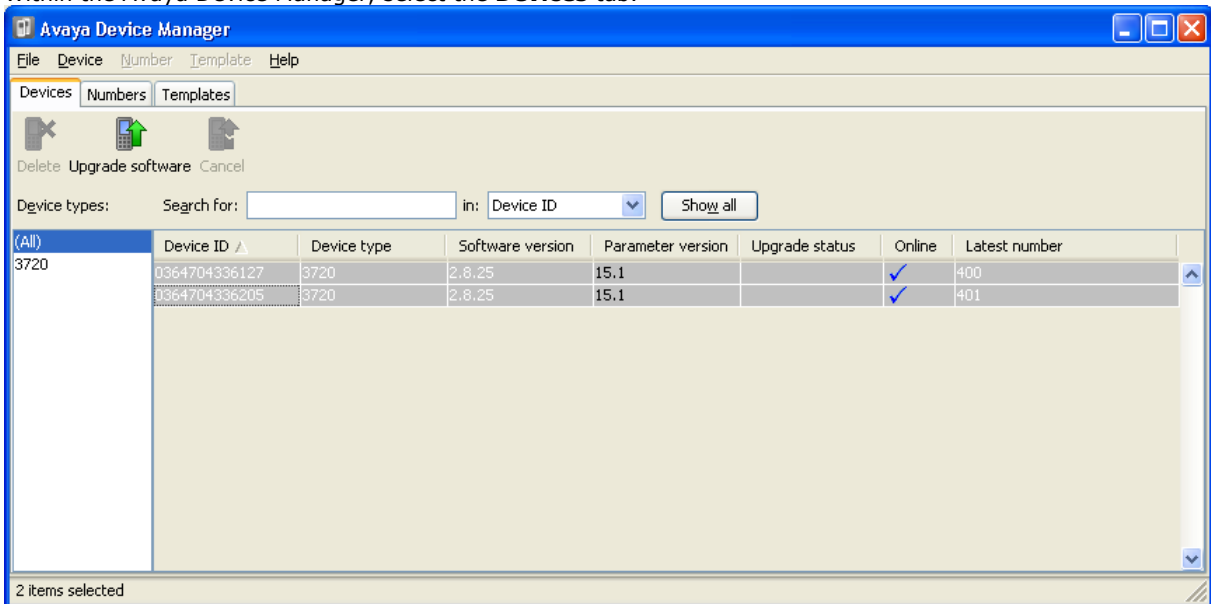


3. The current software version of each phone is shown. Compare this to the software versions available, shown by the version set as part of the .pkg file name included with the [DECT R4 software](#)^[42].

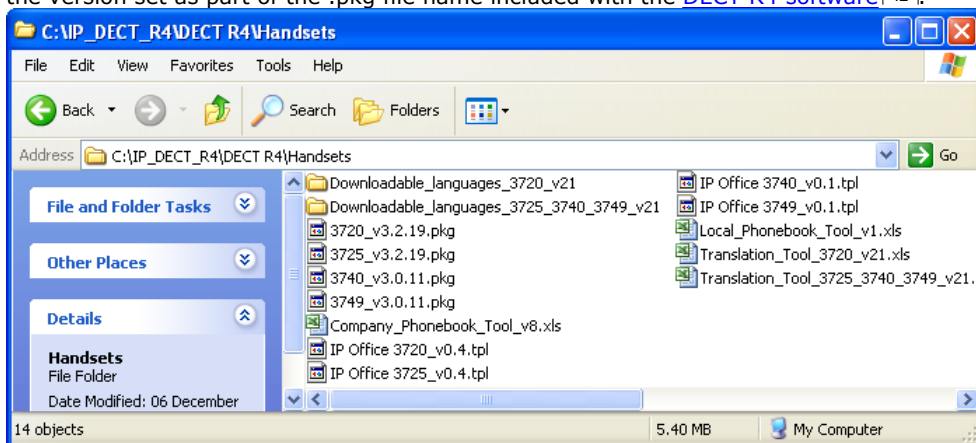

4. In the device manager, select the phones that you want to upgrade.
5. Click **Upgrade Software**. The menu shown will depend on whether you are using the AIWS for an over the air upgrade or WinPDM for an in charger upgrade.


- **AIWS Upgrade Software Menu**

This menu is shown when using the AIWS based device manager to upgrade phones over the air. This method supports a number of additional options but is much slower than upgrading phones in an advanced charger.

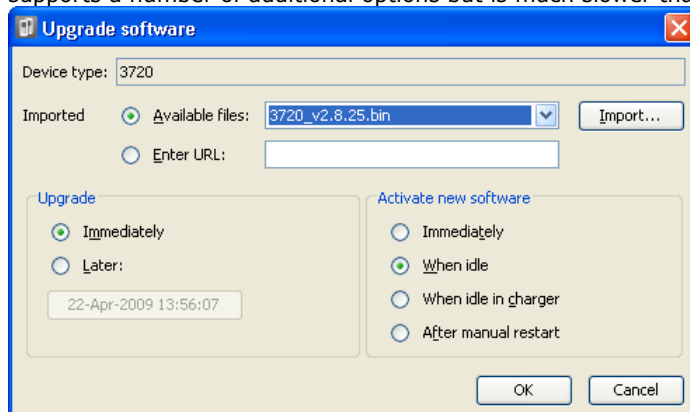

- **Advanced Charger/WinPDM Upgrade Menu**

This menu is shown when using the Windows based device manager to upgrade a phone currently in an advanced charger connected to the PC by USB or LAN. See [Installing Windows Device Manager](#)^[91].

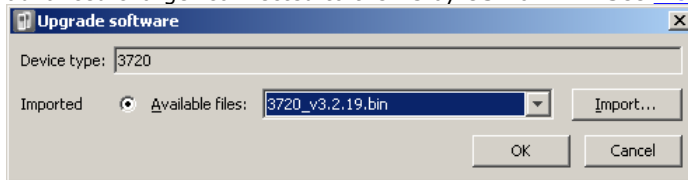

6. If you have already imported the parameter definition files for the phones, use the **Available Files** drop-down to select the software bin file for the type of phone being upgraded. Otherwise click on **Import** and browse to the .pkg files for the phone type.

7. Select the other upgrade settings required and click **OK**.

The upgrade begins. The following images show a typical upgrade as it is being performed on a 3720 device.

(All)	Device ID ▲	Device type	Software version	Parameter version	Upgrade status	Online	Latest number
3720	0364704336127	3720	2.8.25	15.1	Downloading	✓	400
	0364704336205	3720	2.8.25	15.1	Downloading	✓	401

Configuration **System** **Master** **Trunks** **SARI**

General

LAN

DECT

Services

Administration

Users

Device Overview

Backup

Update

Mode: Active

IP-PBX

PBX: IPO

PBX Resiliency:

OK Cancel


reset required

(All)	Device ID ▲	Device type	Software version	Parameter version	Upgrade status	Online	Latest number
3720	0364704336127	3720	2.8.25	15.1	Complete	✓	400
	0364704336205	3720	2.8.25	15.1	Complete	✓	401

7.7.1 Installing Windows Device Manager

As an alternative to the Device Manager application integrated into the AIWS unit, a copy of Windows Device Manager can be installed onto a Windows PC.


1. Browse to the location where you unpacked the IP Office software for DECT R4. Locate the **Avaya WinPDM** folder and double-click **Setup.exe**.

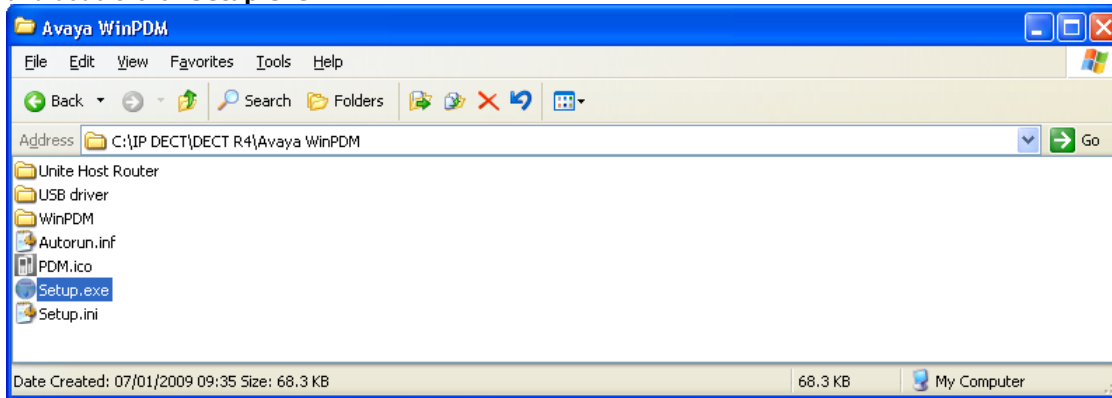


2. Click **Next**.




3. Select **Avaya WinPDM** and click **Next**.

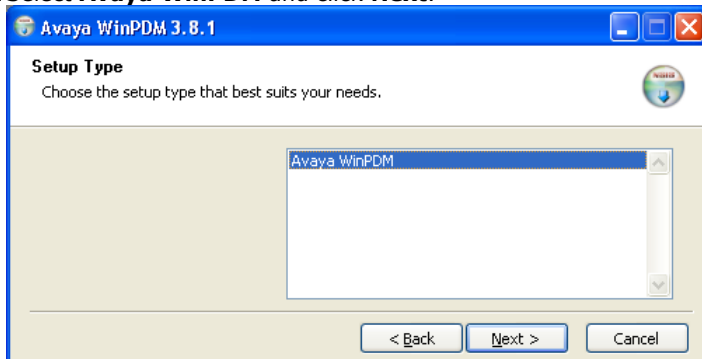


4. Click **Install**.

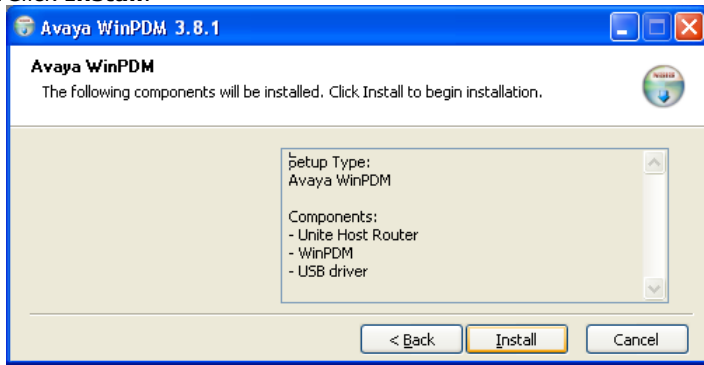

Wait for the Avaya WinPDM to install.

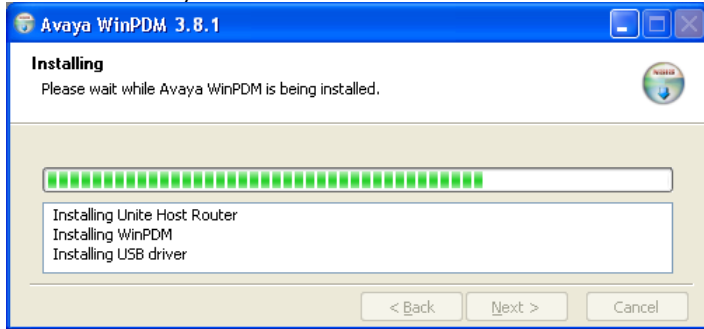

5. When the installation completes, click **Finish**.

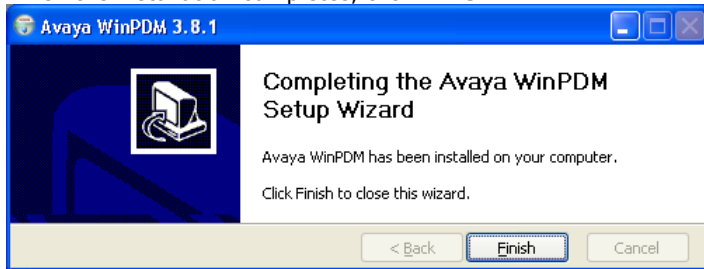

7.7.2 Starting Windows Device Manager

1. Select **Start | All Programs | Avaya WinPDM**.

2. Click on the **Avaya WinPDM** icon.

- If this is the first time that Avaya WinPDM has been run, you will be asked to create a site. Enter a name for the site that you have been installing and click **OK**.
- If this is the first time that Avaya WinPDM has been run, you will be prompted to import parameter definition files.

Chapter 8.

AIWS Installation

8. AIWS Installation

8.1 AIWS2 Installation

This section summarizes the installation process for adding an AIWS2 to an IP DECT R4 system.

Process summary:


1. [Browse to the AIWS2](#) ^[142]
2. [Run the setup wizard](#) ^[143]
3. [Enable base station/AIWS connection](#) ^[148]
4. [Upgrade the AIWS firmware](#) ^[149]

8.1.1 Browse to the AIWS2

By default the AIWS2 will obtain an IP address for the LAN 1 port using DHCP if possible. Using the unit's LAN 1 MAC address, printed on the back of the unit,

Network Connection

1. Connect the AIWS2 unit to the LAN using the LAN 1 port on the rear of the unit.
2. Connect the appropriate power cable to the unit and switch on the power supply.
3. The Status LED should change to a fast flashing blue while the unit is starting up.
4. When the starting up indication stops, you can attempt to browse to the unit.
5. Enter the IP address of the AIWS into the browser address field.
 - Alternatively enter **http://elise-XXXXXXXX** as the address, where **XXXXXXXX** is the module key number printed on the back of the unit. Leading zeros can be omitted.
6. If a security certificate warning appears, select to continue.
7. Enter a user name and password. The default values are **admin** and **changeme**.
8. If this is the first time the AIWS2 has been started, the setup wizard is displayed. Otherwise the AIWS menu is shown.

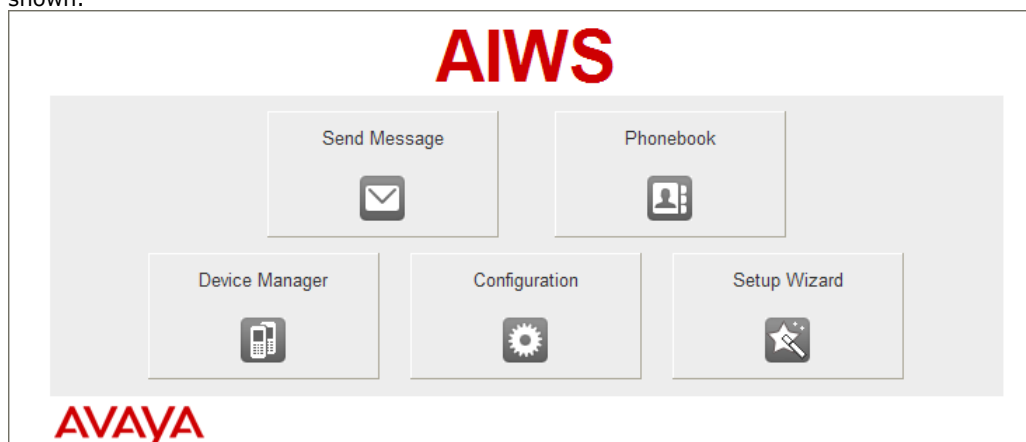

USB Management Connection

The AIWS2 supports connection and administration via a USB cable connected to the **Management** port on the front of the unit. This requires the installation of a device driver that can be obtained from the unit by putting it into its **Mass Storage** mode. Full details for installation and use are provided in the documentation provided with the unit.


8.1.2 Run the Setup Wizard

The first time the AIWS is accessed it runs the setup wizard.

1. Access the AIWS using your browser.
2. If the unit is defaulted, the setup wizard runs automatically. If the unit already has configuration settings, then from the menu displayed select **Setup Wizard**.




3. Click **Next**.
4. Enter the network address settings for the AIWS unit.

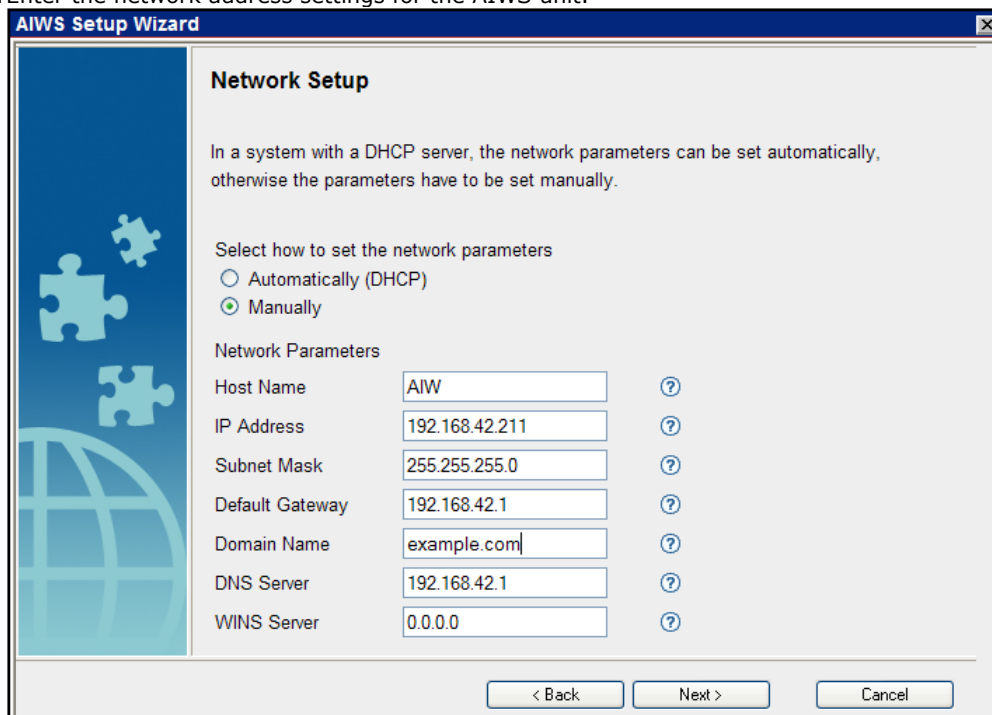

- Set the network parameters mode to **Manually**.
- **Host Name**
Enter a name to help identify the AIWS on the network.
- **IP Address/Subnet Mask**
Enter the static IP address details that the AIWS should use.
- Set the remaining details to match those being used by other devices on the network.

5. Click **Next**.

6. Enter the license number supplied with the AIWS unit and click **Next**.

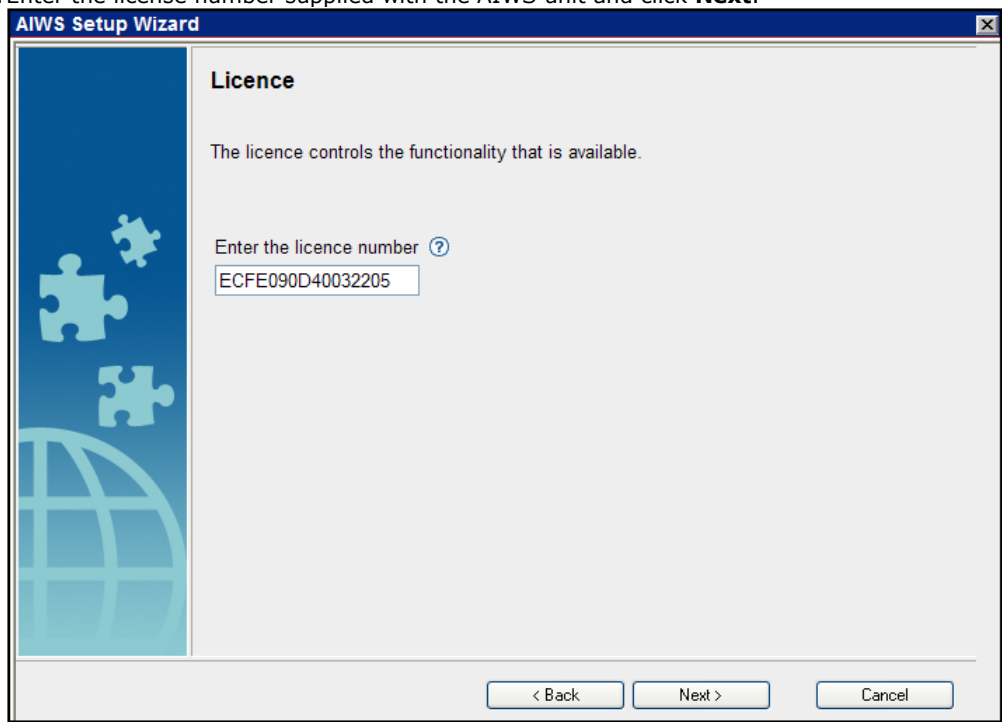

7. Enter the IP address of the master base station and click **Next**.



8. The **Date and Time** options are displayed. Select **NTP Time Server** and set the **Time Server IP Address** to be the IP address of the IP Office. Adjust the other values to match the customer site.

The screenshot shows the 'Date and Time' configuration window in the AIWS Setup Wizard. The window has a blue sidebar with puzzle pieces and a globe icon. The main area contains the following settings:

- Select how to set the time**: A dropdown menu set to 'NTP Time Server'.
- Enter the Time Server IP Address**: A text box containing '192.168.42.1'.
- Select Time Zone**: A dropdown menu set to '(GMT) Greenwich Mean Time: Dublin, Lisbon, London'.
- Adjust for Daylight Saving Time automatically**: Radio buttons for 'Yes' (selected) and 'No'.
- Date Format**: A dropdown menu set to 'DD/MM/YYYY'.
- Time Format**: A dropdown menu set to '24h'.

At the bottom of the window are three buttons: '< Back', 'Next >', and 'Cancel'.

9. Click **Next**. The **Phonebook Properties** options are displayed.


10. Select **TFTP**, in order to have the AIWS obtain the phone book from the IP Office, and then click **Next**.

The screenshot shows the 'Phonebook Properties' configuration window in the AIWS Setup Wizard. The window has a blue sidebar with puzzle pieces and a globe icon. The main area contains the following settings:

- The Central Phonebook is a common telephone number directory that can be accessed from portables in the system.**
- Select database to use for search**: Radio buttons for 'Local - 500 Editable', 'Local - 2000 View only', 'LDAP', and 'TFTP' (selected).
- Enter text to display when entries are found**: A text box containing 'Search Result'.
- Enter text to display when no entries are found**: A text box containing 'Sorry, no match'.


At the bottom of the window are three buttons: '< Back', 'Next >', and 'Cancel'.

11. Set the **TFTP Server IP** to the IP address of the IP Office and click **Next**.

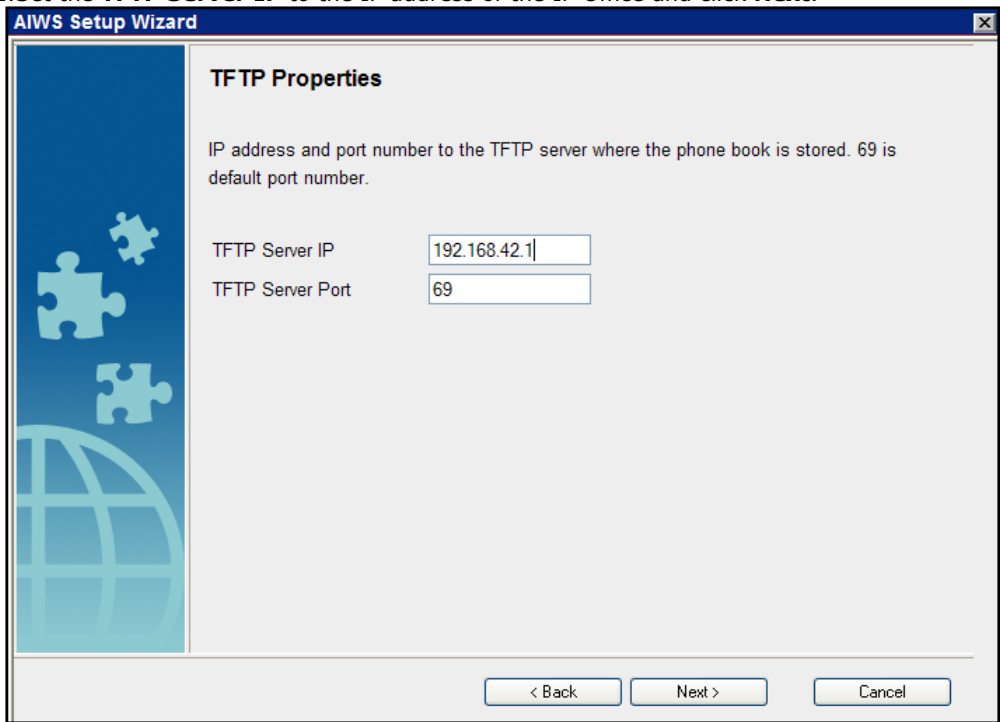


The screenshot shows the 'AIWS Setup Wizard' window with the 'TFTP Properties' tab selected. The window title is 'AIWS Setup Wizard'. On the left side, there is a decorative graphic with puzzle pieces and a globe. The main content area has the following text: 'TFTP Properties' followed by 'IP address and port number to the TFTP server where the phone book is stored. 69 is default port number.' Below this, there are two input fields: 'TFTP Server IP' with the value '192.168.42.1' and 'TFTP Server Port' with the value '69'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'.

12. If necessary, change the default passwords and click **Next**.

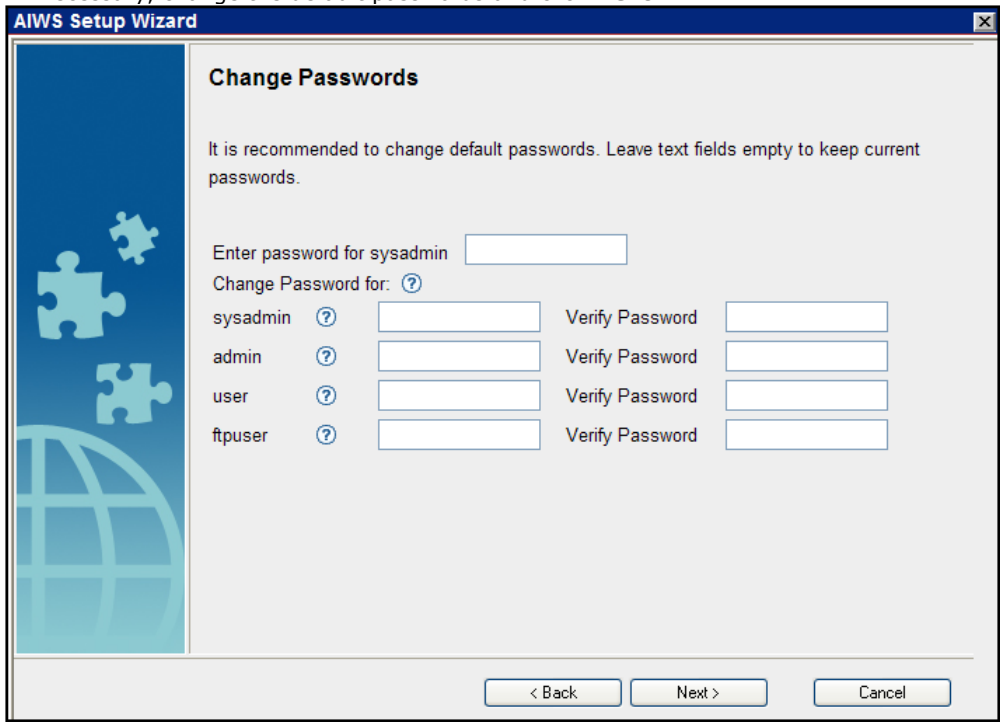


The screenshot shows the 'AIWS Setup Wizard' window with the 'Change Passwords' tab selected. The window title is 'AIWS Setup Wizard'. On the left side, there is a decorative graphic with puzzle pieces and a globe. The main content area has the following text: 'Change Passwords' followed by 'It is recommended to change default passwords. Leave text fields empty to keep current passwords.' Below this, there is a text field labeled 'Enter password for sysadmin'. Underneath, it says 'Change Password for: ?'. There are four rows of input fields for different users: 'sysadmin', 'admin', 'user', and 'ftuser'. Each row has a question mark icon, a text field for the password, and a 'Verify Password' text field. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'.

13. Click **Finish** to save the settings.

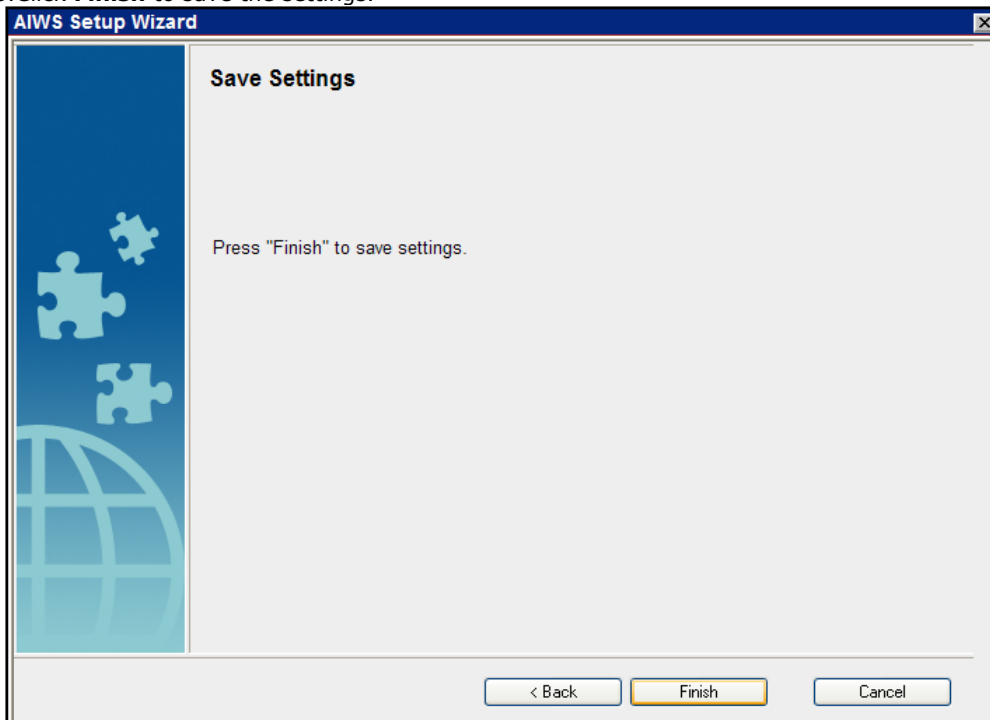

14. Click **Restart Now** and wait for the restart.

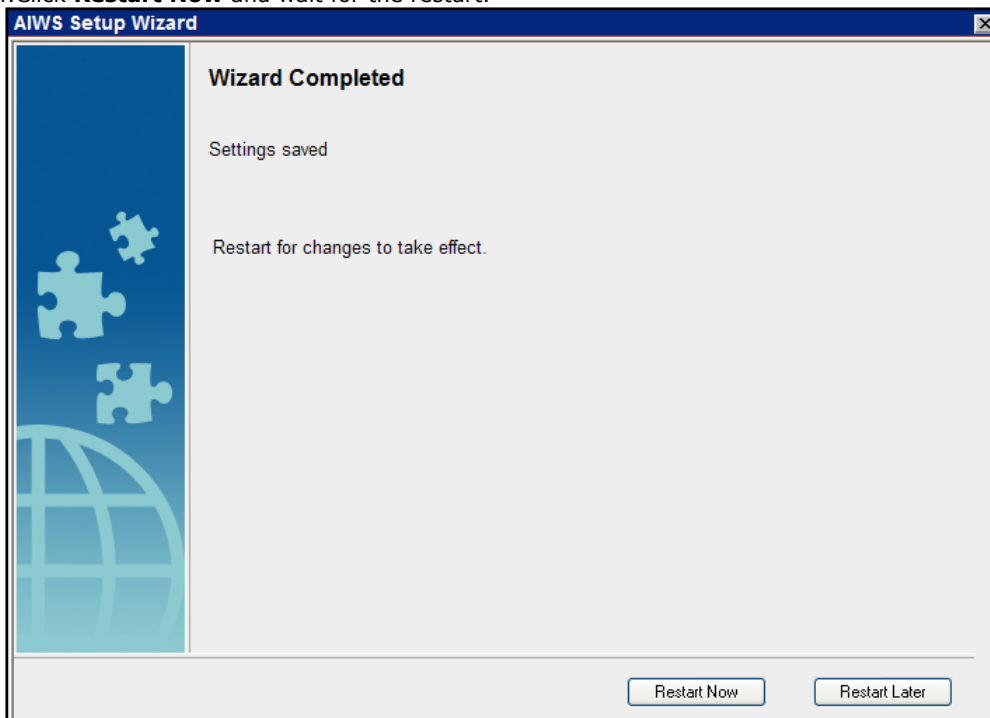

15. Close the browser access session. Start a new session using the new IP address.

8.1.3 Enable Base Station/AIWS Connection

The IP address of the AIWS needs to be entered into the configuration of the base stations.

Master Only

1. In the left-hand panel, select **UNITE**. Select the **Device Management** tab.

Configuration | SMS | **Device Management** | Service Discovery | Status Log

General | LAN | IP | LDAP | DECT | **UNITE**

Active Settings

Unite IP Address 192.168.42.211 192.168.42.211

OK Cancel

2. For the **Unite IP Address**, enter the IP address that will be assigned to the AIWS unit when installed in the DECT system.
3. Click **OK**.
4. In the left-hand panel select **General**. Select the **Admin** tab. Enable **Show Advanced Options** and refresh.
5. In the left-hand panel select **Phonebook** and disable the phonebook option.

Configuration | **Phonebook**

General | LAN | IP | LDAP | DECT | UNITE | **Phonebook**

Enable

OK Cancel

6. Click **OK** and reset the master base station.

Master and Slave

1. In the left-hand panel, select **UNITE**. Select the **Status Log** tab.

Configuration | SMS | Device Management | Service Discovery | **Status Log**

General | LAN | IP | LDAP | DECT | UNITE

Unite IP Address

Unite Resource Identity

OK Cancel

2. For the **Unite IP Address**, enter the IP address that will be assigned to the AIWS unit when installed in the DECT system.
3. For the **Unite Resource Identity** enter a unique name to be associated with the base station.
4. Click **OK**.
5. Select the **SMS** tab. Again enter the IP address that will be assigned to the AIWS unit when installed in the DECT system.
6. Click **OK**.

8.1.4 Upgrade the AIWS Firmware

The AIWS will have been supplied with a default set of firmware. This must be upgraded to the firmware provided with the IP Office application software. Only the firmware supplied with the IP Office application software or indicated in IP Office Technical Bulletin should be used with AIWS units on IP Office DECT R4 systems.

- **Important:** This process can take up to 40 minutes.

1. Using a browser login to the unit.
2. Click on **Configuration**.

The screenshot shows the 'AIWS Configuration' web interface. At the top, it displays 'Software Version: 2.32' and 'OS Version: 9.01'. A navigation menu on the left includes 'Phonebook', 'Status', and 'Other Settings'. Below the menu, the 'ELISE Installation' section is visible, with 'Starting up' and two buttons: 'System Setup' and 'Software'. The 'System Setup' page is active, showing a sidebar with 'Network', 'Reboot', and 'Passwords'. The main content area is titled 'System Setup' and contains the following text:

On this page you set all parameters regarding the systems function and behaviour. Select what to configure in the menu to the left.


In order for changes to take effect, you must reboot the system.

3. Note the software version. Check whether this already matches the firmware detailed as supported by the level of software on the IP Office system.
4. In the browser address bar, change the `/config/start.php` part of the address to `/system`.
5. Click the **Software** button.

The screenshot shows the 'AIWS Configuration' web interface with the 'Software' page active. The 'Starting up' section is visible, and the 'Software' button is selected. The 'Software' page has a sidebar with 'Install Software', 'Install Image', and 'Disk Status'. The main content area is titled 'Current Software Versions' and displays the following information:

AIWS:	2.32-9.3.3-A
System:	9.01-xxx-A

6. In the sidebar, click **Install Image**.

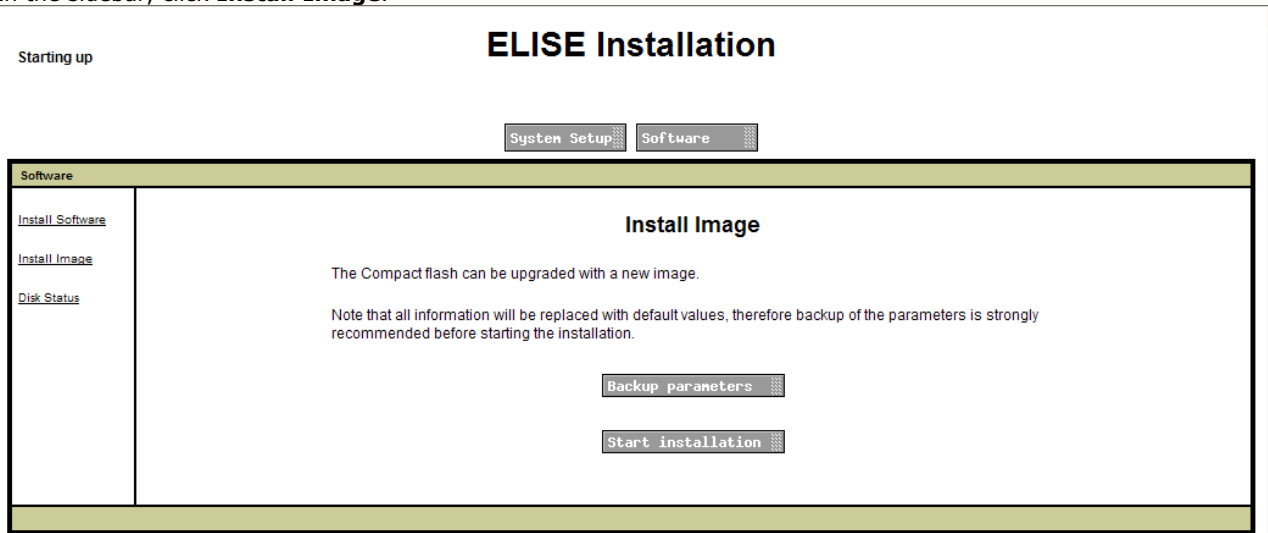


7. Click the **Backup parameters** button.


The browser shows a dialog for downloading a file called aiws-backup from the AIWS unit.

8. Select the option to save the file and select a save location. Make note of the location as the file needs to be reloaded after the firmware upgrade.


9. Click the **Start installation** button. A status and progress window appears:

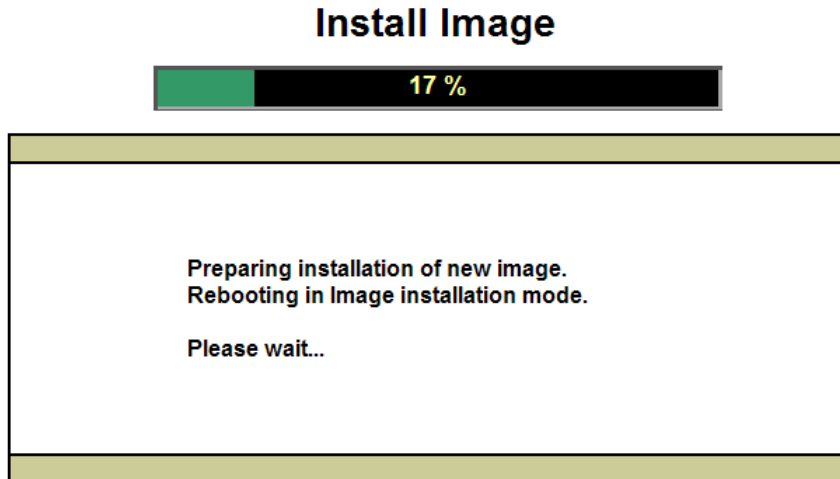


10. After a short delay, the AIWS prompts you for the location of the firmware file for the upload.

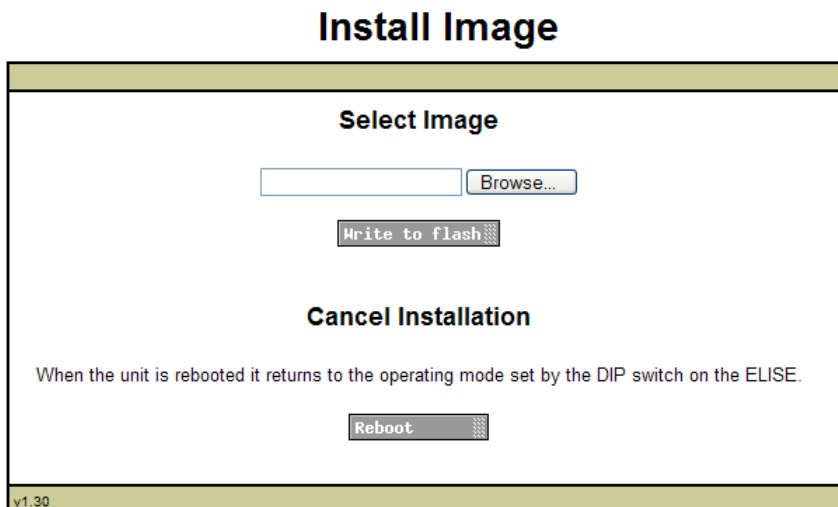


11. Click on **Browse**. Locate the **AIWS** folder in the software set previously unpacked. Select the **.img** file.

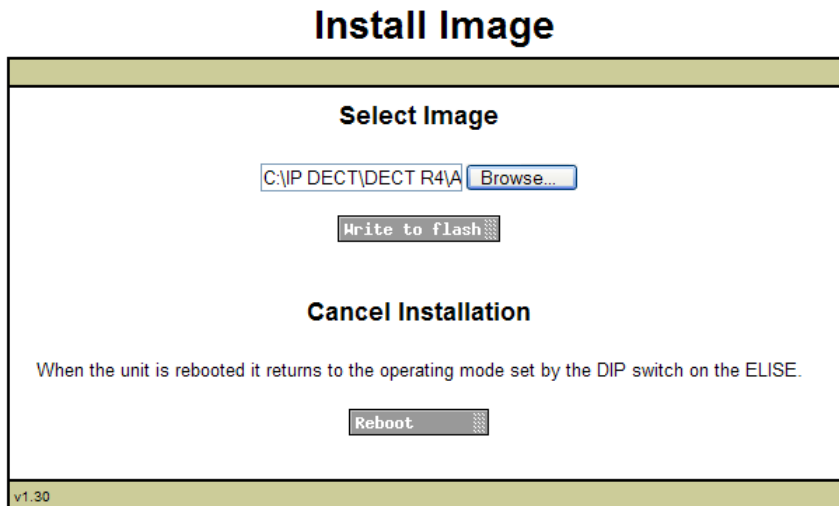

12. Click the **Write to flash** button.

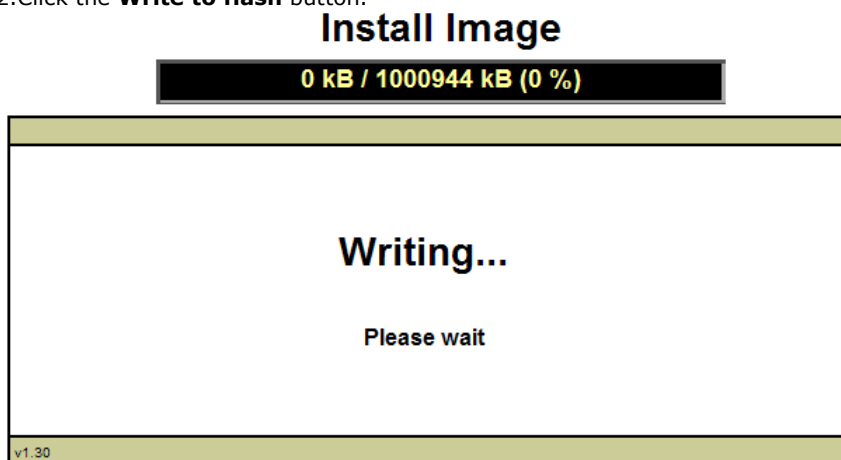


13. Wait for the process to finalize. The process can be time consuming, but must be allowed to complete.

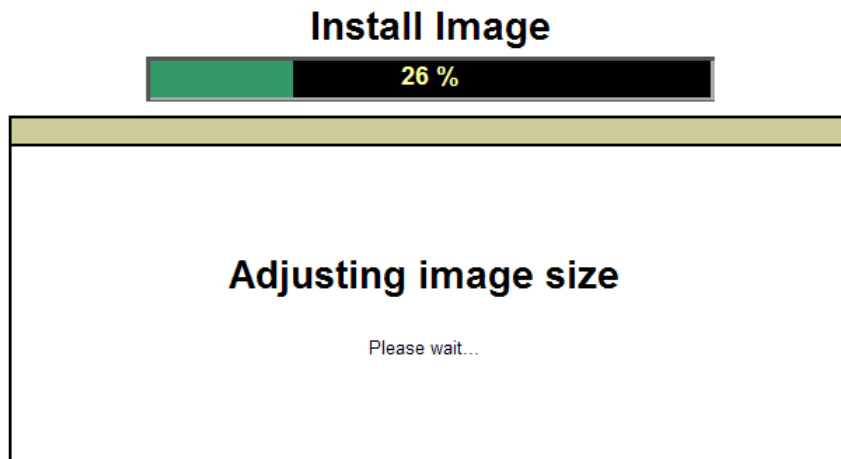


14.If the browser security warning is displayed, select to continue.

Install Image

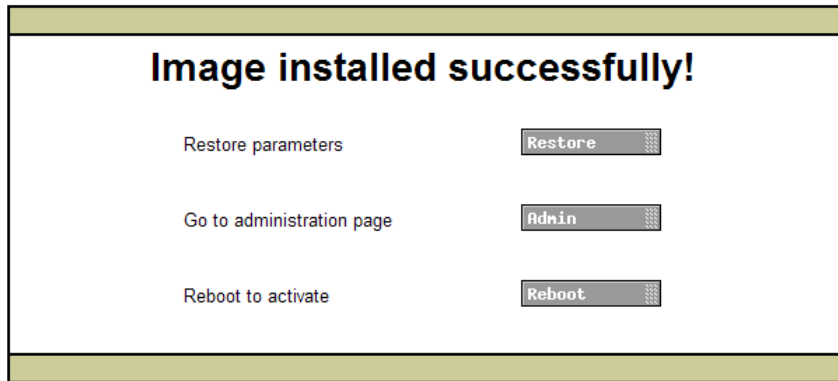


15.Click **Restore**. A separate window opens.

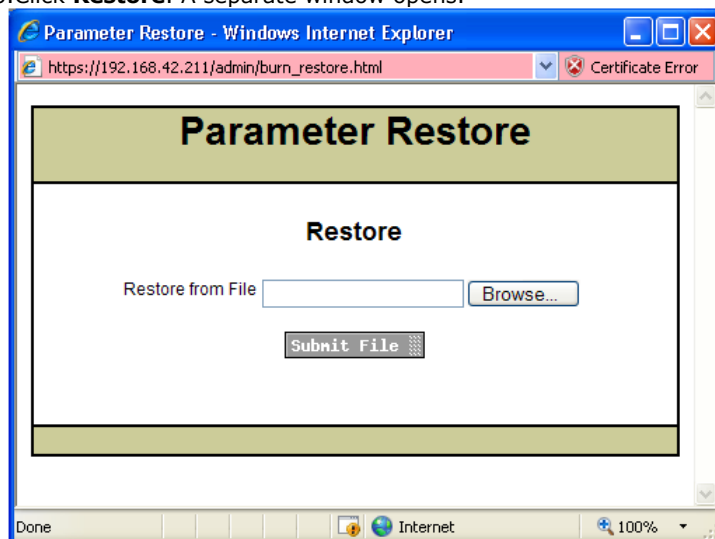


16.Select **Browse**, then locate and select the previously backed up *aiws-backup* file.

17.Click **Submit file**.

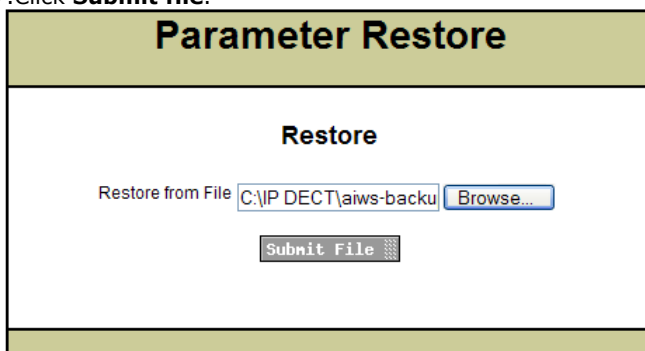

After the parameters are restored, a notification appears.

18. Click **Close**.

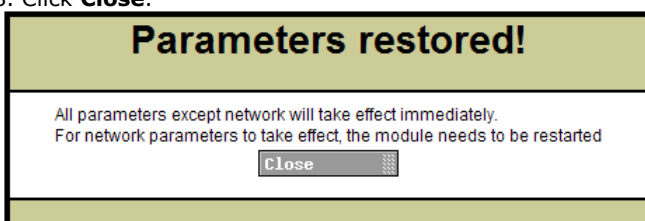

19. Select **Reboot**.

Install Image

Image installed successfully!

Restore parameters	<input type="button" value="Restore"/>
Go to administration page	<input type="button" value="Admin"/>
Reboot to activate	<input type="button" value="Reboot"/>

8.1.5 AIWS2 Status Lamps

Status LED

Colour	State	Description
Blue	On	OK. AIWS operational.
	Fast Flash	Starting up or shutting down.
Red	Fast flash	Error or fault.
	Slow flash	Warning
Yellow	Double blink	Waiting for automatic startup.

Power LED

Colour	State	Description
Blue	On	Power OK.
Red	Fast flash	Shutting down due to low voltage.
	Slow flash	Low voltage.

Mode LED

This LED is incorporated into the Mode button on the front of the unit.

Colour	State	Description
Blue	Slow flash	Mass storage mode.

8.2 AIWS1 Installation

The AIWS (*Avaya In-Building Wireless Server*) unit allows SMS messaging between handsets. It also allows wireless software upgrades and configuration of the handsets. Without an AIWS, handsets can only be upgraded and configured when in an advanced charger or a rack charger.

For IP Office Release 5 this unit also provides directory integration between the IP Office and the DECT R4 system.

For IP Office Releases 6 and higher, directory integration is done by the master base station without requiring an AIWS. However, if SMS is needed, an AIWS is still required and in that case still performs both functions.

The unit is managed via web browser and requires a fixed IP address. For IP Office Release 8.0, the AIWS2 is supported and replaces the AIWS1.

The AIWS installation consists of the following stages:

- 1.Remove the AIWS Cover.**
- 2.Connect the RTC Battery.**
- 3.Connect the LAN and Power Cables.**
- 4.Browse to the AIWS.**
- 5.Run the Setup Wizard.**
- 6.Enable Base Station/AIWS Connections.**
- 7.Upgrade the AIWS Firmware.**
- 8.Switch off the AIWS.**
- 9.Wall Mount the AIWS.**
- 10.Replace the AIWS Cover.**

Pre-Requisites

- Master base station installed and connected to the network.
- IP Office connected to the network.
- Phones subscribed.

Parts Required

- AIWS Unit which includes:
 - AIWS Unit
 - AIWS Power Supply unit and selection of IEC60320 C7 power leads (CEE7/16 (Europlug), BS1363, NEMA1-15 and AS/NZS 3112).
 - 1.2 metre (4 foot) LAN cable.
If this is replaced with a longer cable the replacement should be a CAT5 Ethernet LAN cable.
 - AIWS License sheet.
- 3 x 3.5mm Screws and suitable wall plugs for the wall mounting of the AIWS.
- LAN Socket
- Mains power outlet socket.

Information

- IP Address for the AIWS
- Other standard network settings (Default Gateway, DNS, WINS)
- AIWS License Key (this should have been supplied with the AIWS)
- IP Address of the DECT Master base station.
- IP Address of the IP Office
- Preferred time settings (date format, time format)
- Wall mounting location selected for the AIWS
- Access information (name and password) for configuring the base stations.


Tools

- Programming PC with DECT R4 software.
- Web browser.
- Pliers and sharp knife for removal of plastic cable cut-outs from AIWS case.
- Drill and drill bits suitable for the selected wall mounting position of the AIWS.
- Screwdrivers for use with the screws selected for AIWS wall mounting.

8.2.1 Removing the AIWS Cover

The AIWS cover can be removed without using any tools.


1. On the base of the unit (opposite the rounded end) are two depressible clips. Depress these whilst lifting the cover.
2. It should be possible to lift the cover off the unit.

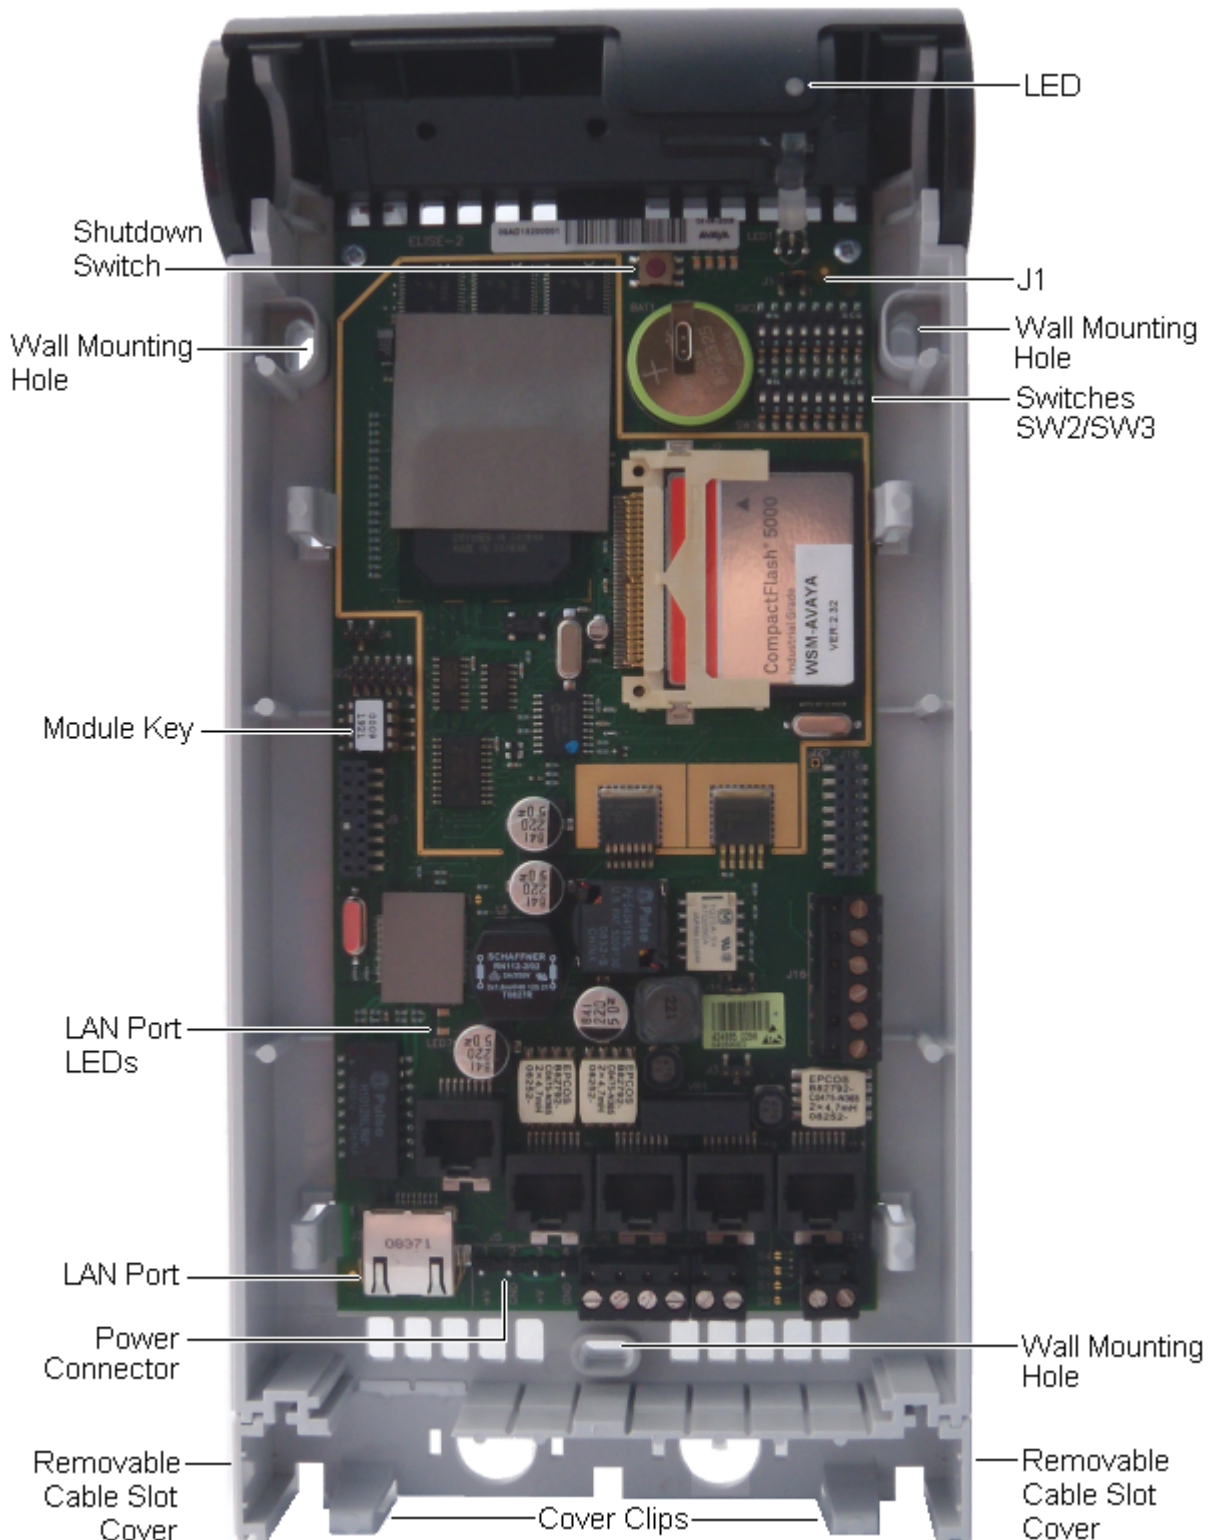

3. With the cover removed, familiarize yourself with the various features labeled above. These will be referred to during other parts of the installation process.


8.2.2 Connect the RTC Battery

The AIWS circuit board includes a 3V lithium battery which will keep the boards real time clock (RTC) running when power to the AIWS is off. The AIWS is shipped with the battery disconnected. To connect the battery, locate the switch **J1** at the top right of the board. Move the switch jumper to position 2-3.

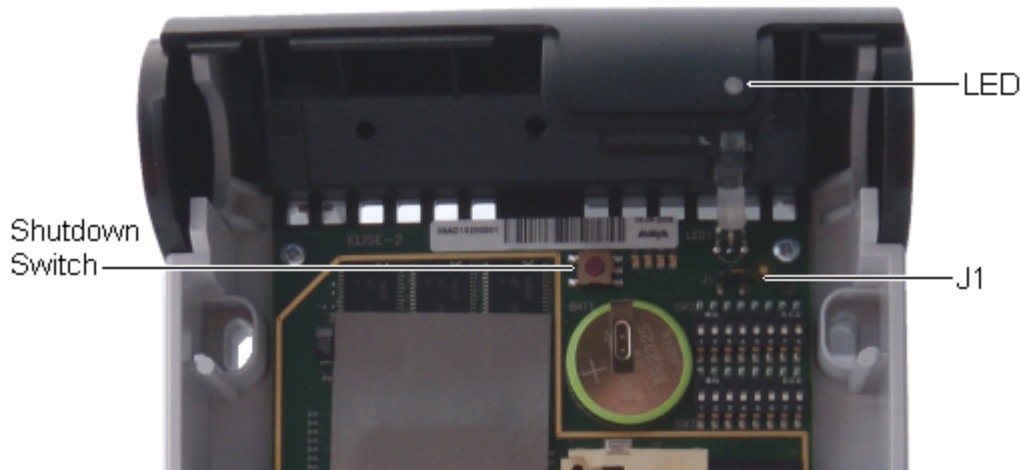

8.2.3 Cable Connections

1. Locate the switch sets **SW2** and **SW3** at the top-right of the AIWS circuit board. Ensure that all the switches are set to **Off**.
2. Locate the LAN port and the J5 power connector. Just below these is a plastic panel. With care remove sufficient parts of the panel to allow cable access to the LAN port and power connector when the AIWS cover is put back.

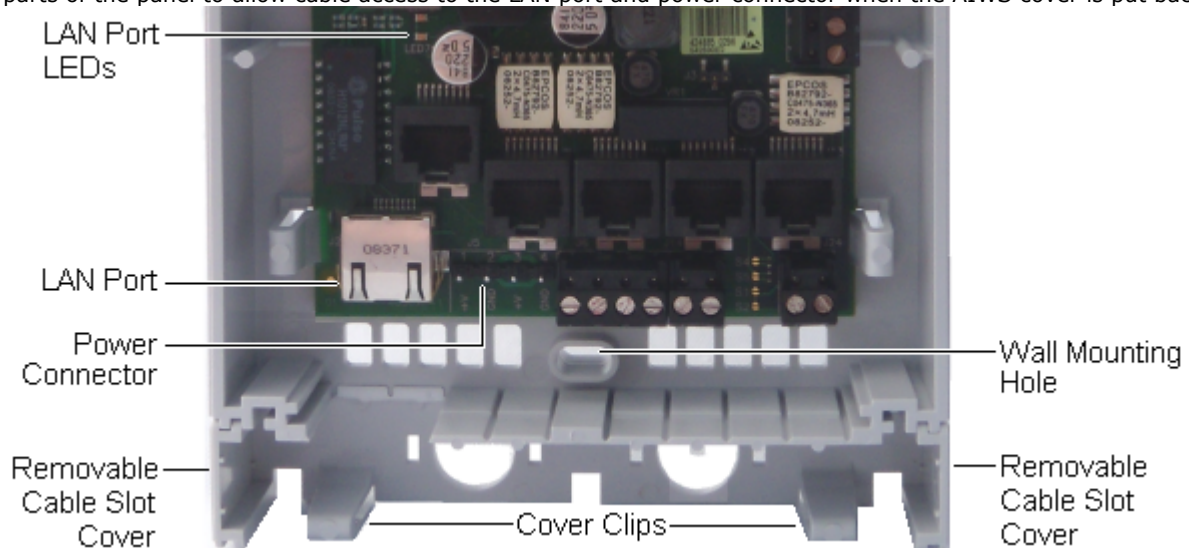


3. Connect the LAN cable from the IP Office to the AIWS.
4. Connect the power supply cable to the J5 power connector next to the AIWS LAN port.
5. Switch on power to the AIWS unit.

8.2.4 Browse the AIWS

The AIWS can be accessed using a web browser.

1. Enter the IP address of the AIWS into the browser address field.
 - Alternatively enter **http://Elise-0091921** as the address, replacing the digits with the AIWS unit's Module Key. The Module Key is printed on the [AIWS circuit board](#)^[156].
2. If a security certificate warning appears, select to continue.
3. Enter a user name and password. The default values are **admin** and **changeme**.
The AIWS menu is shown:

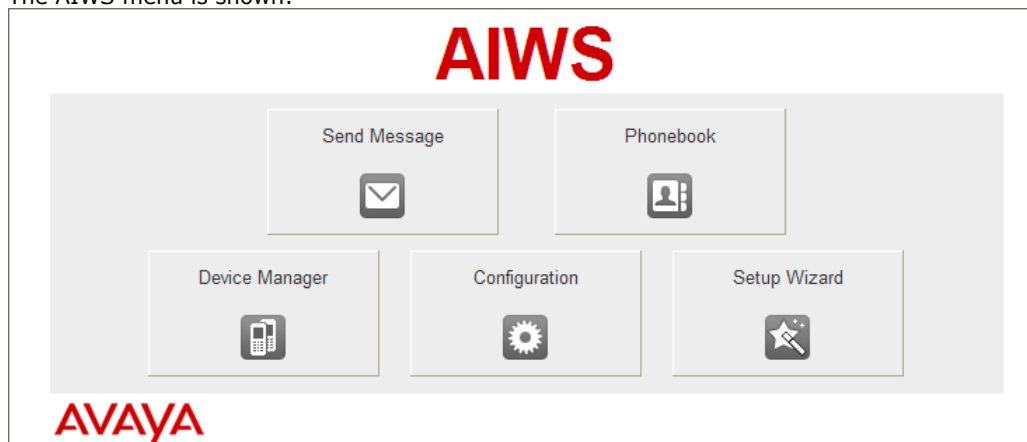


8.2.5 Run the Setup Wizard

The first time the AIWS is accessed it runs the setup wizard.

1. Access the AIWS using your browser.
2. If the unit is defaulted, the setup wizard runs automatically. If the unit already has configuration settings, then from the menu displayed select **Setup Wizard**.



3. Click **Next**.
4. Enter the network address settings for the AIWS unit.

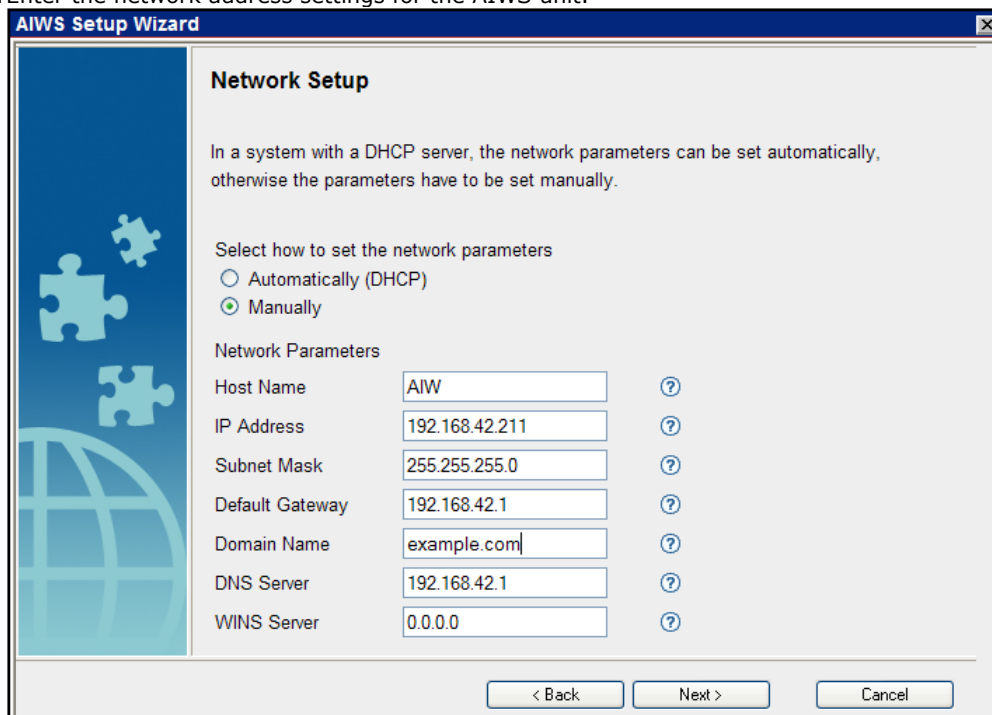

- Set the network parameters mode to **Manually**.
- **Host Name**
Enter a name to help identify the AIWS on the network.
- **IP Address/Subnet Mask**
Enter the static IP address details that the AIWS should use.
- Set the remaining details to match those being used by other devices on the network.

5. Click **Next**.

6. Enter the license number supplied with the AIWS unit and click **Next**.

Licence

The licence controls the functionality that is available.

Enter the licence number ?

ECFE090D40032205

< Back Next > Cancel

7. Enter the IP address of the master base station and click **Next**.

DECT IP Address

Communication with the DECT system uses a fixed IP address.

Enter DECT IP Address

192.168.42.210

Enter secondary DECT IP Address ?

0.0.0.0

< Back Next > Cancel

8. The **Date and Time** options are displayed. Select **NTP Time Server** and set the **Time Server IP Address** to be the IP address of the IP Office. Adjust the other values to match the customer site.

The screenshot shows the 'Date and Time' configuration window in the AIWS Setup Wizard. The window has a blue sidebar with puzzle pieces and a globe icon. The main area contains the following settings:

- Select how to set the time**: A dropdown menu set to 'NTP Time Server'.
- Enter the Time Server IP Address**: A text input field containing '192.168.42.1'.
- Select Time Zone**: A dropdown menu set to '(GMT) Greenwich Mean Time: Dublin, Lisbon, London'.
- Adjust for Daylight Saving Time automatically**: Radio buttons for 'Yes' (selected) and 'No'.
- Date Format**: A dropdown menu set to 'DD/MM/YYYY'.
- Time Format**: A dropdown menu set to '24h'.

At the bottom of the window are three buttons: '< Back', 'Next >', and 'Cancel'.

9. Click **Next**. The **Phonebook Properties** options are displayed.

10. Select **TFTP**, in order to have the AIWS obtain the phone book from the IP Office, and then click **Next**.

The screenshot shows the 'Phonebook Properties' configuration window in the AIWS Setup Wizard. The window has a blue sidebar with puzzle pieces and a globe icon. The main area contains the following settings:

- The Central Phonebook is a common telephone number directory that can be accessed from portables in the system.**
- Select database to use for search**: Radio buttons for 'Local - 500 Editable', 'Local - 2000 View only', 'LDAP', and 'TFTP' (selected).
- Enter text to display when entries are found**: A text input field containing 'Search Result'.
- Enter text to display when no entries are found**: A text input field containing 'Sorry, no match'.

At the bottom of the window are three buttons: '< Back', 'Next >', and 'Cancel'.


11. Set the **TFTP Server IP** to the IP address of the IP Office and click **Next**.

The screenshot shows the 'AIWS Setup Wizard' window with the 'TFTP Properties' tab selected. The window title is 'AIWS Setup Wizard'. On the left side, there is a decorative graphic with puzzle pieces and a globe. The main content area has the following text: 'TFTP Properties' followed by 'IP address and port number to the TFTP server where the phone book is stored. 69 is default port number.' Below this, there are two input fields: 'TFTP Server IP' with the value '192.168.42.1' and 'TFTP Server Port' with the value '69'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'.


12. If necessary, change the default passwords and click **Next**.

The screenshot shows the 'AIWS Setup Wizard' window with the 'Change Passwords' tab selected. The window title is 'AIWS Setup Wizard'. On the left side, there is a decorative graphic with puzzle pieces and a globe. The main content area has the following text: 'Change Passwords' followed by 'It is recommended to change default passwords. Leave text fields empty to keep current passwords.' Below this, there is a text field for 'Enter password for sysadmin'. Underneath, it says 'Change Password for: ?'. There are four rows of input fields for different users: 'sysadmin', 'admin', 'user', and 'ftpuser'. Each row has a question mark icon, a text field for the password, and a 'Verify Password' text field. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'.

13. Click **Finish** to save the settings.

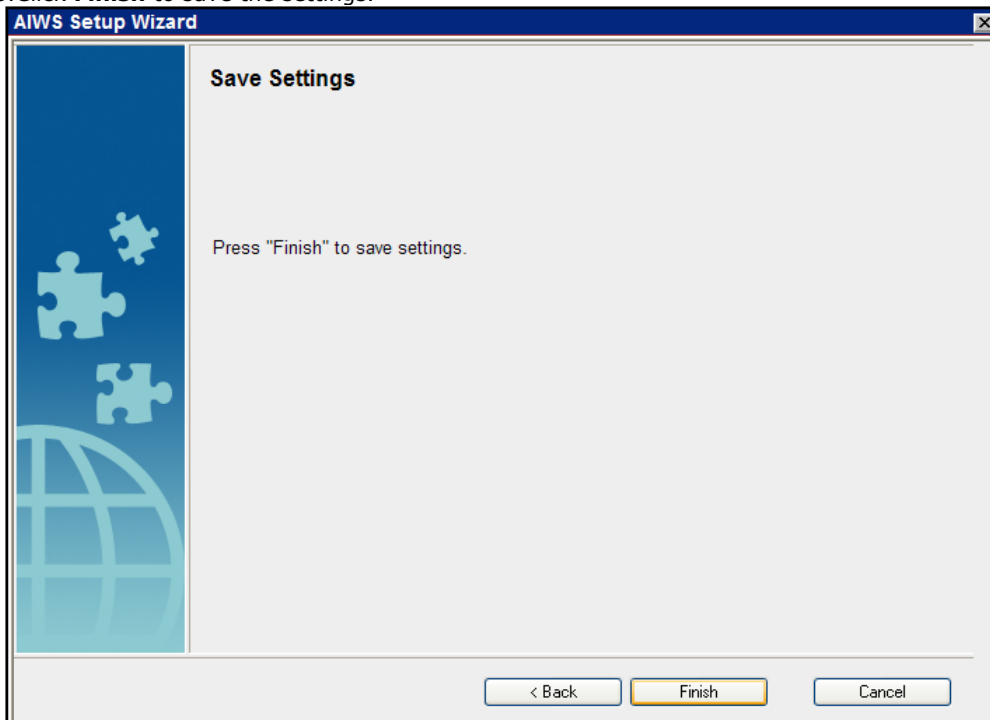

14. Click **Restart Now** and wait for the restart.

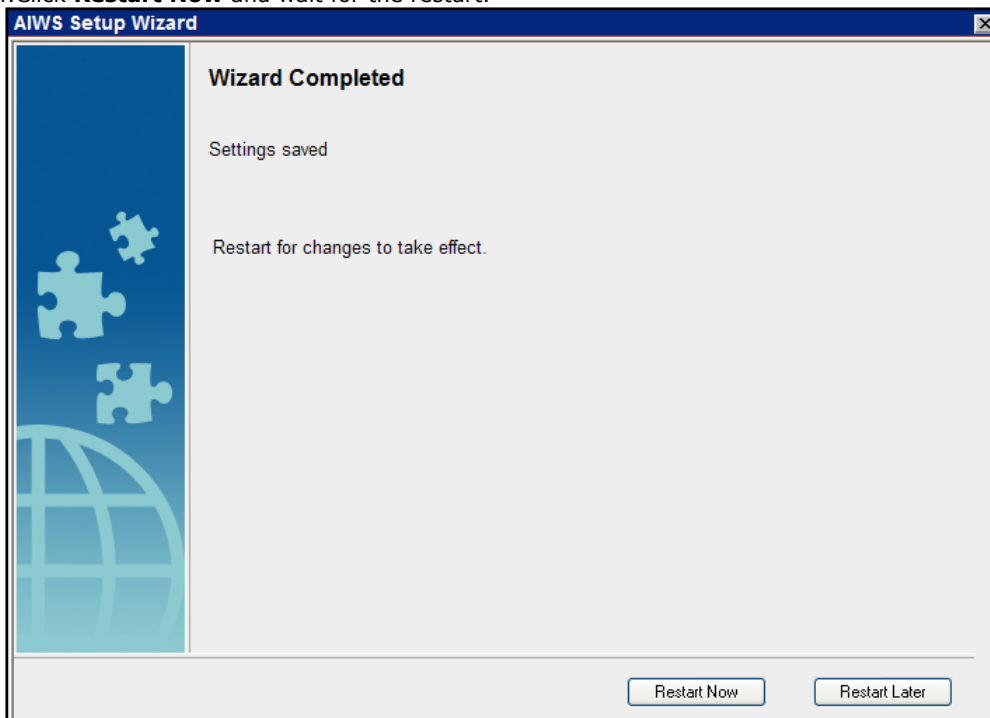

15. Close the browser access session. Start a new session using the new IP address.

8.2.6 Enable Base Station/AIWS Connection

The IP address of the AIWS needs to be entered into the configuration of the base stations.

Master Only

1. In the left-hand panel, select **UNITE**. Select the **Device Management** tab.

Configuration | SMS | **Device Management** | Service Discovery | Status Log

General | LAN | IP | LDAP | DECT | **UNITE**

Active Settings

Unite IP Address 192.168.42.211

2. For the **Unite IP Address**, enter the IP address that will be assigned to the AIWS unit when installed in the DECT system.
3. Click **OK**.
4. In the left-hand panel select **General**. Select the **Admin** tab. Enable **Show Advanced Options** and refresh.
5. In the left-hand panel select **Phonebook** and disable the phonebook option.

Configuration | **Phonebook**

General | LAN | IP | LDAP | DECT | UNITE | **Phonebook**

Enable

6. Click **OK** and reset the master base station.

Master and Slave

1. In the left-hand panel, select **UNITE**. Select the **Status Log** tab.

Configuration | SMS | Device Management | Service Discovery | **Status Log**

General | LAN | IP | LDAP | DECT | UNITE

Unite IP Address

Unite Resource Identity

2. For the **Unite IP Address**, enter the IP address that will be assigned to the AIWS unit when installed in the DECT system.
3. For the **Unite Resource Identity** enter a unique name to be associated with the base station.
4. Click **OK**.
5. Select the **SMS** tab. Again enter the IP address that will be assigned to the AIWS unit when installed in the DECT system.
6. Click **OK**.

8.2.7 Upgrade the AIWS Firmware

The AIWS will have been supplied with a default set of firmware. This must be upgraded to the firmware provided with the IP Office application software. Only the firmware supplied with the IP Office application software or indicated in IP Office Technical Bulletin should be used with AIWS units on IP Office DECT R4 systems.

- **Important:** This process can take up to 40 minutes.

1. Using a browser login to the unit.
2. Click on **Configuration**.


The screenshot shows the AIWS Configuration web interface. At the top, there is a header with a home icon, the title "AIWS Configuration", and a star icon. Below the header, the "Software Version: 2.32" and "OS Version: 9.01" are displayed. On the left side, there is a navigation menu with three items: "Phonebook", "Status", and "Other Settings". The main content area is titled "ELISE Installation" and shows "Starting up" with two buttons: "System Setup" and "Software". The "System Setup" button is selected, and the page content shows "System Setup" instructions.

3. Note the software version. Check whether this already matches the firmware detailed as supported by the level of software on the IP Office system.
4. In the browser address bar, change the `/config/start.php` part of the address to `/system`.
5. Click the **Software** button.

The screenshot shows the AIWS Configuration web interface with the "Software" button selected. The main content area is titled "ELISE Installation" and shows "Starting up" with two buttons: "System Setup" and "Software". The "Software" button is selected, and the page content shows "Current Software Versions" with a table listing AIWS and System versions.

Current Software Versions	
AIWS:	2.32-9.3.3-A
System:	9.01-xxx-A

6. In the sidebar, click **Install Image**.

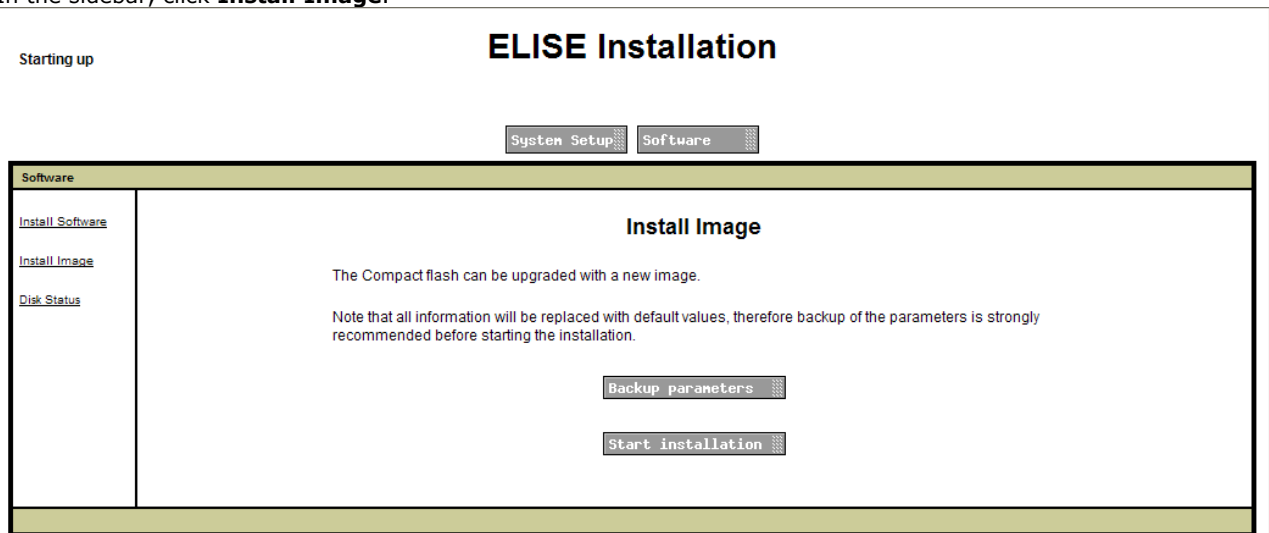


7. Click the **Backup parameters** button.


The browser shows a dialog for downloading a file called aiws-backup from the AIWS unit.

8. Select the option to save the file and select a save location. Make note of the location as the file needs to be reloaded after the firmware upgrade.


9. Click the **Start installation** button. A status and progress window appears:

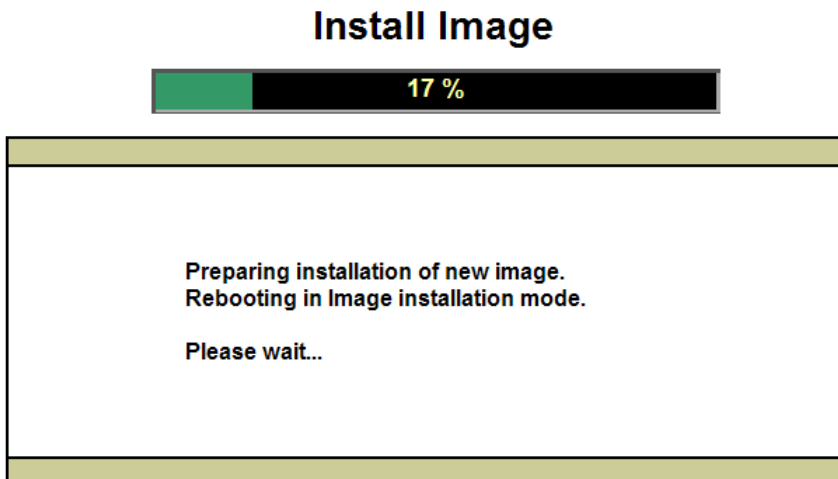


10. After a short delay, the AIWS prompts you for the location of the firmware file for the upload.

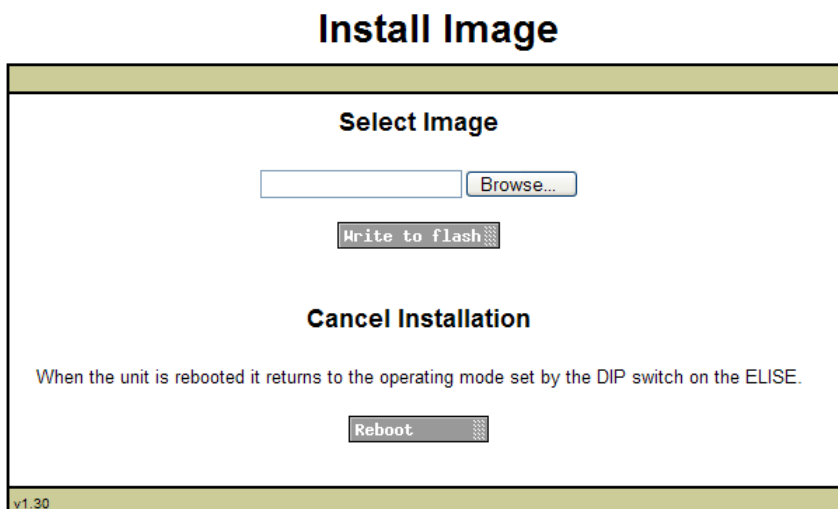


11. Click on **Browse**. Locate the **AIWS** folder in the software set previously unpacked. Select the **.img** file.

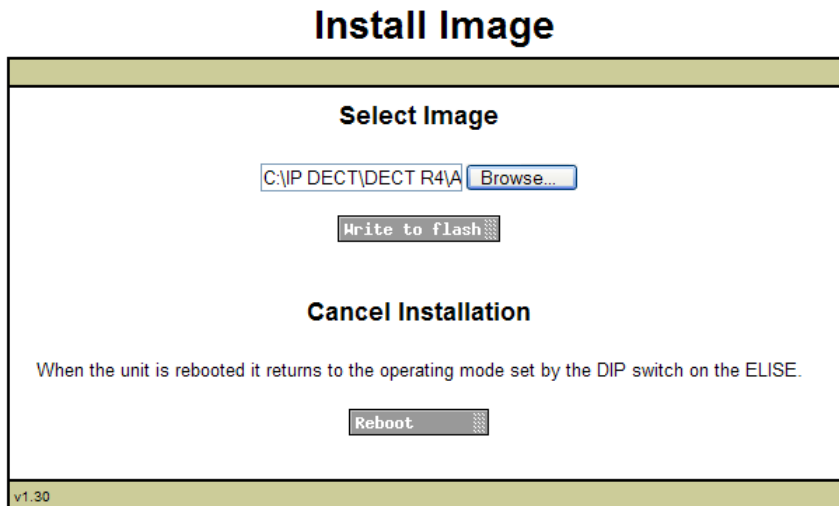

12. Click the **Write to flash** button.

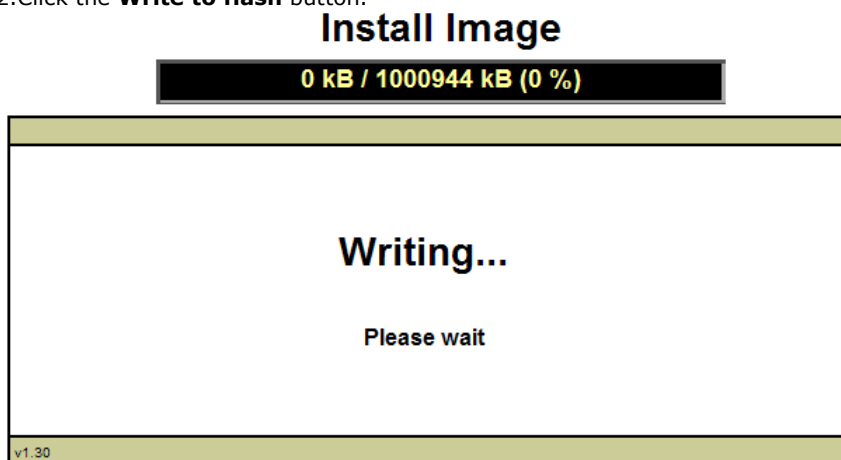


13. Wait for the process to finalize. The process can be time consuming, but must be allowed to complete.

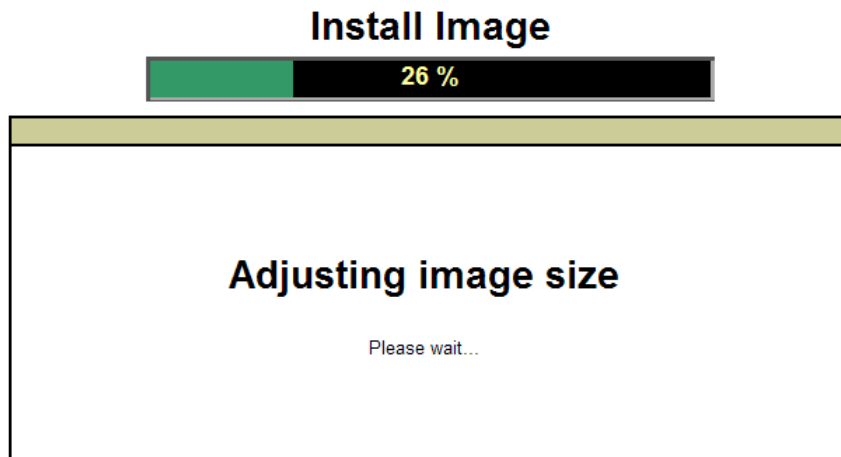


14.If the browser security warning is displayed, select to continue.

Install Image

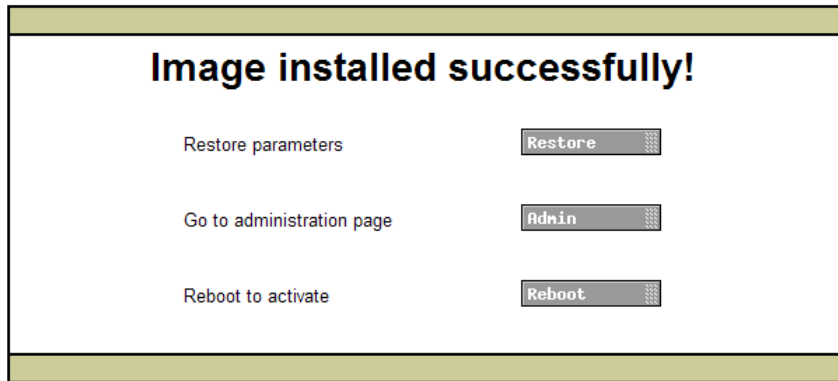


15.Click **Restore**. A separate window opens.

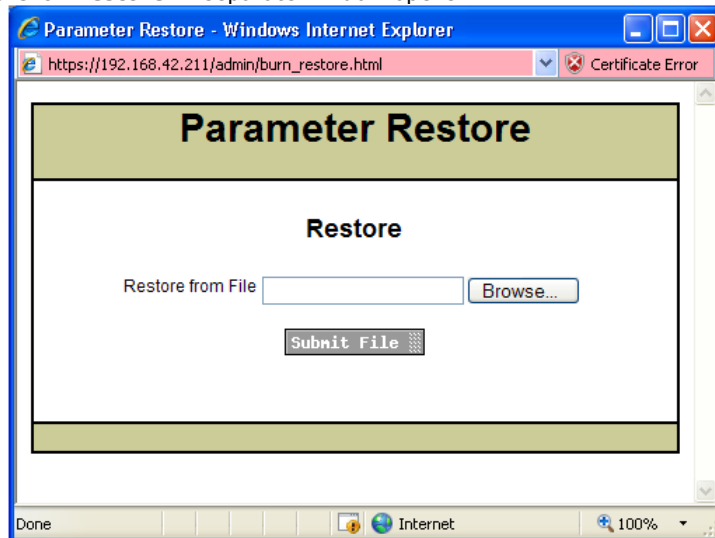


16.Select **Browse**, then locate and select the previously backed up *aiws-backup* file.

17.Click **Submit file**.

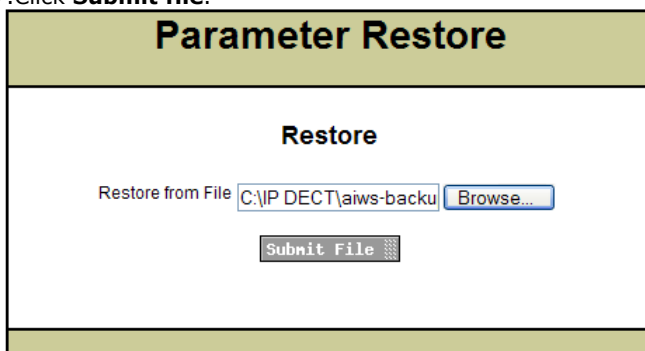

After the parameters are restored, a notification appears.

18. Click **Close**.

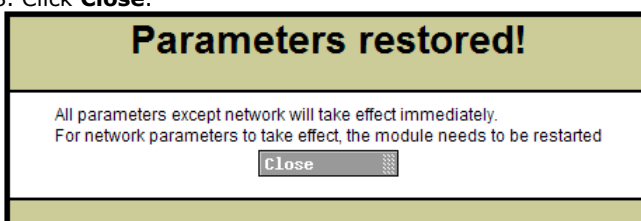

19. Select **Reboot**.

Install Image

Image installed successfully!

Restore parameters	<input type="button" value="Restore"/>
Go to administration page	<input type="button" value="Admin"/>
Reboot to activate	<input type="button" value="Reboot"/>


8.2.8 Switching Off the AIWS

Having now configured and upgraded the AIWS, it should be switched off and disconnected prior to being wall mounted

1. At the top right of the [AIWS circuit board](#)⁽¹⁵⁶⁾, locate the SW4 push button.
2. Press the button until the AIWS lamp starts to flash orange.
3. Remove the power cable. The power must be removed within 10 minutes or the AIWS will restart. If the AIWS restarts, wait until the Function Indicator is not indicating starting up (flashing orange) before pressing the SW4 button again.

8.2.9 Wall Mount the AIWS

The AIWS can be wall mounted. To facilitate service after the unit is installed, we recommend a free space of about 150 mm above and 50 mm below the unit.

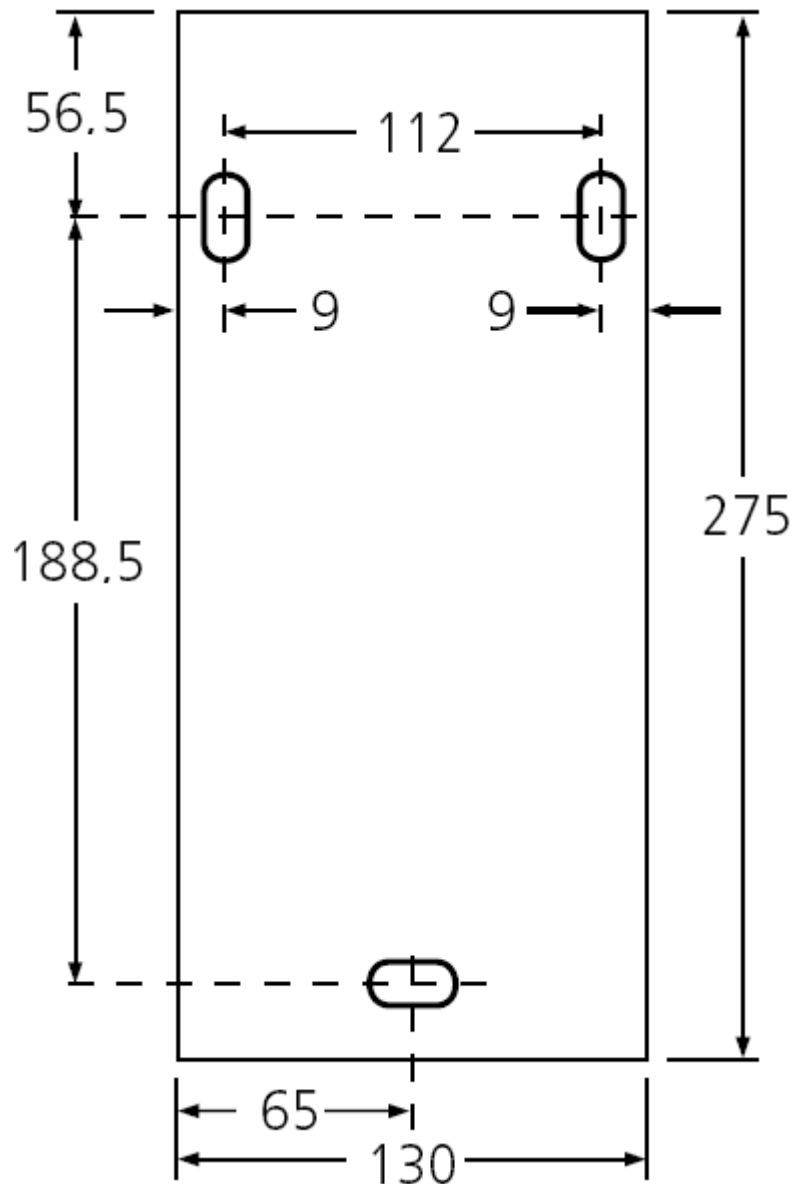

8.2.10 Replace the AIWS Cover

The AIWS cover can be clipped back into place without using any tools.

1. Check that the AIWS is fully operating (green lamp) and can be browsed from the network.
2. Check that the cables are routed such that they will not be trapped when the cover is replaced.
3. Engage the cover with the top edge of the AIWS. Pivot the cover back into position, checking that the various plastic edges are in their original positions.
4. The cover clips will spring into position.

8.2.11 AIWS Status Lamp

Colour	State	Description
Green	On	Running.
Orange	On	Failsafe or Network setup mode.
	Flashing (1 second on/off)	Image installation mode.
	Fast flash (100ms on/off)	Starting.
	Intermittent flash (100ms on/1 second off)	Restart.
	Slow flash (2 seconds on/3 seconds off)	Halted (auto restart after 10 minutes).
	Wink (5 seconds on/100ms off)	Unlicensed.
Red	On	Low voltage.
	Intermittent flash (100ms on/1 second off)	License error.
	Flashing (1 second on/off)	Watch dog reset.
	Slow flash (2 seconds on/3 seconds off)	Shutdown.
	Very slow flash (3 seconds on/3 seconds off)	Memory error.
	Wink (5 seconds on/100ms off)	Network error/Module key error.

8.2.12 Image Installation Mode

This is the maintenance process to put an AIWS into Image Installation mode. This is used to upload a .img file to the AIWS1 unit.

1. Remove the [AIWS cover](#)¹⁵⁶.
2. To set the AIWS to Image Installation mode:
 - a. Looking at the AIWS without the cover, the status LED should be towards the upper right corner
 - b. Beneath it there should be two rows of small switches, to the right of the round battery
 - c. The bottom one is of interest, as a way of being sure there should be a mark on the board right next to it saying **SW3**.
 - d. All the switches should be marked with numbers in range 1 to 8, there should also be a mark **ON**.
 - e. Set only the switch labeled 4 to **ON**, the rest to **OFF**.
3. From the browser make a reboot of the AIWS
 - a. If unable, there is another way: press the small button above and a bit to the left of the round battery on the AIWS circuit board
 - b. The press does not have to be long, a short one will do
 - c. There is a 10 minute waiting time when doing so, in addition to the actual shutdown and startup of the AIWS
 - d. The reboot from the browser does not have this waiting time, so it is preferred.
4. Access the AIWS through the web browser. Be sure to not type https in the address bar: in image installation mode it only works with http
5. Select the image file and upload it
6. Set the AIWS back to normal mode
 - a. Set the switch labeled 4 back to OFF like all the rest
7. Reboot the AIWS, preferably from the browser again.
8. You must reconfigure the AIWS settings. Although the IP address should have not been changed, if having trouble accessing it try:

-
- a. Setting the AIWS in network mode by turning the switch labeled 1 to ON
 - b. Reboot the AIWS
 - c. The status LED should be steady amber (not blinking at all)
 - d. Access the AIWS by the reserved IP address **192.5.36.229**.
 - e. Enter the desired IP settings
 - f. Set the AIWS into normal mode by turning switch **1** back to **OFF**.
 - g. Reboot the AIWS
 - h. Access the AIWS using the newly entered LAN settings.

Chapter 9.

Miscellaneous

9. Miscellaneous

9.1 Reset /Restart Switch

The base stations (all types), IP DECT Gateway and AIWS2 all include a reset switch. To press it requires a fine point. How long the switch is depressed affects the type of reset.

Action	Duration	Effect
Short press	Less than 1 second	Restart
Medium press	Approximately 3 seconds	Restart in TFTP mode. This mode is intended for development only.
Long press	Approximately 10 seconds	Factory reset. All configuration parameters will be set to default values.

9.2 Base Station Status Lamps

IPBS2 Base Stations

IPBS2 base stations have one LED to indicate status.

LED	Description
Blue On	Idle, no calls in progress.
Blue Fast Flash	Starting up or searching for air synchronization.
Blue On - Regular Blink	Calls in progress.
Blue On - Red Blink	Maximum calls in progress.
Blue Slow Flash	Firmware download in progress.
Yellow Fast Flash	IPBS2 is in mini firmware mode.
Yellow On	TFTP Mode (<i>not used</i>).
Red Fast Flash	No Ethernet connection.
Red On	Hardware error.
Blue On - Yellow Blink	The IPBS2 is in deployment mode and has air synchronization.
Red On - Yellow Blink	The IPBS2 is in deployment mode and has no air synchronization.
Blue Slow Flash/Yellow Flash	The IPBS2 is in deployment mode and does not have adequate air synchronization.
Green	Reset button depressed.

IPBS1 Base Stations

Each IPBS1 base station has two LED lamps.

LED	Color	Description
LED 2 - Activity	Off	Idle, no calls in progress.
	Green	Calls in progress.
	Green Flashing	Maximum calls in progress.
	Amber*	Air synchronization insufficient and calls in progress.
	Amber Flashing*	Air synchronization insufficient and no calls in progress.
	Amber Slow Flashing*	Air synchronization insufficient and maximum calls in progress.
	Red Flashing	No air synchronization. Searching for synchronization signal.
	Red Fast Flashing	Download of RFP software in progress.
LED 1 - Status This is the lower LED on the bottom edge of the base station.	Green	Operational
	Amber	TFTP Mode (<i>not used</i>).
	Amber Fast Flashing	Firmware download in progress.
	Alternating Red/Green	No Ethernet connection.

Digital Base Station


Digital base stations have two LED lamps.

LED	Color	Description
LED 2 - Activity	Off	Idle, no calls in progress.
	Green	Calls in progress.
	Green Flashing	Maximum calls in progress.
	Amber	Base station OK but not operational (self-test, no communication with IP DECT Gateway).
	Amber Flashing	Software download in progress.
LED 1 - Status This is the lower LED on the bottom edge of the base station.	Green	Operational
	–	–
	–	–

9.3 IP DECT Gateway Status Lamps

IP DECT Gateway Status Lamp

This LED is located at the left-hand end of the front panel of the IP DECT Gateway.

LED	Description
Off	No power.
Green slow flash	Reset switch  pressed.
Green fast flash	Firmware update in progress or config cleared after reset.
Green on	OK.
Red on	Error.
Amber on	TFTP mode.

Base Station Port Lamps

Each base station port has a left-hand and right-hand LED. These are used as follows:

Left-hand LED		Right-hand LED	
LED	Description	LED	Description
Off	No link to base station.	Off	No calls in progress.
On	Linked and base station operational.	On	Calls in progress.
Flashing	Linked but base station not operational.	Flashing	Maximum calls in progress.

LAN Port Lamps

Each LAN port has a left-hand and right-hand LED. These are used as follows:

Left-hand LED		Right-hand LED	
LED	Description	LED	Description
Off	No link or Ethernet connection.	Off	No connection or 10Mbps connection.
On	No network activity.	On	100Mbps connection
Flashing	Network activity.	–	–

9.4 AIWS2 Status Lamps

Status LED

Colour	State	Description
Blue	On	OK. AIWS operational.
	Fast Flash	Starting up or shutting down.
Red	Fast flash	Error or fault.
	Slow flash	Warning
Yellow	Double blink	Waiting for automatic startup.

Power LED

Colour	State	Description
Blue	On	Power OK.
Red	Fast flash	Shutting down due to low voltage.
	Slow flash	Low voltage.

Mode LED

This LED is incorporated into the Mode button on the front of the unit.

Colour	State	Description
Blue	Slow flash	Mass storage mode.

9.5 AIWS1 Status Lamp

Colour	State	Description
Green	On	Running.
Orange	On	Failsafe or Network setup mode.
	Flashing (1 second on/off)	Image installation mode.
	Fast flash (100ms on/off)	Starting.
	Intermittent flash (100ms on/1 second off)	Restart.
	Slow flash (2 seconds on/3 seconds off)	Halted (auto restart after 10 minutes).
	Wink (5 seconds on/100ms off)	Unlicensed.
Red	On	Low voltage.
	Intermittent flash (100ms on/1 second off)	License error.
	Flashing (1 second on/off)	Watch dog reset.
	Slow flash (2 seconds on/3 seconds off)	Shutdown.
	Very slow flash (3 seconds on/3 seconds off)	Memory error.
	Wink (5 seconds on/100ms off)	Network error/Module key error.

Chapter 10.

Non-Provisioned Installation

10. Non-Provisioned Installation

This method of installation is used with pre-IP Office Release 7.0 systems and systems that include handsets that do not support IP Office provisioning.

• **When to Use Non-Provisioned Installation**

The use of [IP Office provisioned installation](#)^[40] is recommended for all installations except those that do not contain 3720, 3725, 3740 or 3749 phones.

- It is assumed that you are familiar with installation and configuration of IP Office systems.

Information

- Service user name and password for IP Office configuration access.
- Service user name and password for IP Office security settings access.
- IP Office IP address.
- Avaya IP Endpoint licenses.

Parts Required

- IP Office Release 9.1 software DVD or image of the IP Office Release 9.1 admin software.

Tools Required

- Programming PC with IP Office Manager application installed. You must have rights on this PC to change its IP address settings unless it is a DHCP client.
- Software for zip file extraction.

IP Base Station Installation Requirements

Parts Required

- Base station
Includes:
 - Base station.
 - Two 3.5mm screws and two 6mm wall plugs suitable for wall mounting onto a solid wall (brick or similar).
 - 1.2 metre (4 foot) LAN cable. If this is replaced with a longer cable the replacement should be a CAT5 Ethernet LAN cable.
- If using Power over Ethernet:
 - The base station supports Power over Ethernet, IEEE 802.3af, class 2.
- If not using Power over Ethernet:
 - Base station power supply unit.
Required if not using Power over Ethernet to power the base station. Note that the base station power supply units include an 8 metre (26 feet) cable from the PSU to the base station. Check that you have the correct type of power supply unit for the locale.
 - BSX-0013: Europe (except United Kingdom).
 - BSX-0014: United Kingdom.
 - BSX-0015: USA/Canada.
 - BSX-0016: Australia.
 - Mains power outlet socket.
- LAN Socket.

Information

- DECT R4 SARI.
- Base Station IP Addresses.
- Detailed plans from the site survey indicating the intended base station locations, LAN sockets and if necessary power supply outlets.

Tools

- Programming PC with DECT R4 software.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.

- Drill and drill bits suitable for the selected wall mounting position of the AIWS.
- Screwdrivers for use with the screws selected for AIWS wall mounting.

Phone Subscription Requirements

Information

- Service user name and password for IP Office configuration.
- User names and extension numbers for the DECT phones.
- Phone IPEI numbers if using an pre-configured installation mode.

Tools

- **IP Office Manager.**
- **Device Manager**
The software installed on each handset may need to be upgraded to match that supplied with the [DECT R4 software](#)^[42]. This is done using the Windows Device Manager software to upgrade phones via an advanced charger or using [AIWS Device Manager](#)^[125] to upgrade phones over the air.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.


10.1 DECT Software

Before beginning installation, in addition to having IP Office Manager installed, you need to unpack the DECT R4 software onto your programming PC.

DECT R4 is supported on a range of Avaya systems. However, for IP Office operation, only firmware specifically documented as having been tested and supported with IP Office should be used. Details of supported firmware will be included in IP Office Technical Bulletins and Technical Tips.

To unpack the DECT R4 software:

1. On the programming PC, create a folder with a name indicating its purpose, for example **c:\IP_DECT_R4**.
2. Within the IP Office Administrator Application software (ie. the software from which IP Office Manager is installed), locate the folder **IPDECT**.
3. The folder contains a file **DECT R4.zip**. This is the file containing software for DECT R4. The file **IPDECT.zip** contains software for the previously supported IP DECT product and not for DECT R4.
4. Copy the **DECT R4.zip** file to the folder created on the programming PC.
5. Using WinZip or a similar tool, extract the contents of the zip file into the folder, maintaining the directory structure of the zip files.
6. The set of files should appear similar to the following.

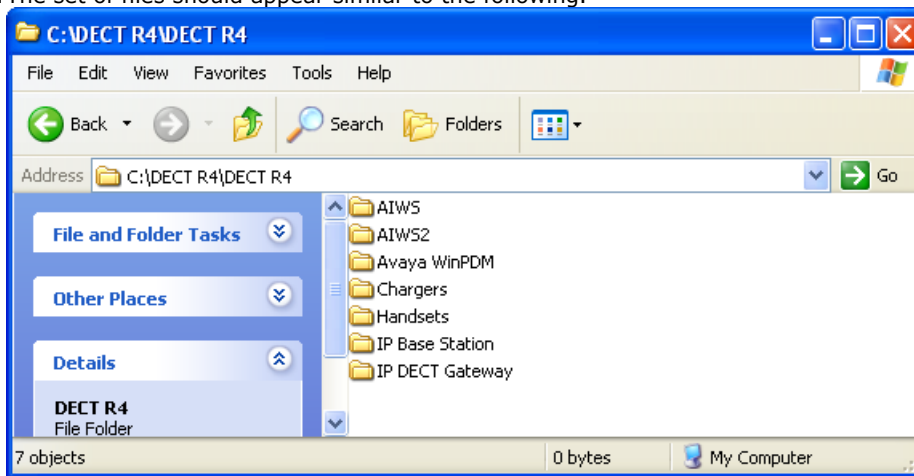

7. Check the software levels as follows:

- Open the **IP Base Station** folder. There are separate sub-folders for **IPBS1** and **IPBS2** base stations. Open each and note the software level shown as part of the .bin file filenames, there are separate files for the base station boot file and firmware file. All the base station in the installed system should be run the same levels of software.
- Open the **Handsets** folder and note the software level shown as part of the .pkg file filenames. The handsets in the system should be running this level of software or higher.
- Open the **IP DECT Gateway** folder and note the software level shown as part of the .bin filenames.

10.2 Security Settings



The provisioning connection between the IP Office control unit and the master base station uses the HTTP/HTTPS service configured in the IP Office system's security settings.

- **Important**

It is important to note that for new IP Office Release 9.1 systems and system where the security settings have been defaulted:

- The **TFTP Directory Read** function used by handsets to display the IP Office system directory is off by default.

To check the security settings:

1. Start IP Office Manager and select **File | Advanced | Security Settings...**
2. From the discovery menu select the IP Office and click **OK**. Enter the systems user name and password for the security service user login. These may be different from the name and password used for IP Office configuration access.
3. Select  **System**. Select the **Unsecured Interfaces** tab. Select **TFTP Directory Read** and click **OK**. This setting needs to be enabled to allow the handsets to display the IP Office system directory.
4. Click **OK** and then click on the  icon to save any changes you have made to the security settings.

10.3 Adding Licenses

Each IP DECT extension requires an Avaya IP Endpoint license. This applies even if the handset subscribed to the IP DECT R4 system is not an Avaya phone.

Phones without a license will still be able to subscribe and register but will be limited to making emergency calls only (calls that match an IP Office **Dial Emergency** short code). The associated user will be treated as if logged off. If a license becomes available, it will be assigned to any unlicensed DECT handsets first and then to any other unlicensed Avaya IP phone in the order that the phones registered.

- **Avaya IP Endpoint Licenses**

Licenses are added to the IP Office configuration and are based on a serial number unique to the system.

- For each IP500 VCM 32 or IP500 VCM 64 card installed in the system also enables 12 Avaya IP endpoints without requiring licenses.
- For each IP400 VCM card installed in the system, each VCM channel supported by the card allows support for 3 Avaya IP phones.
- The VCM channels provided by IP500 Combination cards do not enable any Avaya IP endpoints.
- Licenses are normally automatically assigned to extensions in order of registration. However, existing extensions can be configured to [reserve a license](#)^[48]. This ensures that they do not become unlicensed when newly added extensions manage to register first following a system reboot.

10.3.1 Checking the Licensing Number

IP Office licenses are issued against a unique dongle serial number. For IP500 control units, the number is unique to the smart card fitted to the control unit. For IP500v2 control units, the number is unique to the System SD card fitted to the system. For any licenses entered into the system configuration to be valid, they must be licenses issued against that serial number.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.


2. Select  **System**.

3. Select the **System** tab.

4. The feature key serial number is shown by the **Dongle Serial Number** or the **System Identification Number** field.

10.3.2 Adding Licenses

1. Using IP Office Manager, retrieve the configuration from the IP Office system.

2. Select  **License**. The current licenses in the system configuration are displayed.

3. Click **Add** and select **ADI**.

4. Enter the license which you have been supplied and click **OK**.


5. The type of the license, **Avaya IP endpoints**, should be displayed but with its **License Status** set to **Unknown**. If the **License Type** was not recognized, check that the key was entered correctly.


6. Save the configuration back to the IP Office system and then receive the configuration from the IP Office system again.

7. The **License Status** should now be **Valid**.

10.3.3 Reserving Licenses

Licenses are normally automatically assigned to extensions in order of registration. However, existing extensions can reserve a license in order to ensure they do not become unlicensed when new extensions added to the system manage to register first following a system reboot.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Select  **Extension** and then select the DECT extension.
3. Select the **IP DECT** tab. Note, the appearance of this menu will vary depending on whether you are doing a provisioned or non-provisioned installation.

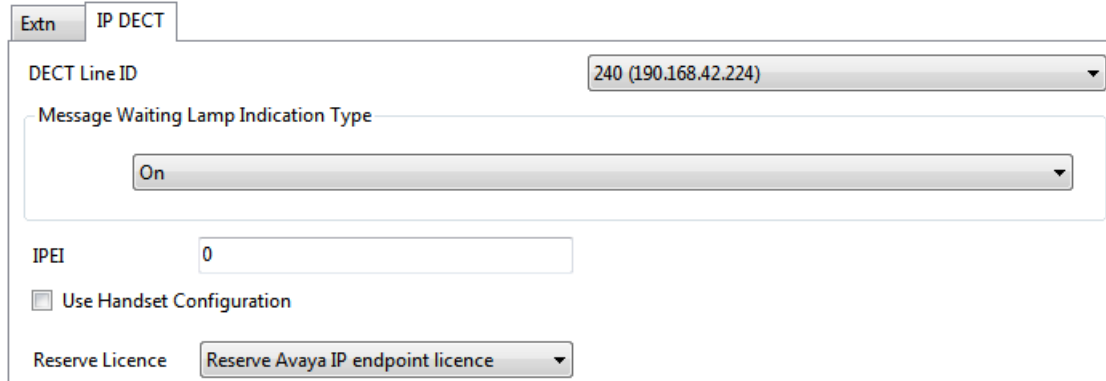



The screenshot shows the configuration interface for an IP DECT extension. At the top, there are two tabs: 'Extn' and 'IP DECT', with 'IP DECT' being the active tab. Below the tabs, there are several configuration fields:


- DECT Line ID:** A dropdown menu showing '240 (190.168.42.224)'.
- Message Waiting Lamp Indication Type:** A dropdown menu showing 'On'.
- IPEI:** A text input field containing '0'.
- Use Handset Configuration:** A checkbox that is currently unchecked.
- Reserve Licence:** A dropdown menu showing 'Reserve Avaya IP endpoint licence'.

4. Setting the **Reserve Licence** option to **Reserve Avaya IP endpoint licence** is used to reserve an existing license for the extension.
5. Repeat the process for any other extensions for which you want to reserve the license.
6. Save the configuration back to the IP Office system.

10.4 IP DECT Line Setup


At this stage we will create an IP DECT line for traffic between the IP Office and the DECT R4 system. The line is configured with the IP address of the master base station. The IP Office configuration only requires and allows a single IP DECT line.

1. Using IP Office Manager, retrieve the configuration from the IP Office system.
2. Click on  **Line**. The list of existing lines is shown.
3. Click on the  icon and select **IP DECT Line**. The settings for an IP DECT line are displayed.
4. On the **Line** tab there are no adjustable settings. Once the system is installed and operational, this tab lists the DECT extensions.

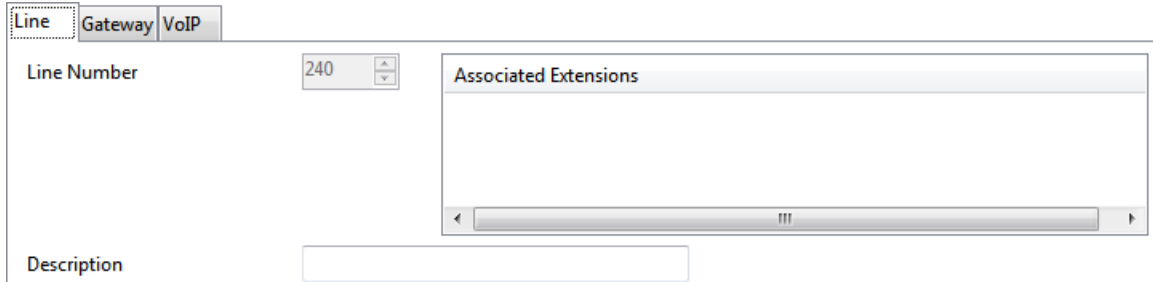

The screenshot shows the configuration interface for an IP DECT line. At the top, there are three tabs: "Line", "Gateway", and "VoIP". The "Line" tab is selected. Below the tabs, there is a "Line Number" field with a value of "240" and a small up/down arrow. To the right of this is a large empty box labeled "Associated Extensions". Below these fields is a "Description" field, which is currently empty.

5. Select the **VoIP** tab. This table is used to set details of the master base station.

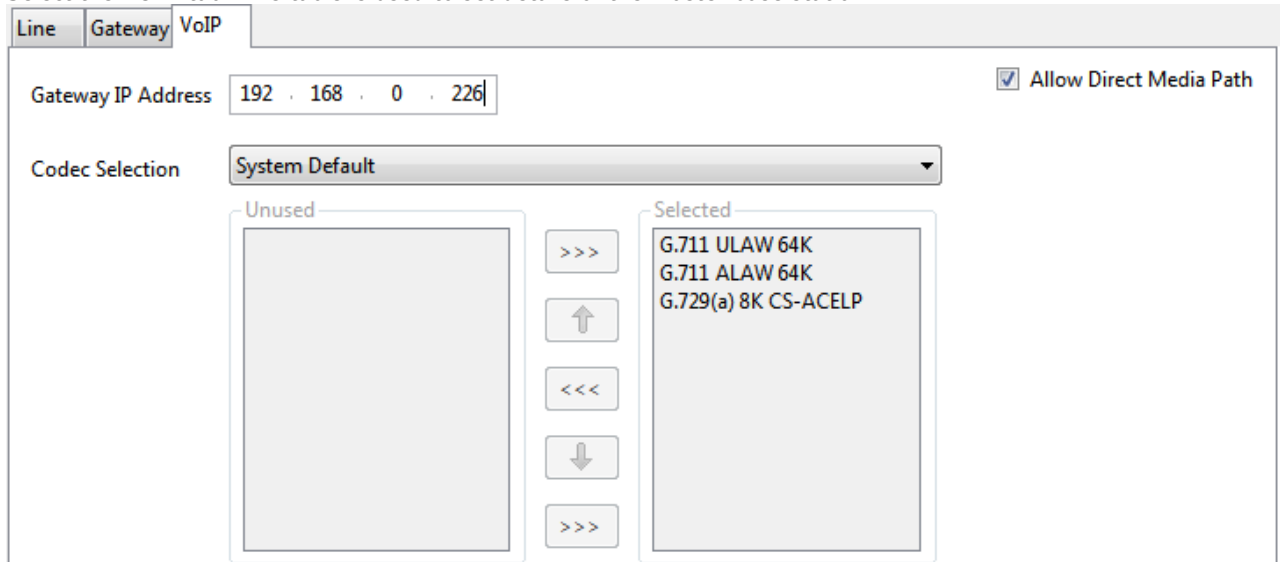

The screenshot shows the configuration interface for an IP DECT line, with the "VoIP" tab selected. At the top, there are three tabs: "Line", "Gateway", and "VoIP". The "VoIP" tab is selected. Below the tabs, there is a "Gateway IP Address" field with a value of "192 . 168 . 0 . 226". To the right of this field is a checkbox labeled "Allow Direct Media Path" which is checked. Below the "Gateway IP Address" field is a "Codec Selection" dropdown menu with a value of "System Default". Below the dropdown menu are two columns: "Unused" and "Selected". The "Unused" column is empty. The "Selected" column contains three entries: "G.711 ULAW 64K", "G.711 ALAW 64K", and "G.729(a) 8K CS-ACELP". Between the two columns are five buttons: ">>>", "↑", "<<<", "↓", and ">>>".

- a. Set the **Gateway IP Address** to match the IP address that will be assigned to the master base station.
- b. Leave the other fields at their default settings.

6. Select the **Gateway** tab.

Line **Gateway** VoIP

Auto-Create Extension

Auto-Create User

Enable DHCP Support

Boot File

ADMM MAC Address

VLAN ID

Base Station Address List

Add...
Remove
Edit...

Enable Provisioning

SARI/PARK

Subscriptions

Authentication Code

- a. If you want to use anonymous handset subscription, select the **Auto-Create Extension** and **Auto-Create User** options.
 - b. The **Enable DHCP Support** options are not used for DECT R4 systems. Do not enable.
 - c. The **Enable Provisioning** options are used for a [provisioned installation](#)⁴⁰. Do not enable for a non-provisioned installation.
7. Save the configuration back to the IP Office system. If the system request a reboot select one of the reboot modes.

10.5 Master Base Station Configuration

The base station installation process consists of the following stages:

1. [Default the base station](#) ^[192].
2. [Access the base station configuration](#) ^[193].
3. [Update the base station firmware](#) ^[194].
4. [Set the base station IP address](#) ^[196].
5. [Configuring VLAN Settings](#) ^[197].
6. [Set the time source](#) ^[198].
7. [Set the QoS/ToS settings](#) ^[199].
8. [Set the base station as the master base station](#) ^[199].
9. [Enable supplementary services](#) ^[201].
10. [Select the PBX Switch mode](#) ^[201].
11. [Configure the IP trunk](#) ^[202].
12. [Enter the radio settings](#) ^[203].
13. [Enter the PARI code](#) ^[204].
14. [Enter the SARI/PARK code](#) ^[204].
15. [Configure Air Sync](#) ^[205].
16. [Configure IP Office Directory Integration](#) ^[206].
17. [Reset the base station](#) ^[207].
18. [Check the base station](#) ^[207].

Pre-Requisites

- IP Office connected to the LAN with IP DECT line configured for master base station IP address.

Parts Required

- Base station
Includes:
 - Base station.
 - Two 3.5mm screws and two 6mm wall plugs suitable for wall mounting onto a solid wall (brick or similar).
 - 1.2 metre (4 foot) LAN cable. If this is replaced with a longer cable the replacement should be a CAT5 Ethernet LAN cable.
- If using Power over Ethernet:
 - The base station supports Power over Ethernet, IEEE 802.3af, class 2.
- If not using Power over Ethernet:
 - Base station power supply unit.
Required if not using Power over Ethernet to power the base station. Note that the base station power supply units include an 8 metre (26 feet) cable from the PSU to the base station. Check that you have the correct type of power supply unit for the locale.
 - BSX-0013: Europe (except United Kingdom).
 - BSX-0014: United Kingdom.
 - BSX-0015: USA/Canada.
 - BSX-0016: Australia.
 - Mains power outlet socket.
- LAN Socket.

Information

- DECT R4 SARI.
- Base Station IP Addresses.
- Detailed plans from the site survey indicating the intended base station locations, LAN sockets and if necessary power supply outlets.

Tools

- Programming PC with DECT R4 software.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.
- Drill and drill bits suitable for the selected wall mounting position of the AIWS.
- Screwdrivers for use with the screws selected for AIWS wall mounting.

10.5.1 Default the Base Station

This process will default a base station or IP DECT Gateway, erasing its configuration. After the unit restarts it will default to the IP address 192.168.0.1/255.255.255.0. For more information on the base station LEDs and what their statuses indicate, see [Base Station Status Lamps](#) ^[15].

To default a base station:


1. With the unit not connected to anything else, connect the power supply and switch on. The LED on the base station flashes red to indicate that no Ethernet is detected. Otherwise, the LED flashes blue.
2. Wait approximately five seconds.
3. Press and hold the **Reset** button on the base station for approximately 10 seconds. For IPBS2 base stations, the LED on the base station changes to quick flashing blue, then goes out and finally returns to a slow flashing blue.
4. Release the **Reset** button and wait for the base station to reset. The LED should turn back on to solid amber.
5. Quickly press the **Reset** button once. The base station reboots with default settings. The default IP is 192.168.0.1, with DHCP on but not active. If you want to activate DHCP, reset the base station again.

Alternate Method

The address an existing base station or IP DECT Gateway is using can be determined using the following process. It uses the MAC address of the unit, which you can find printed on a label on the back or bottom of the unit.

This procedure requires use of the Command Prompt, for which you *must* have Administrator rights.


To display the base stations IP address:

1. Right-click on the  **Command Prompt** icon (**Programs | Accessories**) and select **Run as administrator**.
2. Enter **nbtstat -R**. The PC should respond that it has purged and reloaded the NBT remote cache table.
 - For a base station, enter **nbtstat -a ipbs-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
 - For a IP DECT Gateway, enter **nbtstat -a ipbl-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
3. The results indicate the IP address the device is currently using.
5. Use that address to access the base stations configuration and set it to a fixed address.

10.5.2 Access the Base Station's Configuration

To login to a base station:

1. Depending on whether DHCP is being used or not:
 - If connected directly to the base station, change your programming PC's network address to 192.168.0.200 with subnet mask 255.255.255.0. Connect the LAN cable from your PC to the base station.
 - If both your PC and the base station are connected to a LAN network with DHCP server, ensure your PC is set to act as a DHCP client or has a fixed address that is valid on the network.
2. Start your web browser and enter the http:// or https:// followed by the IP address of the base station. The default IP address is 192.168.0.1. If a security certificate warning is displayed, select to continue to this website.
3. The base station should respond with its initial configuration menu.

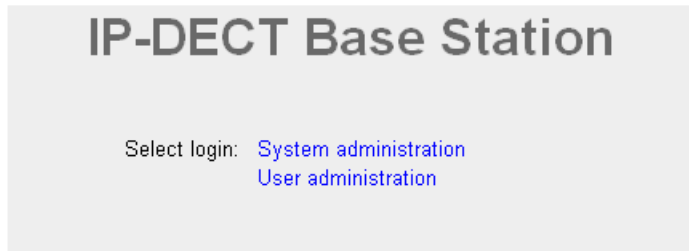

4. Select **System administration**. A password entry dialog will be displayed. Enter the default user name (**admin**) and password (**changeme**).
5. The configuration menu for the base station is displayed.

Configuration	Info	Admin	NTP	EULA
General				
LAN	Version IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]			
DECT	Serial Number 09AD15300066			
Services	MAC Address (LAN) 00-01-3e-01-6f-9c			
Administration	SNTP Server 192.168.0.210			
Users	Time ** ** ** **			
Device Overview	Uptime 0d 0h 2m 29s			
Backup	RFP SW version 3.2.10			

6. Note the software levels shown in the **Version** screen. These determines whether you need to upgrade the base station software.

10.5.3 Update the Base Station Firmware


The base station may need to be upgraded to the [DECT software](#)^[42] supplied with IP Office administration software. That software consists of two parts, a firmware file and a boot file. All base stations in a DECT system should use the same software.

To update the base station firmware:

1. Browse into the base station's configuration and note the software levels shown by the **Version** line.

Configuration		Info	Admin	NTP	EULA
General	Version	IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]			
LAN	Serial Number	09AD15300066			
DECT	MAC Address (LAN)	00-01-3e-01-6f-9c			
Services	Sntp Server	192.168.0.210			
Administration	Time	** ** * ** *			
Users	Uptime	0d 0h 2m 29s			
Device Overview	RFP SW version	3.2.10			
Backup					

2. Check that these match the versions supplied with the IP Office administration software. Ensure that you are checking against the correct folder for an IPBS1 or IPBS2 base station. If they do not match, then you must upgrade the base station.

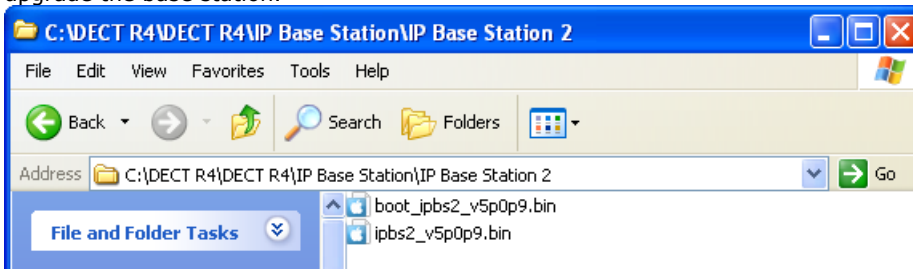


3. If both software files need to be upgraded, the boot file should be upgraded first.

- **To upgrade the boot file:**

In the left-hand column, under the **Administration** menu, select **Update** and then select the **Boot** tab.

Configuration		Config	Firmware	Boot
General	<h2>Upload bootcode to flash</h2>			
LAN	Flash status:			
IP	Bootcode Checksum OK			
LDAP	Firmware Checksum OK			
DECT	Do not interrupt bootcode upload! This may leave the bootcode defect.			
UNITE	If for some reason the bootcode upload was interrupted, repeat the upload before reboot.			
Phonebook	Bootcode File: <input type="text"/> <input type="button" value="Browse..."/>			
Administration	<input type="button" value="Upload"/>			
Users				
Device Overview				
DECT Sync				
Traffic				
Backup				
Update				

- **To upgrade the base station file:**
Select **Update** and then select the **Firmware** tab.

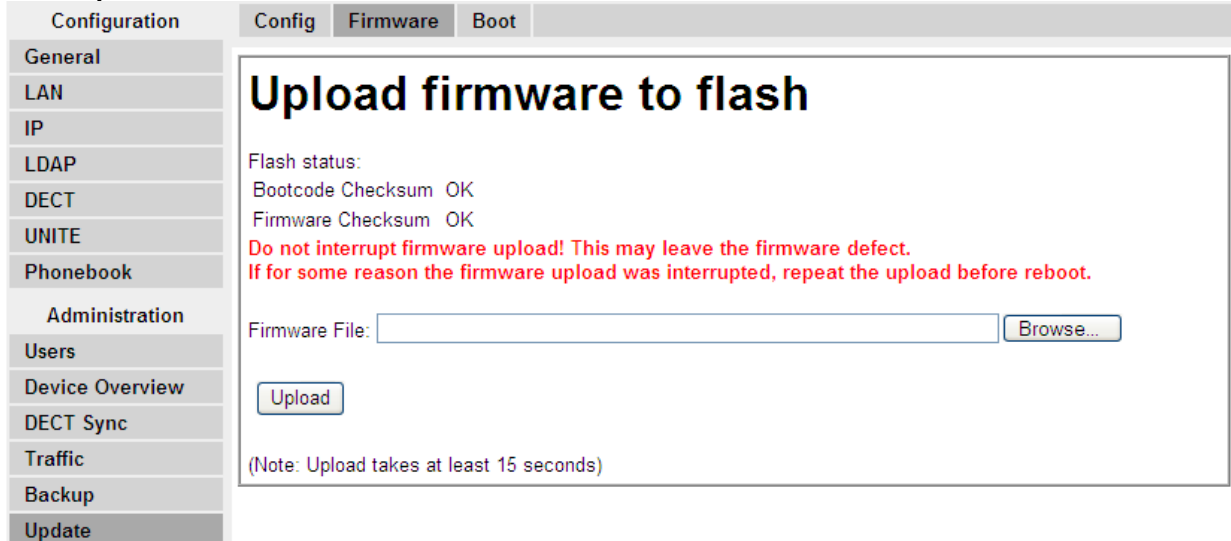

4. Click on the **Browse** button and browse to the **IP Base Station** sub-folder of the IP DECT R4 software you [previously extracted](#) onto the programming PC.
5. Select the appropriate file for the upgrade you are performing, for example the file with boot in the file name if doing a boot file upgrade. Click **Open**.
6. Click on the **Upload** button. The browser shows the progress of the upload and firmware upgrade. It will indicate when the process has been completed.



7. Click on **immediate reset**. The base station resets. Wait until the status lamps stop flashing.
8. If necessary log in again. The **General | Info** tab should now list the new firmware. If necessary, repeat the process for the firmware using the **Update | Firmware** menu.
9. For a IP DECT Gateway, if necessary, also repeat the process for base station firmware for base stations that will be connected to the IP DECT Gateway using the **Update | RFPs** menu.

Repeat the steps above for any other base stations that are also being installed. All the base stations should use the same firmware.

10.5.4 Set the Base Station IP Address

By default a base station defaults to 192.168.0.1. The process below can be used to change the DHCP mode and IP address of the base station.

To set the base station IP address:

1. Having browsed into the base station's configuration, in the left-hand column select **LAN**.
2. Select the **IP** tab.

The screenshot shows a configuration window with a sidebar on the left and a main content area. The sidebar has a 'Configuration' section with tabs for 'DHCP', 'IP', 'VLAN', 'Link', and 'Statistics'. Below this are sections for 'General', 'LAN', 'IP', 'LDAP', 'DECT', 'Unite', 'Services', 'Administration', 'Users', and 'Device Overview'. The 'IP' tab is selected. The main content area is titled 'Active Settings' and contains the following fields:

IP Address	<input type="text" value="192.168.0.226"/>	192.168.0.226
Network Mask	<input type="text" value="255.255.255.0"/>	255.255.255.0
Default Gateway	<input type="text" value="192.168.0.1"/>	192.168.0.1
DNS Server	<input type="text"/>	
Alt. DNS Server	<input type="text"/>	
Check ARP	<input type="checkbox"/>	

At the bottom of the main content area are 'OK' and 'Cancel' buttons.

- a. Enter the required **IP Address** and **Network Mask** for the base station. The other settings are optional.
 - b. Click **OK**.
3. Select the **DHCP** tab.

The screenshot shows the same configuration window as above, but with the 'DHCP' tab selected in the sidebar. The main content area shows a 'Mode' dropdown menu set to 'disabled' and the text 'Currently - disabled'. Below this are 'OK' and 'Cancel' buttons.

- a. Using the **Mode** drop-down, select **Disabled**.
 - b. Click **OK**.
4. The menu will prompt you with the message **Reset Required**. Do not click this or reset the base station at this stage.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.
 5. Log in again using the new IP address.

10.5.5 Configuring VLAN Settings

Both IPBS1 and IPBS2 base stations support VLAN operation. Note that the VLAN ID must be the same as the ID configured in the master base station, otherwise access to the base station is not possible.

Note: If "VLAN = 0", the Quality of Service (QoS) is inactive according to 802.1q. You should also avoid "VLAN = 1" as it is often used as a default VLAN setting.

10.5.5.1 Configure VLAN

To set the base station VLAN ID:

- Under the **Configuration** menu, navigate to **LAN** and then select the **VLAN** tab.

- In the **ID** field, enter the parameter required for the base station.
- Click **OK**.

10.5.5.2 Viewing LAN Statistics

To view statistics of LAN events:

- On the IP base station, select **LAN > Statistics**. On a IP DECT Gateway, select **LAN1 > Statistics**.

- Press **Clear** to reset the ethernet statistics counters. You may need to scroll down to view the **Clear** button.

10.5.5.3 Deactivating the LAN Port

The IP DECT Gateway has two LAN ports. The LAN2 port is used for administration only. If necessary, you can deactivate the port.

To deactivate the LAN port:

1. Select **LAN2 > IP**.

Configuration	DHCP	IP	Link	VLAN	Statistics
General					
LAN1					
LAN2					
IP					
LDAP					
DECT					
Unite					
Phonebook					
Administration					
Users					
Device Overview					
DECT Sync					

Active Settings

IP Address: 192.168.1.1 192.168.1.1

Network Mask: 255.255.255.0 255.255.255.0

Default Gateway: 172.29.40.254

DNS Server:

Alt. DNS Server:

Check ARP:

Disable:

No IP protocol data will be sent/received via this interface

OK Cancel

2. Select the **Disable** checkbox.
3. Click **OK**.

10.5.6 Set the Time Source

The base station can obtain its time from the IP Office control unit.

1. In the left-hand column select **General**. Select the **NTP** tab.

Configuration	Info	Admin	NTP	Kerberos Server	Certificates	EULA
General						
LAN						
IP						
LDAP						
DECT						
Unite						
Services						
Administration						
Users						
Device Overview						
DECT Sync						

Active Settings

Time Server:

Alt. Time Server:

Interval [min]: 60 60

Timezone: Europe - Central European Time (UTC+1) ▾

String: CET-1CEST-2,M3.5.0/2,M10.5.0/3 GMT0BST-1,M3.5.0/1,M10.5.0/2

Current Server:

Last Sync:

OK Cancel

2. In the **Time Server** field enter the IP address of the IP Office.
3. Click **OK**.

10.5.7 QoS/ToS Settings

If the network uses QoS/ToS for VoIP traffic, the base station should be configured to use the same settings.

1. In the browser connection to the base station, in the left-hand panel select **IP**. Select the **Settings** tab.

2. Set the **ToS Priority - RTP Data** value to match the IP Office's **DSCP (Hex)** value.
3. Set the **ToS Priority - VoIP Signalling** value to match the IP Office's **SIG DSCP (Hex)** value.
4. Click **OK**.

10.5.8 Set the Base Station as the Master

A number of menus are disabled until the base station has been set as being the master base station for the IP Office DECT R4 system.

1. In the left-hand panel select **DECT**, and then select the **Master** tab.

2. Use the **Mode** drop-down box to select **Active**, and click **OK**.
3. Click on the **Reset required!** message.

4. Click **OK**.

5. In the left-hand panel select **DECT**. Select the **System** tab.

The screenshot shows a configuration window for DECT. On the left is a navigation menu with 'DECT' selected. The main window has several tabs: 'System', 'Suppl. Serv.', 'Master', 'Trunks', 'Radio', 'Radio config', 'PARI', 'SARI', and 'Air Sync'. The 'System' tab is active. The configuration fields are as follows:

- System Name: DECT
- Password: [masked]
- Confirm Password: [masked]
- Subscriptions: With System AC
- Authentication Code: 1234
- Default Language: English
- Frequency: Europe
- Enabled Carriers: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 (all checked)
- Coder: G729A, Frame (ms): 60, Exclusive: , SC:

At the bottom are 'OK' and 'Cancel' buttons.

6. Set and check the following values:

- **System Name**
Enter name to identify the DECT system. This must be a unique name if there are other DECT systems in the same area.
- **Password**
Enter the same password as being used for admin access to the base stations. The default is **changeme**. Re-enter the password in the **Confirm Password** field.
- **Subscriptions**
Select **With System AC**. This allows phones to be subscribed to the system using the system authentication code as set below.
- **Authentication Code**
This code is required by phones during subscription to the DECT system.
- **Default Language**
Select the language required by the customer.
- **Frequency**
You must ensure that the correct region is selected. This affects the frequency used for DECT wireless signalling and other factors.

7. Do not adjust the **Coder** options.

8. Click **OK**.

10.5.9 Enable Supplementary Services

Enabling supplementary services is required for IP Office operation.

1. In the left-hand panel select **DECT**, and then select the **Suppl. Serv.** tab.

2. Select **Enable Supplementary Services**.

3. In the **Fix Message Center No.** field enter ***17**. This is the IP Office default short code for voicemail access. If the IP Office has been configured to use a different short code enter that short code.

4. Click **OK**.

10.5.10 Set the PBX Switch Mode

The master base station needs to be informed what type of PBX it is working with and the protocol to use for communication with that PBX.

1. In the left-hand panel select **DECT**, and then select the **Master** tab.

2. Using the **PBX** drop-down list, select **IPO**.

3. Click **OK**.

- The message **Reset required!** is displayed. At this stage further changes are required so do **not** reset the base station.

10.5.11 IP Trunk Configuration

An IP trunk to the IP Office must be configured. Only one trunk is supported.

1. In the left-hand panel select **DECT**, and then select the **Trunks** tab.

Configuration					
System					
Master					
Trunks					
SARI					
General					
LAN					
DECT					
Services					
Administration					
Users					
Device Overview					

Trunk List					
Primary Trunks					
Name	Local Port	CS IP Address	CS Port	Status	
Trunk1	1720	192.168.0.214	1720	Down	

OK Cancel

2. Enter the following settings:

- **Name**
Set a name that identifies the IP Office system.
- **Local Port**
set this to **1720**.
- **CS IP Address**
Set this field to the IP address of the IP Office system.
- **CS Port**
Set this to **1720**.

3. Click **OK**.

- The message **Reset required!** is displayed. At this stage further changes are required so do **not** reset the base station.

10.5.12 Enter the Radio Settings

Having been configured as the master base station, the radio aspect of the base station can be configured. Note that IP Office does not support use of a standby master base station.

To configure the radio settings:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#).

1. In the left-hand panel select **DECT**. Select the **Radio** tab.

The screenshot shows the configuration interface for the DECT radio settings. The left-hand panel has a menu with 'DECT' selected. The main panel has tabs for 'System', 'Suppl. Serv.', 'Master', 'Trunks', 'Radio', 'Radio config', 'PARI', 'SARI', and 'Air Sync'. The 'Radio' tab is active, showing a 'Disable' checkbox, a 'Master' section with fields for Name (DECT), Password (masked), Master IP Address (127.0.0.1), and Standby Master IP Address. Below these fields is a 'Status' field showing 'No Connection to Master'. A table titled 'Uninitialized Master Connections' lists one entry with IP Address 192.168.42.210 and State Up. At the bottom, there are 'OK' and 'Cancel' buttons, and a red message 'Reset required!'.

2. Set the following values:

- Name**
Set this to match the **System Name** set on the **DECT | System** tab.
- Password**
Set this to match the **Password** set on the **DECT | System** tab.
- Master IP Address**
Set the address 127.0.0.1 for the base station to refer to itself. (Alternatively set this to match the IP address assigned to the base station on the **LAN | IP** tab).

3. Click **OK**.

- The message **Reset required!** is displayed. At this stage further changes are required so do **not** reset the base station.

10.5.13 Enter the PARI

Having used an [RFP scan](#)^[71] to check what PARI codes are already in use in the area, ensure that the master base station has a unique code.

To set the system's PARI:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#)^[60].

1. In the left-hand panel select **DECT**. Select the **PARI** tab.



The screenshot shows a configuration window with a left-hand menu and a main content area. The menu includes 'Configuration', 'System', 'Suppl. Serv.', 'Master', 'Trunks', 'Radio', 'Radio config', 'PARI', 'SARI', and 'Air Sync'. The 'PARI' tab is selected. The main content area has a 'System ID' label and a text input field containing the number '32'. Below the input field are 'OK' and 'Cancel' buttons.

2. Enter a value between 1 and 35. This value must be unique from any other DECT R4 master base station in the area.

3. Click **OK**.

10.5.14 Enter the SARI/PARK

The SARI is the license for the DECT R4 system.

1. In the left-hand panel, select **DECT**. Select the **SARI** tab.



The screenshot shows a configuration window with a left-hand menu and a main content area. The menu includes 'Configuration', 'System', 'Suppl. Serv.', 'Master', 'Trunks', 'Radio', 'Radio config', 'PARI', 'SARI', and 'Air Sync'. The 'SARI' tab is selected. The main content area has a 'SARI' label and a text input field containing the number '31100243777'. Below the input field are 'OK' and 'Cancel' buttons.

2. Enter the SARI code provided with the DECT R4 equipment.

3. Click **OK**.

10.5.15 Configuring Air Sync

Base stations in the DECT R4 system need to be synchronized with each other. This can be done with a signal as low as -90dB between base stations (note however that call quality deteriorates rapidly when below -75dB).

One base station is assigned as the 'air sync master', typically the master base station. Each other base station can sync directly with it or indirectly via a synchronization chain. However, it is preferable that the number of synchronization 'hops' between any particular base station and its air sync master base station is kept as low as possible. To help achieve this it is recommended that the air sync master is placed centrally within the set of base stations.

Where possible, each base station should be placed within synchronization range of more than one base station, which allows the base stations to maintain synchronization should one base station fail or be switched off for maintenance. The process of synchronizing by the shortest route to the air sync master when in synchronization range of multiple base stations is automatic.

To configure Air Sync:

- This process requires access to tabs and fields currently only visible when **Show Advanced Options** is selected. See [Show/Hide Advanced Options](#).

1. In the left-hand panel, select **DECT**. Select the **Air Sync** tab.

2. Set the **Sync Mode** to **Master**.

3. Click **OK**.

Advanced Scenario: Separated Locations

In most scenarios, the master base station is also used as the air sync master for all the other slave base stations and that is the scenario documented in this manual. However, in scenarios where you have base stations in separate locations that are not within synchronization range of each other, it is permissible to assign separate air sync masters in each location. However, there must be absolutely no overlap (<-90dB) between the separate groups of base stations. Any overlap will cause frequent loss of synchronization.

Having separate locations, each with its own synchronization, is done through the settings on the **DECT | Air Sync** tab of each base station. For each location, set the same **Sync Region** number for all the base stations at that location, using a different number for each location. In addition, use the **Sync Mode** drop-down menu to configure one of the base stations in each location as the **Master** base station.

Configuring Air Sync in Separated Locations

1. For each base station in the system, configure a **Sync Region** number under the **DECT | Air Sync** tab in the Device Manager and click **OK**.

All the base stations in a single region should contain the same **Sync Region** number, but each Sync Region must have its own unique number. By default, **Sync Region = 0**, which means that no region is defined.

2. For each new **Sync Region** created, configure one base station as the **Master** using the **Sync Mode** drop-down menu and click **OK**.

You must configure at least one master base station per region.

10.5.16 IP Office Directory Integration

With IP Office Release 6, the master base station can obtain directory information direct from the IP Office control unit rather than the system requiring an AIWS unit to do this. This requires the master base station to be able to access the IP Office control unit using TFTP. The directory import is limited to 6000 entries.

Note that enabling directory integration via the master base station disables support for SMS. If both SMS and directory integration are required then an AIWS unit must be used.

1. Select **Services** and then select the **Phonebook** tab.

The screenshot shows the configuration interface for the IP Office system. The left sidebar contains a navigation menu with the following items: Configuration, Update, Logging, HTTP, HTTP Client, SNMP, Provisioning, Phonebook, General, LAN, IP, LDAP, DECT, Unite, Services, Administration, Users, Device Overview, DECT Sync, and Traffic. The 'Phonebook' tab is selected. The main content area displays the following settings:

- Enable**:
- General Settings**
 - Search Direction Numbers: Right to left (dropdown menu)
 - Phonebook Number: 999999 (text input)
- TFTP Settings**
 - Server IP Address: 192.168.0.214 (text input)
 - External Directory File: /nasystem/dir_list (text input)
 - Internal Directory File: /nasystem/user_list7 (text input)
 - Synch. Interval [min]: 60 (text input)

At the bottom of the settings area are two buttons: **OK** and **Cancel**.

2. Select **Enable**.
3. Select the other settings as shown above, with the **Server IP Address** set to the IP address of the IP Office control unit.
4. Click on **OK**.

10.5.17 Reset the Base Station

Having completed the configuration changes, the master base station should be reset.

1. In the left-hand panel, select **Reset**. Select the **Reset** tab or **Idle-Reset** tab.

Configuration: **Idle-Reset** | Reset | TFTP | Boot

General | LAN | IP | LDAP | DECT

Reset only if the system is idle (no active calls, etc.)

OK

Reset in Progress
(Manual reconnect/refresh needed)

2. Click **OK**.

10.5.18 Check the Base Station

Following the reset, the operation of the radio part can be checked.

1. In the left-hand panel, select **DECT**. Select the **Radio** tab.

Configuration: System | Suppl. Serv. | Master | Trunks | **Radio** | Radio config | PARI | SARI | Air Sync

General | LAN | IP | LDAP | **DECT** | UNITE | Phonebook | Administration | Users | Device Overview | DECT Sync | Traffic | Backup | Update | Diagnostics | Reset

Disable

Master

Name: DECT

Password: ●●●●●●

Master IP Address: 192.168.42.210

Standby Master IP Address:

Status: Connected to Master 192.168.42.210

Received Configuration

SARI: 3110024377703

RFPI: 9014CC1008

Subscriptions: With System AC

Authentication Code: 1234

Default Language: English

Frequency: Europe

Enabled Carriers: 0 1 2 3 4 5 6 7 8 9

0 1 2 3 4 5 6 7 8 9

Coder: G729A, 60 ms

OK Cancel

2. The **Status** should indicate **Connected to Master**.
3. The **Received Configuration** settings should match the parameters entered during configuration.
4. On the base station, LED 2 should be off.



10.6 IP Slave Base Station Configuration

The base station installation process consists of the following stages:

1. [Default the base station](#) ^[211].
2. [Access the base station configuration](#) ^[212].
3. [Update the base station firmware](#) ^[213].
4. [Set the base station IP address](#) ^[215].
5. [Set the base station to slave mode](#) ^[216].
6. [Reset the base station](#) ^[217].
7. [Check the base stations](#) ^[218].

Pre-Requisites

- IP Office connected to the LAN with IP DECT line configured for master base station IP address.

Parts Required

- Base station
Includes:
 - Base station.
 - Two 3.5mm screws and two 6mm wall plugs suitable for wall mounting onto a solid wall (brick or similar).
 - 1.2 metre (4 foot) LAN cable. If this is replaced with a longer cable the replacement should be a CAT5 Ethernet LAN cable.
- If using Power over Ethernet:
 - The base station supports Power over Ethernet, IEEE 802.3af, class 2.
- If not using Power over Ethernet:
 - Base station power supply unit.
Required if not using Power over Ethernet to power the base station. Note that the base station power supply units include an 8 metre (26 feet) cable from the PSU to the base station. Check that you have the correct type of power supply unit for the locale.
 - BSX-0013: Europe (except United Kingdom).
 - BSX-0014: United Kingdom.
 - BSX-0015: USA/Canada.
 - BSX-0016: Australia.
 - Mains power outlet socket.
- LAN Socket.

Information

- DECT R4 SARI.
- Base Station IP Addresses.
- Detailed plans from the site survey indicating the intended base station locations, LAN sockets and if necessary power supply outlets.

Tools

- Programming PC with DECT R4 software.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.
- Drill and drill bits suitable for the selected wall mounting position of the AIWS.
- Screwdrivers for use with the screws selected for AIWS wall mounting.

10.6.1 Default the Base Station

This process will default a base station or IP DECT Gateway, erasing its configuration. After the unit restarts it will default to the IP address 192.168.0.1/255.255.255.0. For more information on the base station LEDs and what their statuses indicate, see [Base Station Status Lamps](#) ^[15].

To default a base station:


1. With the unit not connected to anything else, connect the power supply and switch on. The LED on the base station flashes red to indicate that no Ethernet is detected. Otherwise, the LED flashes blue.
2. Wait approximately five seconds.
3. Press and hold the **Reset** button on the base station for approximately 10 seconds. For IPBS2 base stations, the LED on the base station changes to quick flashing blue, then goes out and finally returns to a slow flashing blue.
4. Release the **Reset** button and wait for the base station to reset. The LED should turn back on to solid amber.
5. Quickly press the **Reset** button once. The base station reboots with default settings. The default IP is 192.168.0.1, with DHCP on but not active. If you want to activate DHCP, reset the base station again.

Alternate Method

The address an existing base station or IP DECT Gateway is using can be determined using the following process. It uses the MAC address of the unit, which you can find printed on a label on the back or bottom of the unit.

This procedure requires use of the Command Prompt, for which you *must* have Administrator rights.


To display the base stations IP address:

1. Right-click on the  **Command Prompt** icon (**Programs | Accessories**) and select **Run as administrator**.
2. Enter **nbtstat -R**. The PC should respond that it has purged and reloaded the NBT remote cache table.
 - For a base station, enter **nbtstat -a ipbs-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
 - For a IP DECT Gateway, enter **nbtstat -a ipbl-xx-xx-xx** where xx-xx-xx is the last six hexadecimal digits MAC address.
3. The results indicate the IP address the device is currently using.
5. Use that address to access the base stations configuration and set it to a fixed address.

10.6.2 Access the Base Station's Configuration

To login to a base station:

- Depending on whether DHCP is being used or not:
 - If connected directly to the base station, change your programming PC's network address to 192.168.0.200 with subnet mask 255.255.255.0. Connect the LAN cable from your PC to the base station.
 - If both your PC and the base station are connected to a LAN network with DHCP server, ensure your PC is set to act as a DHCP client or has a fixed address that is valid on the network.
- Start your web browser and enter the http:// or https:// followed by the IP address of the base station. The default IP address is 192.168.0.1. If a security certificate warning is displayed, select to continue to this website.
- The base station should respond with its initial configuration menu.

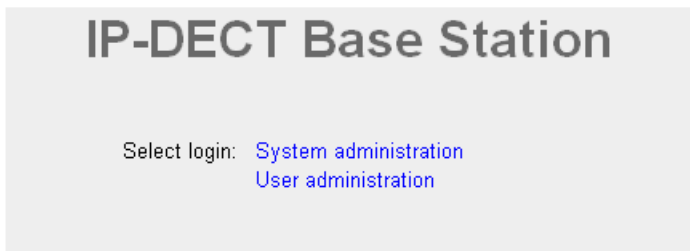

- Select **System administration**. A password entry dialog will be displayed. Enter the default user name (**admin**) and password (**changeme**).
- The configuration menu for the base station is displayed.

Configuration	Info	Admin	NTP	EULA
General				
LAN	Version IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]			
DECT	Serial Number 09AD15300066			
Services	MAC Address (LAN) 00-01-3e-01-6f-9c			
Administration	SNTP Server 192.168.0.210			
Users	Time ** ** ** **			
Device Overview	Uptime 0d 0h 2m 29s			
Backup	RFP SW version 3.2.10			

- Note the software levels shown in the **Version** screen. These determines whether you need to upgrade the base station software.

10.6.3 Update the Base Station Firmware


The base station may need to be upgraded to the [DECT software](#)⁴² supplied with IP Office administration software. That software consists of two parts, a firmware file and a boot file. All base stations in a DECT system should use the same software.

To update the base station firmware:

1. Browse into the base station's configuration and note the software levels shown by the **Version** line.

Configuration		Info	Admin	NTP	EULA
General					
LAN	Version	IPBS[7.1.2], Bootcode[7.1.2], Hardware[IPBS1-Y4/PD]			
DECT	Serial Number	09AD15300066			
Services	MAC Address (LAN)	00-01-3e-01-6f-9c			
Administration	Sntp Server	192.168.0.210			
Users	Time	** ** * ** *			
Device Overview	Uptime	0d 0h 2m 29s			
Backup	RFP SW version	3.2.10			

2. Check that these match the versions supplied with the IP Office administration software. Ensure that you are checking against the correct folder for an IPBS1 or IPBS2 base station. If they do not match, then you must upgrade the base station.

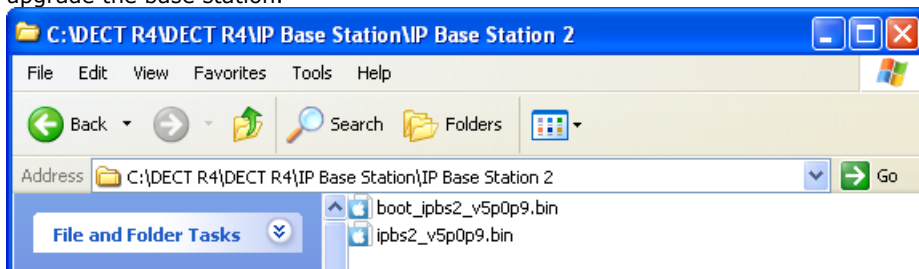

3. If both software files need to be upgraded, the boot file should be upgraded first.

- **To upgrade the boot file:**

In the left-hand column, under the **Administration** menu, select **Update** and then select the **Boot** tab.

Configuration		Config	Firmware	Boot
General				
LAN				
IP				
LDAP				
DECT				
UNITE				
Phonebook				
Administration				
Users				
Device Overview				
DECT Sync				
Traffic				
Backup				
Update				

Upload bootcode to flash

Flash status:
 Bootcode Checksum OK
 Firmware Checksum OK

Do not interrupt bootcode upload! This may leave the bootcode defect.
 If for some reason the bootcode upload was interrupted, repeat the upload before reboot.

Bootcode File:

- **To upgrade the base station file:**
Select **Update** and then select the **Firmware** tab.

The screenshot shows a web-based configuration interface. On the left is a navigation menu with categories: Configuration (General, LAN, IP, LDAP, DECT, UNITE, Phonebook), Administration (Users, Device Overview, DECT Sync, Traffic, Backup, Update). The top navigation bar has tabs for Config, Firmware, and Boot. The 'Firmware' tab is active, showing a section titled 'Upload firmware to flash'. Below the title, it displays 'Flash status: Bootcode Checksum OK, Firmware Checksum OK'. A red warning message states: 'Do not interrupt firmware upload! This may leave the firmware defect. If for some reason the firmware upload was interrupted, repeat the upload before reboot.' There is a text input field for 'Firmware File:' with a 'Browse...' button next to it, and an 'Upload' button below. A note at the bottom says '(Note: Upload takes at least 15 seconds)'.

4. Click on the **Browse** button and browse to the **IP Base Station** sub-folder of the IP DECT R4 software you [previously extracted](#) onto the programming PC.
5. Select the appropriate file for the upgrade you are performing, for example the file with boot in the file name if doing a boot file upgrade. Click **Open**.
6. Click on the **Upload** button. The browser shows the progress of the upload and firmware upgrade. It will indicate when the process has been completed.

The screenshot shows the same configuration interface as above, but with the 'Boot' tab selected. The main content area displays 'Bootcode update complete'. Below this, there are two options: 'immediate reset' and 'reset when idle', both in blue text.

7. Click on **immediate reset**. The base station resets. Wait until the status lamps stop flashing.
8. If necessary log in again. The **General | Info** tab should now list the new firmware. If necessary, repeat the process for the firmware using the **Update | Firmware** menu.
9. For a IP DECT Gateway, if necessary, also repeat the process for base station firmware for base stations that will be connected to the IP DECT Gateway using the **Update | RFPs** menu.

Repeat the steps above for any other base stations that are also being installed. All the base stations should use the same firmware.

10.6.4 Set the Base Station IP Address

By default a base station defaults to 192.168.0.1. The process below can be used to change the DHCP mode and IP address of the base station.

To set the base station IP address:

1. Having browsed into the base station's configuration, in the left-hand column select **LAN**.
2. Select the **IP** tab.

- a. Enter the required **IP Address** and **Network Mask** for the base station. The other settings are optional.
 - b. Click **OK**.
3. Select the **DHCP** tab.

- a. Using the **Mode** drop-down, select **Disabled**.
 - b. Click **OK**.
4. The menu will prompt you with the message **Reset Required**. Do not click this or reset the base station at this stage.
 - a. Click on **Reset required** if displayed. Otherwise, select **Reset** and then select the **Reset** tab.
 - b. Click **OK**. Depending on your base station, wait for the lower LED to return to solid blue or solid green.
 5. Log in again using the new IP address.

10.6.5 Set the Base Station to Slave Mode

There can be only one master base station in the IP Office DECT R4 system. In this process we check that the base station is not set to act as a master and then configure its radio settings to access the master base station.

To set the base station to slave mode:

1. In the left-hand column, select **DECT**. Select the **Master** tab.

Configuration System **Master** Trunks SARI

General
LAN
DECT

Mode

2. Check that the **Mode** is set to **Off**.
3. Click **OK**.
4. Select the **Radio** tab.

Configuration System Suppl. Serv. **Master** Trunks **Radio** Radio config PARI SARI Air Sync

General
LAN
IP
LDAP
DECT
UNITE
Services
Administration
Users
Device Overview
Traffic
Backup
Update

Disable

Master

Name

Password

Master IP Address

Standby Master IP Address

Status No Connection to Master

Uninitialized Master Connections

IP Address	State
192.168.42.210	Up

Reset required!

5. Set the following details:

- **Name**
Set this to match the **System Name** set on the master base station's **DECT | System** tab.
- **Password**
Set this to match the **Password** set on the master base station's **DECT | System** tab.
- **Master IP Address**
Enter the IP address of the master base station set on its **LAN | IP** tab.

6. Click **OK**.

7. Select the **Air Sync** tab.

Configuration System Suppl. Serv. **Master** Trunks **Radio** Radio config PARI SARI **Air Sync**

General
LAN
IP
LDAP
DECT
UNITE
Phonebook
Administration

Sync Mode

Sync RFPI

Alt. Sync RFPI

LED Indication

8. Set the **Sync Mode** to **Slave**.

9. Enable **LED Indication**. This enables the amber flashing mode of the base station's LED 2 which is used to indicate when the base station has no air synchronization signal but does have call traffic in progress.

10. Click **OK**.

10.6.6 Reset the Base Station

1. In the left-hand panel, select **Reset**. Select the **Reset** tab or **Idle-Reset** tab.

Configuration	Idle-Reset	Reset	TFTP	Boot
General	<p>Reset only if the system is idle (no active calls, etc.)</p> <p><input type="button" value="OK"/></p> <p>Reset in Progress (Manual reconnect/refresh needed)</p>			
LAN				
IP				
LDAP				
DECT				

2. Click **OK**.

10.6.7 Check the Base Stations

Through the configuration of the slave and the master base status it is possible to check the signalling between the base stations.

Slave Base Station

- In the left-hand column select **Device Overview**. Select the **Air Sync** tab.

Configuration	Radios	Air Sync												
General	Base station sync status State Slave, synchronized Sync offset -96 ns Drift 0.9166 PPM													
LAN														
IP														
LDAP														
DECT														
UNITE														
Administration	Active sync bearer <table border="1"> <thead> <tr> <th>RFPI</th> <th>Carrier</th> <th>Slot</th> <th>Hop</th> <th>RSSI</th> <th>FER</th> </tr> </thead> <tbody> <tr> <td>9014CC1008</td> <td>4</td> <td>7</td> <td>0</td> <td>-38</td> <td>0</td> </tr> </tbody> </table>		RFPI	Carrier	Slot	Hop	RSSI	FER	9014CC1008	4	7	0	-38	0
RFPI	Carrier	Slot	Hop	RSSI	FER									
9014CC1008	4	7	0	-38	0									
Users														
Device Overview	Alternative sync bearer <table border="1"> <thead> <tr> <th>RFPI</th> <th>Carrier</th> <th>Slot</th> <th>Hop</th> <th>RSSI</th> <th>FER</th> </tr> </thead> <tbody> <tr> <td>9014CC1008</td> <td>0</td> <td>11</td> <td>0</td> <td>-38</td> <td>11</td> </tr> </tbody> </table>		RFPI	Carrier	Slot	Hop	RSSI	FER	9014CC1008	0	11	0	-38	11
RFPI	Carrier	Slot	Hop	RSSI	FER									
9014CC1008	0	11	0	-38	11									
Traffic														
Backup														
Update														
	Counters Sync lost 0 Hop value 1													

Master Base Station

- In the left-hand column select **Device Overview**. Select the **Radios** tab. The details of the base stations within the system are displayed.

Configuration	Radios	Air Sync																								
General	Static Registrations <table border="1"> <thead> <tr> <th>Name ↑</th> <th>RFPI</th> <th>IP Address</th> <th>Sync</th> <th>LDAP</th> <th>Device Name</th> <th>Version</th> <th>Connected Time</th> </tr> </thead> <tbody> <tr> <td>IPBS-01-5d-e0</td> <td>9014CC1008</td> <td>192.168.42.210</td> <td>Master</td> <td>OK -</td> <td>IP-DECT Base Station</td> <td>[3.1.16/v3.080915/IPBS1-Y3/PC]</td> <td>0d 18h 47m 42s</td> </tr> <tr> <td>IPBS-01-5d-f0</td> <td>9014CC2009</td> <td>192.168.42.212</td> <td>Slave</td> <td>OK -</td> <td>IP-DECT Base Station</td> <td>[3.1.16/v3.080915/IPBS1-Y3/PC]</td> <td>0d 0h 2m 0s</td> </tr> </tbody> </table>		Name ↑	RFPI	IP Address	Sync	LDAP	Device Name	Version	Connected Time	IPBS-01-5d-e0	9014CC1008	192.168.42.210	Master	OK -	IP-DECT Base Station	[3.1.16/v3.080915/IPBS1-Y3/PC]	0d 18h 47m 42s	IPBS-01-5d-f0	9014CC2009	192.168.42.212	Slave	OK -	IP-DECT Base Station	[3.1.16/v3.080915/IPBS1-Y3/PC]	0d 0h 2m 0s
Name ↑	RFPI	IP Address	Sync	LDAP	Device Name	Version	Connected Time																			
IPBS-01-5d-e0	9014CC1008	192.168.42.210	Master	OK -	IP-DECT Base Station	[3.1.16/v3.080915/IPBS1-Y3/PC]	0d 18h 47m 42s																			
IPBS-01-5d-f0	9014CC2009	192.168.42.212	Slave	OK -	IP-DECT Base Station	[3.1.16/v3.080915/IPBS1-Y3/PC]	0d 0h 2m 0s																			
LAN																										
IP																										
LDAP																										
DECT																										
UNITE																										
Administration																										
Users																										
Device Overview																										

- Select the **Air Sync** tab. The status of wireless synchronization between the master and other base stations is displayed.


Configuration	Radios	Air Sync																		
General	Base station sync status State Master																			
LAN																				
IP																				
LDAP																				
DECT																				
UNITE																				
Administration	Alternative sync bearers <table border="1"> <thead> <tr> <th>RFPI</th> <th>Carrier</th> <th>Slot</th> <th>Hop</th> <th>RSSI</th> <th>FER</th> </tr> </thead> <tbody> <tr> <td>9014CC2009</td> <td>4</td> <td>1</td> <td>1</td> <td>-32</td> <td>2</td> </tr> <tr> <td></td> <td>5</td> <td>4</td> <td>1</td> <td>-32</td> <td>0</td> </tr> </tbody> </table>		RFPI	Carrier	Slot	Hop	RSSI	FER	9014CC2009	4	1	1	-32	2		5	4	1	-32	0
RFPI	Carrier	Slot	Hop	RSSI	FER															
9014CC2009	4	1	1	-32	2															
	5	4	1	-32	0															
Users																				
Device Overview																				

10.7 Base Station Mounting

The base station can now be powered down and mounted in its intended operating position. The removable bracket on the back of the base stations can be used for either wall mounting using two screws suitable for the surface or for mounting on columns using two metal bands.

Wall Mounting

Remove the mounting bracket from the base station. Use it as a template for marking the screw fixing holes. Note the diagram below indicating the required clearance for getting the base station onto the mounting bracket.

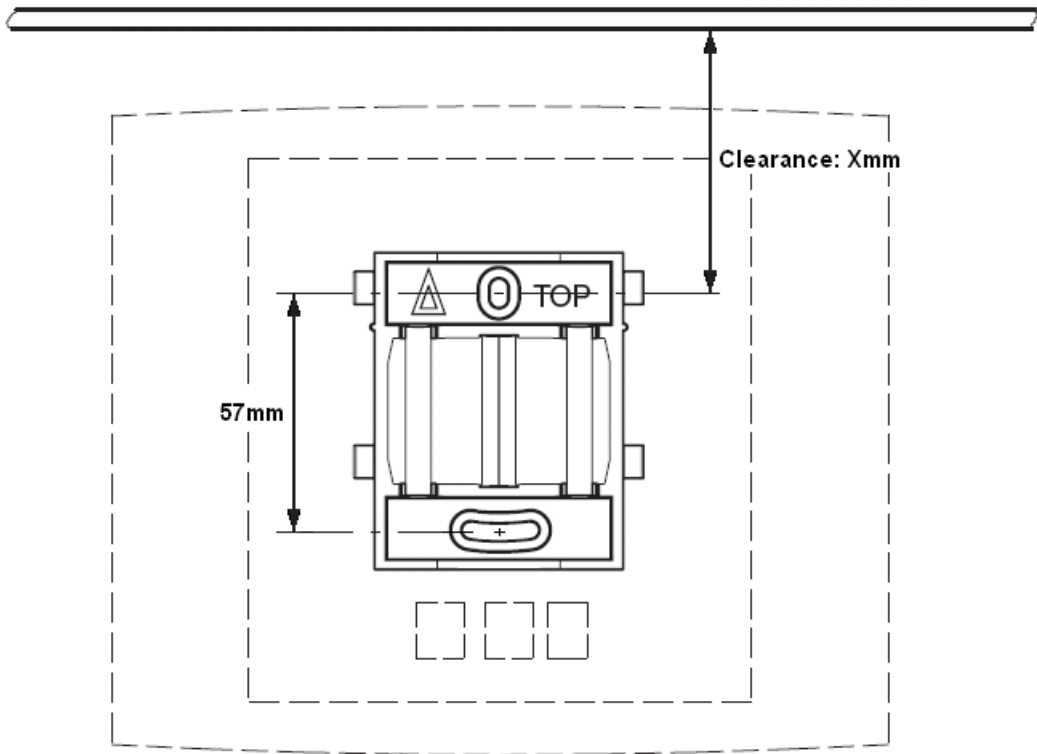

1. Hold the mounting bracket with its flat side against the wall with the text 'TOP' upwards and mark the two holes. Observe the minimum distance between the top screw hole and the ceiling. This depends on the base station type as follows:


Base Station Type	Internal Aerials	External Aerials
IPBS1 or Digital Base Station	65mm	160mm
IPBS2	100mm	195mm

2. Drill the two holes using a 6mm diameter drill and insert the included wall plugs.
3. Position the mounting bracket with its flat side to the wall and fasten it with the two included 3.5mm diameter screws.

Column/Pillar Mounting

The mounting bracket can be fixed to a pole of 45mm diameter or greater, or a beam of 50mm width minimum by using a strap or flexible metal band less than 30 mm wide. A suitable strap or flexible metal band is not included with the base station.

Note: Mounting a wireless base station directly on a steel beam or pillar could result in signal disruptions, such as dead zones or reflections. If it is absolutely necessary to mount the base station on a metallic surface, use spacers to separate the base station from the surface by 20-25 cm.

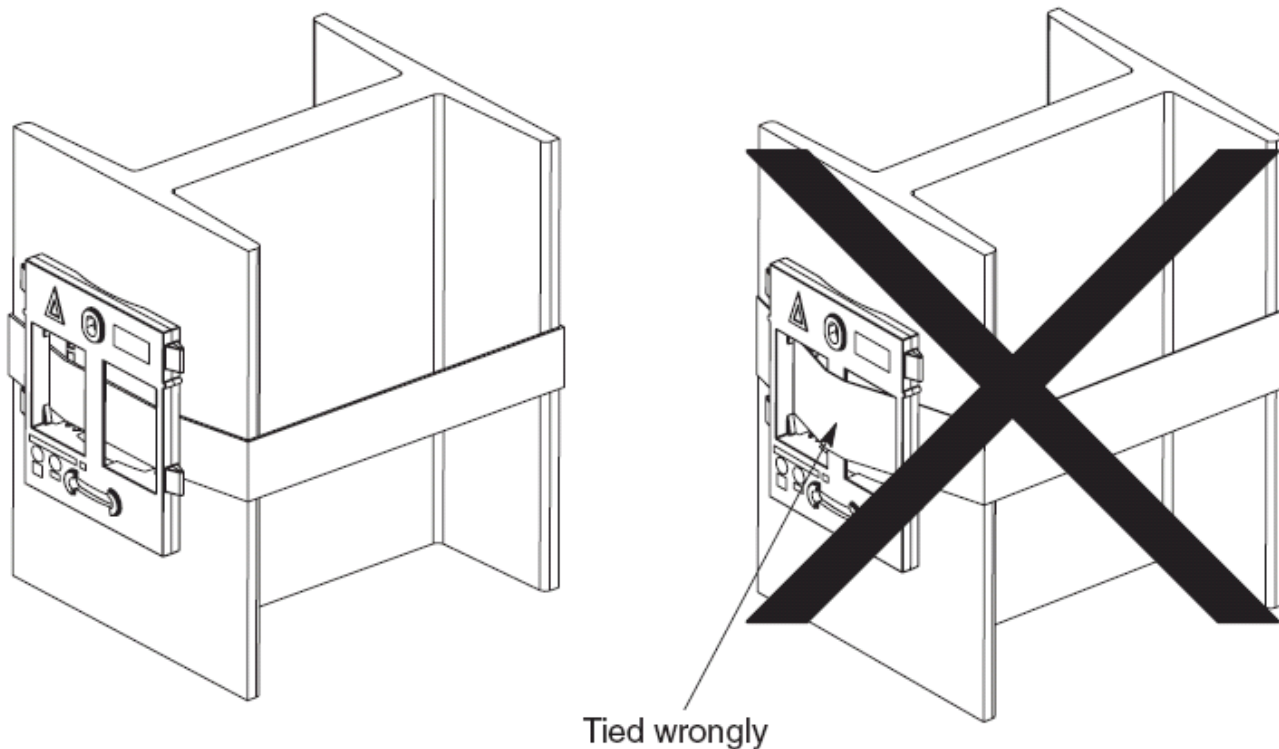

10.8 Phone Subscription

Once the master base station has been configured and is connected to the IP Office, you can begin phone subscription.

There are two methods of subscription; anonymous phone subscription and pre-configured phone subscription. Both methods require the DECT users to be pre-configured in the master base station configuration. However, anonymous phone subscription allows the user pre-configuration to be done without knowing the IPEI of the DECT phone the user will actually use.

- **Subscription Using IP Office Auto-Create**

Allowing phone subscription using the IP Office auto-create options for extensions and or users makes changes to the current running configuration of the IP Office system. For this method to work, you must ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

The anonymous phone installation process consists of the following stages:

1. [Allow Subscription](#) ^[222].
2. [Create User Entries in the Master Base Station Configuration](#) ^[224].
3. [Enable DECT subscription](#) ^[226].
4. [Subscribe the Phones](#) ^[227].
5. [Complete Anonymous Login](#) ^[229].
6. [Disable Subscription](#) ^[230].

- This method makes changes to the IP Office system configuration. Ensure that no copies of the configuration are open in Manager during subscription as sending that configuration back to the IP Office system will remove the subscriptions and require the handsets to be resubscribed.

Pre-Requisites

- Master base station installed and connected to the network.
- IP Office connected to the network.

Information

- Service user name and password for IP Office configuration.
- User names and extension numbers for the DECT phones.
- Phone IPEI numbers if using an pre-configured installation mode.

Tools


- **IP Office Manager.**
- **Device Manager**
The software installed on each handset may need to be upgraded to match that supplied with the [DECT R4 software](#) ^[42]. This is done using the Windows Device Manager software to upgrade phones via an advanced charger or using [AIWS Device Manager](#) ^[125] to upgrade phones over the air.
- **Web Browser**
Supported browsers are Internet Explorer (8, 10 and 11), Firefox, Chrome and Safari.

10.8.1 Allow Subscription

Before phones are subscribed subscription needs to be allowed by both the IP Office and the DECT R4 system.

IP Office

1. Start IP Office Manager and receive the configuration from the IP Office system.

2. In the left-hand navigation pane, click on  **Line** icon.

3. Select the  **IP DECT Line**.

4. Select the **Gateway** tab.

Line Gateway VoIP

Auto-Create Extension

Auto-Create User

Enable DHCP Support

Boot File

ADMM MAC Address

VLAN ID

Base Station Address List

Enable Provisioning

SARI/PARK

Subscriptions

Authentication Code

Enable Resiliency

Status Enquiry Period

Prioritize Primary

Supervision Timeout

5. Check that the **Auto-Create Extension** and **Auto-Create User** options are selected.

- **Subscription Using IP Office Auto-Create**

Allowing phone subscription using the IP Office auto-create options for extensions and or users makes changes to the current running configuration of the IP Office system. For this method to work, you must ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

6. Click **OK**.

7. Send the configuration back to the IP Office.

Master Base Station

1. Access the master base stations configuration.
2. In the left-hand panel select **DECT**. Select the **System** tab.

Configuration	System	Suppl. Serv.	Master	Trunks	Radio	Radio config	PARI	SARI	Air Sync
General									
LAN									
IP									
LDAP									
DECT									
UNITE									
Phonebook									
Administration									
Users									
Device Overview									
DECT Sync									
Traffic									
Backup									
Update									
Diagnostics									

System Name	<input type="text" value="DECT"/>																				
Password	<input type="password" value="••••••"/>																				
Confirm Password	<input type="password" value="••••••"/>																				
Subscriptions	<input type="text" value="With System AC"/> ▾																				
Authentication Code	<input type="text" value="1234"/>																				
Default Language	<input type="text" value="English"/> ▾																				
Frequency	<input type="text" value="Europe"/> ▾																				
Enabled Carriers	<table border="0"> <tr> <td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td> </tr> <tr> <td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td> </tr> </table>	0	1	2	3	4	5	6	7	8	9	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
0	1	2	3	4	5	6	7	8	9												
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>												
Coder	<input type="text" value="G729A"/> ▾ Frame (ms) <input type="text" value="60"/> Exclusive <input type="checkbox"/> SC <input type="checkbox"/>																				
<input type="button" value="OK"/> <input type="button" value="Cancel"/>																					

3. Check that the **Subscriptions** field:
 - **With System AC**
Select this option to allow anonymous subscription of phones.
 - **With User AC**
Select this option to allow subscription against user entries.
4. Note the number set in the **Authentication Code** field. This number is used as part of the anonymous subscription.
5. Click **OK**.

10.8.2 Create User Entries

Subscription requires a user entry within the master base station configuration. On completion of subscription, matching extension and user entries are automatically created in the IP Office configuration.

To create user entries:


1. In the left-hand panel, select **Users** under the **Administration** menu. Select the **Users** tab.



The screenshot shows the IP Office Administration interface. On the left, a navigation tree is visible with 'Administration' expanded and 'Users' selected. The main content area shows the 'Users' configuration page. At the top, there are tabs for 'Users' and 'Anonymous'. Below the tabs, there is a configuration table with the following data:

Configuration	Users	Anonymous
General	PARK 31100243777703	
LAN	Master Id 0	
IP	<input type="text"/> show	
LDAP	<input type="text"/> new	
DECT		
UNITE		
Phonebook		
Administration		
Users		

2. Click **new**. A dialogue is displayed for entry of user details.

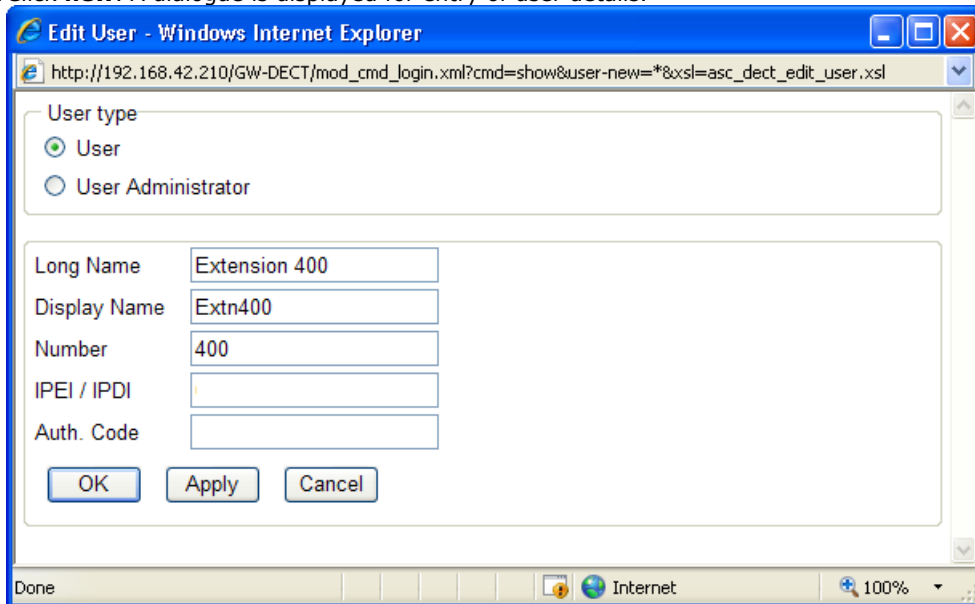

The screenshot shows a web browser window titled 'Edit User - Windows Internet Explorer'. The address bar shows the URL: http://192.168.42.210/GW-DECT/mod_cmd_login.xml?cmd=show&user-new=*&xsl=asc_dect_edit_user.xsl. The main content area contains a form with the following fields:

- User type: User, User Administrator
- Long Name:
- Display Name:
- Number:
- IPEI / IPDI:
- Auth. Code:

At the bottom of the form are three buttons: 'OK', 'Apply', and 'Cancel'.

3. Enter the user details:

- **Long Name**
This name is used for information within the DECT R4 system settings.
- **Display Name**
This name displayed on the phone when idle. It is also the name used for the user created in the IP Office configuration. The name must be unique.
- **Number**
This will be the extension number of the phone on both the IP Office and DECT R4 systems. The number must be unique.

The remaining two fields should not be completed if you want to use anonymous subscription. This removes the requirement of knowing the phone IPEI numbers during installation.

- **IPEI/IPDI**
Enter the phones IPEI number. For 3720, 3725 phones this is printed on the label inside the phones battery compartment.
 - For 3720, 3725, 3740 and 3749 phones, the IPEI can be displayed by selecting **Menu | Settings | Device Info | IPEI/IPDI**. It is also printed on a label under the phone's battery.
- **Auth. Code**
Enter the account code that should be used when the phone is subscribed.

4. Click **OK**.

5. Repeat the process for any other phones that you want to subscribe.

6. Within the **Users | Users** tab, click on **show** to display a list of the configured users.

Configuration

- General
- LAN
- IP
- LDAP
- DECT
- UNITE
- Phonebook
- Administration
- Users

Users Anonymous

PARK 31100243777703

Master Id 0

[show](#)

[new](#)

User Administrators

Long Name	Name
DECT User Admin	DECT

User Administrators: 1

Users

Name	No	Display	IPEI / IPDI	AC	Registration
Extension 400	400	Extn400			Not Subscribed
Extension 401	401	Extn401			Not Subscribed

Users: 2

7. The phones configured will be displayed. You can now begin subscribing the phones.

10.8.3 Enabling DECT Subscription







When using user passwords for subscription (set as **With User AC**), the DECT system only allows a user to be subscribed within a 2 minute window. Use the process below to enable that window.




To enable base station subscription:

1. Login to the master base station.
2. Select **DECT** and then **System**.
3. Click on the blue text link for the user to allow that user to subscribe with the next 2 minutes.

10.8.4 Phone Subscription

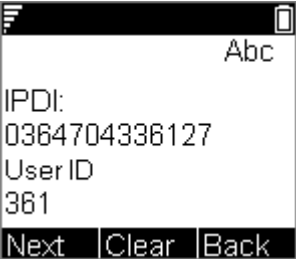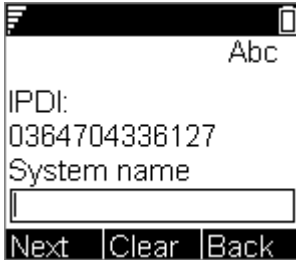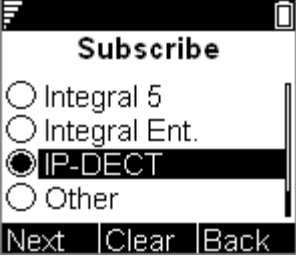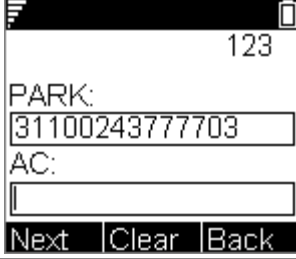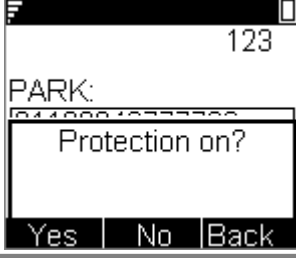- Switch on the phone:
 - **3720**: Select **Menu | Settings | System | Subscribe**.
 - **3725/3740/3749**: Select **Menu | Connections | System | Subscribe**.

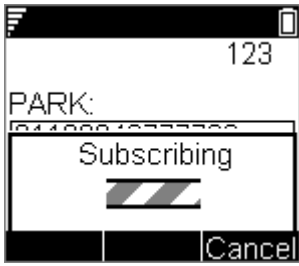Display	Actions
	<p>Details of the phone's current subscription are displayed. Select Next.</p>
	<p>The System name is just used by the phone to identify the different subscriptions it may have. Enter any name and select Next.</p>
	<p>The phone will display a list of telephone system types to which it can connect. Scroll the selected option to IP-DECT and select Next.</p>
	<p>The phone now requires the PARK (SARI) and AC (authentication code) of the system to which it should subscribe. Enter the PARK and then scroll to the AC field. Enter the AC and select Next.</p>
	<p>The Protection on? prompt is displayed.</p> <ul style="list-style-type: none"> • If you select No, the user can delete the subscription from the list of subscriptions known by the phone. • If you select Yes, the user cannot delete the subscription.
	<p>A summary of the subscription details is shown. Check that the values are correct</p>

Display	Actions
 <p>The handset display shows the number 123 at the top. Below it, the text 'PARK:' is visible. A progress bar is shown with the word 'Subscribing' above it. A 'Cancel' button is at the bottom right.</p>	<p>Select OK.</p> <p>The phone broadcast for DECT systems to which it can subscribe.</p>
 <p>The handset display shows the number 123 at the top. Below it, the text 'Subscribing please wait' is displayed. At the bottom, there are three buttons: 'Next', 'Clear', and 'Back'.</p>	<p>When a DECT system is located, the handset will attempt to subscribe to that system.</p>
 <p>The handset display shows the number 123 at the top. Below it, the text 'Successful subscription' is displayed. At the bottom, there are three buttons: 'Next', 'Clear', and 'Back'.</p>	<p>The success or failure of the subscription is indicated.</p>

3701/3711 Phone Subscription

1. Switch on the phone.
2. Select **Menu | System | Subscription | Subscribe HS**.
3. Select **PABX-PIN**.
4. Enter the authentication code.
5. The phone is subscribed anonymously and should display **Please Login**.

10.8.5 Completing Anonymous Login

In the master base station configuration select the **Users | Anonymous** tab. This tab shows those phones currently anonymously subscribed to the DECT system. The DECT system will allow up to 8 anonymous devices to be subscribed at the same time.

Configuration	Users	Anonymous
General	036470433612 Delete	
LAN		
IP		
LDAP		
DECT		
UNITE		
Phonebook		
Administration		
Users		

This process changes the [anonymous subscription](#)^[229] to a known subscription. While a phone is in anonymous subscription state it displays a screen showing **Please login**.

1. To login, dial ***M*N#** where:

- **M** is the DECT system's **Master Id**. This is shown on the base station's **Users | Users** tab.
- **N** is the extension number required. This must match an existing unsubscribed user entry on the **Users | Users** tab in the master base station configuration.

2. For example, on a system with master ID 0, to register an anonymously subscribed device as extension 403, dial *0*403#.

10.8.6 Disable Subscription

When all the DECT phones have been subscribed, it is recommended that you disable any further subscriptions.

Ensure that no copies of the configuration are also open in Manager during subscription, as sending such a copy of the configuration back to the IP Office system will replace the subscriptions and require the handsets to be subscribed again. Following any handset subscription, a new copy of the configuration should always be loaded in IP Office Manager if any other configuration changes are required.

To disable subscription:

1. Access the master base stations configuration.
2. In the left-hand panel select **DECT**. Select the **System** tab.

The screenshot shows the IP Office Manager configuration interface. The left-hand panel has a tree view with the following items: Configuration, System, Suppl. Serv., Master, Trunks, Radio, Radio config, PARI, SARI, Air Sync, General, LAN, IP, LDAP, DECT, UNITE, Phonebook, Administration, Users, Device Overview, DECT Sync, Traffic, Backup, Update, and Diagnostics. The 'DECT' item is selected. The main area shows the 'System' tab with the following fields: System Name (DECT), Password (masked with dots), Confirm Password (masked with dots), Subscriptions (With System AC), Authentication Code (1234), Default Language (English), Frequency (Europe), Enabled Carriers (checkboxes for 0-9, all checked), Coder (G729A), Frame (ms) (60), Exclusive (checkbox), and SC (checkbox). There are 'OK' and 'Cancel' buttons at the bottom.

3. Check that the **Subscriptions** field to **Disabled**.
4. Click **OK**.

Chapter 11.

Glossary

11. Glossary

The following are definitions for common abbreviations used within the DECT R4 system applications:

Item	Definition
AIWS	Avaya In-Building Wireless Server
CAP	Common Access Profile
DECT	Digital Enhanced Cordless Telecommunications; global standard for cordless telephony.
ELISE	Embedded LINUX SErver; a term for the AIWS.
FER	Frame Error Rate
GAP	Generic Access Profile; DECT standard.
IPBS	IP-DECT Base Station
IPDI	At delivery of the telephone, IPEI and IPDI are the same and either can be used for network subscription. If one telephone is replaced with another using the Easy replacement procedure the IPDI will be exchanged and IPEI and IPDI will no longer be the same. If the IPEI and the IPDI differ, the IPDI shall be used for network subscription.
IPEI	International Portable Equipment Identity; the unique global GAP identity number for the phone. This code is needed for the system administrator to enable network subscription.
PARI	Primary Access Rights Identity
PARK	Portable Access Rights Key
PBX	PBX Private Branch Exchange; the telephone system within an enterprise that switches calls between local lines and allows all users to share a certain number of external lines.
PDM	Portable Device Manager
PP	Portable Part; a term for DECT phones.
RFP	Radio Fixed Part; a term for DECT base-stations.
RFPI	Radio Fixed Part Identity
SARI	Secondary Access Rights Identifier. Alternate name for PARK (see below)
SS	Signal Strength
SST	Site Survey Tool
WSM	Wireless Services and Message; the module that enables wireless services like central phone book and messaging to and from the portable devices (an alternate term for the AIWS).

Chapter 12.

Document History

12. Document History

Date	Issue	Changes
30th October 2014	06b	Updates for IP Office Release 9.1. <ul style="list-style-type: none">• DECT resilience options^[100] only supported for 'Proprietary' IP Office lines.
13th November 2014	06c	<ul style="list-style-type: none">• Corrected method for enabling pre-configured phone subscription with the DECT base station.
18th November 2014	06d	<ul style="list-style-type: none">• Added "Entering the Radio Settings" to the provisioned master installation process.
25th November 2014	06e	<ul style="list-style-type: none">• Previous change removed, auto-provisioning of radio settings fixed.
9th December 2014	06f	<ul style="list-style-type: none">• Clarification that mirroring is supported between Gateway and non-Gateway master base stations.
6th August 2015	06g	<ul style="list-style-type: none">• Update IP Office security settings^[44] to match effect of IP Office 9.1 defaults on system directory display on handsets.

Index

- *
 - *17 201
- 1**
 - 1720 202
 - 192.168.0.1 53, 74, 192, 211
- 3**
 - 3720 9, 21
 - 3725 9, 21
 - 3725 Site Survey Mode 36
- A**
 - Aerials 12, 18
 - Air Sync 72, 205
 - air synch master 35, 72, 205
 - AIWS 9, 26
 - Browse 158
 - Cover 156
 - Device Manager 124, 125
 - Installation 154
 - IP Address 143, 159
 - Replacing the Cover 171
 - Status Lamp 30, 171, 179
 - Switch Off 170
 - Upgrade 149, 165
 - Wall Mount 170
 - Allow Subscription 222
 - Anonymous Login 229
 - Antenna 18
 - Auth. Code 224
 - Authentication Code 199, 222
 - Auto-Create Extension 46, 188
 - Auto-Create User 46, 188
 - Avaya In-Building Wireless Server 9, 26
- B**
 - Base Station 9, 12
 - Access the Configuration 54, 75, 193, 212
 - Browse 54, 75, 193, 212
 - IP Address 55, 76, 196, 215
 - Mounting 80, 114, 219
 - Reset 207, 217
 - Reset Switch 17, 174
 - Restart 17, 174
 - Status Lamps 15, 175
 - Time Source 198
 - Battery 21
 - AIWS 157
 - RTC 157
 - Bear 36
 - Bluetooth 21
 - Bracket 12
 - Browse
 - AIWS 158
 - Base Stations 54, 75, 193, 212
 - BS330 12
 - BS340 12, 18
 - Building Layout 36
- C**
 - C7 S10 36
 - Call list 21
 - CAP 21
 - Chargers
 - Advanced Charger 9, 25
 - Basic Charger 9, 25
 - Battery Charger 9, 25
 - Rack Charger 9, 25
 - Class 2 12
 - Column Mounting 80, 114, 219
 - Compact Base Station 9, 12
 - Cover
 - Remove 156
 - Replacing 171
 - Coverage 33
 - Coverage pattern 12
 - Create User Entries 224
 - CS IP Address 202
 - CS Port 202
- D**
 - Date and Time 143, 159
 - DECT 9
 - DECT Info 36
 - DECT phones 21
 - DECT R4.zip 42, 184
 - Default Language 199
 - default the base station 53, 74, 192, 211
 - Defintion Files
 - Upload 93, 126
 - Device Manager 125, 139
 - AIWS 124
 - WinPDM 124
 - Device Overview 218
 - Directional Dual Aerial 18
 - Directional Single Antenna 18
 - Directory Integration 9, 206
 - Disable Subscription 230
 - Display Name 224
- E**
 - Edit Templates 132
 - Enable Supplementary Services 201
 - Error rate 36
 - External aerials 12
- F**
 - Factory reset 17, 174
 - Fire Doors 33
 - Firmware 42, 58, 77, 184, 194, 213
 - Upgrade Base Station 58, 77, 194, 213
 - Fix Message Center No 201
 - Frequency 199
- G**
 - GAP 21
 - Gateway 46, 188
- H**
 - Handover 34
 - Hands free 21
 - Handset configuration 26
 - Host Name 143, 159
- I**
 - Idle-Reset 207, 217
 - IEEE 802.3af 12
 - Installation
 - AIWS 154
 - Internal aerials 12
 - IP Address 53, 74, 192, 211
 - AIWS 143, 159
 - Base Station IP Address 55, 76, 196, 215
 - IP DECT Base Station 9
 - IP DECT Line 46, 188
 - IP LAN 9

IP Office
 Directory Integration 206
 IP Office Release 9
 IP44 21
 IPBS 9
 IPDI 224
 IPEI 224
L
 LAN sockets 9
 Language 199
 Languages 21
 LED Indication 216
 Local Port 202
 Login 229
 Long Name 224
 Loudspeaker 21
M
 MAC address 53, 74, 192, 211
 Master Base Station 12, 199
 Configuration 190
 Master IP Address 203, 216
 Mounting
 AIWS 170
 Base Station 80, 114, 219
N
 Name
 Display 224
 Long 224
 NTP Time Server 143, 159
 Number 224
 Number of base stations 32
 Number of Calls 12
O
 Omni-Directional 18
 Overlap 32
P
 Parameter Definition Files 93, 126
 PARI 36, 71, 204
 PARK 36, 204
 Password 199
 PBX 201
 PDM 124
 Phone
 Edit template 132
 Login 229
 Software upgrade 89, 135
 Subscription 221
 Template Files 130
 Phone Subscription 227
 Phone Templates
 Upload 128
 Phonebook Properties 143, 159
 Phones 21
 Pillar Mounting 80, 114, 219
 PoE 12
 Portable Device Manager 124
 Power over Ethernet 12
 Protocol 201
Q
 Q2 Error rate 36
 QoS 199
R
 Rack Chargers 33
 Radio coverage 12
 Range 33
 Removing the AIWS Cover 156
 Replacing the AIWS Cover 171
 Reset 207, 217
 Base Station 207, 217
 reset switch 17, 53, 74, 174, 192, 211
 Restart 17, 174
 Roaming 34
 RTC Battery 157
S
 S10 36
 SARI 204
 Screened Rooms 33
 Separated Locations 35, 72, 205
 Setup Wizard 143, 159
 Simultaneous calls 12
 Site Survey 32
 Site Survey Mode 36
 Slave Mode 216
 SMS 9, 21
 SMS messaging 26
 Software 42, 184
 Upgrade Base Station 58, 77, 194, 213
 Software upgrades 26
 Speech Time 21
 ss 36
 Stair Wells 33
 Standby Time 21
 Starting
 AIWS Device Manager 125
 Windows Device Manager 139
 Status Lamp
 AIWS 30, 171, 179
 Status Lamps
 Base Station 15, 175
 Subnet Mask 143, 159
 Subscription
 Allow 222
 Disable 230
 Login 229
 Phone 227
 Phone Subscription 221
 Subscriptions 199
 Supplementary Services 201
 Supported firmware 42, 184
 Switching Off
 AIWS 170
 Sync Mode 216
 synchronized 35, 72, 205
 System Name 199
T
 Technical Bulletin 149, 165
 Technical Bulletins 42, 184
 Technical Tips 42, 184
 Template 130
 Edit 132
 TFTP 143, 159
 Time
 Base Station Time Source 198
 Speech 21
 Standby 21
 Time Server IP Address 143, 159
 ToS 199
U
 Unpack the software 42, 184

Upgrade

- AIWS Firmware 149, 165
- Base Station Firmware 58, 77, 194, 213
- Phone Software 89, 135

upgraded 58, 77, 194, 213

Upload

- Parameter Definition Files 93, 126
- Phone templates 128

USB 9, 25

V

Vibrator 21

VLAN 56, 197

VoIP 46, 188

W**Wall Mount**

- AIWS 170

Wall Mounting 80, 114, 219

Windows Device Manager 139

Windows Portable Device Manager 124

WinPDM 124

Wireless

- Handset configuration 26
- Software Upgrade 26

With System AC 199, 222

With User AC 222

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

© 2015 Avaya Inc. All rights reserved.